

Zultys Advanced Communicator (ZAC)

8.4 User Manual

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Zultys, Inc. Under the law, “reproducing” includes translating the document’s content into another language or format.

Information in this document is subject to change without notice. Every effort has been made to ensure that the information in this document is accurate. Zultys, Inc. is not responsible for printing or clerical errors. Any troubleshooting suggestions or suggestions for resolving common issues included in this document are recommendations made by Zultys Technical Support team and are not guaranteed to resolve every issue the reader may encounter.

1 Contents

GETTING STARTED.....	9
1.1 DESCRIPTION	9
1.2 PC REQUIREMENTS	9
1.3 MACINTOSH REQUIREMENTS	9
1.4 OTHER REQUIREMENTS.....	9
1.5 WHAT'S NEW IN ZAC 8.4.....	10
1.6 INSTALLATION	10
1.6.1 PC	10
1.6.2 MSI INSTALLATION.....	12
1.6.3 MACINTOSH.....	13
2 OPERATION	14
2.1 LOGIN SCREEN	14
2.1.1 LOGGING IN CALL GROUPS	15
2.2 MAIN SCREEN	16
2.2.1 PRESENCE INDICATOR/SELECTOR	17
2.2.2 LOCATIONS.....	18
2.2.3 USER INFORMATION/IMAGE	19
2.2.4 BIND AREA	21
2.3 OPTION MENU	21
2.3.1 ABOUT	22
2.3.2 SETTINGS MENU - APPLICATION.....	22
•• General.....	22
•• Login Settings.....	23
•• Integration.....	24
•• Audio and Video devices.....	25
•• Call and Message History.....	25
•• Automatic Presence Change.....	25
2.3.3 SETTINGS MENU - ALERTS:.....	27
•• Sound Alerts.....	27
•• Popup Alerts.....	27
•• Presence Change Alert:	28
2.3.4 SETTINGS MENU - CALL HANDLING:.....	30
2.3.5 SETTINGS MENU - VOICEMAIL NOTIFICATIONS:	32
2.3.6 SETTINGS MENU - SOFTPHONE:	34
2.3.7 PLANTRONICS HEADSET SUPPORT.....	35
2.4 BUDDIES SCREEN	36

- Files and Links 38
- Recent Calls 39
- 2.4.1 BUDDY GROUPS 40
- Create a new group: 40
- To add buddies/contacts to a group: 40
- 2.4.2 PRESENCE CHANGE ALERT: 41
- 2.4.3 MY CONTACTS 44
- Adding contacts 44
- Importing contacts 45
- 2.5 RECENT ACTIVITIES SCREEN 46**
- 2.5.1 CALL LOG 48
- 2.6 DIAL SCREEN 50**
- Incoming calls: 50
- Retrieving a call that went to voicemail 51
- Outgoing calls 51
- Call transfer 55
- 2.6.1 DRAG AND DROP OPERATIONS 56
- Call transfer 56
- 2.6.2 ATTENDED TRANSFER 56
- 2.6.3 TRANSFER TO VOICEMAIL 57
- 2.6.4 AD HOC CONFERENCE 58
- 2.6.5 WHISPER/MONITOR/BARGE 59
- 2.6.6 ON DEMAND CALL RECORDING 60
- 2.6.7 PAUSE/RESUME AUTOMATIC CALL RECORDING 62
- 2.7 VOICEMAIL SCREEN 64**
- 2.7.1 VOICEMAIL TRANSCRIPTION 67
- 2.7.2 VOICEMAIL GREETINGS 68
- 2.8 CONTACTS SCREEN 70**
- 2.8.1 ADDING LOCAL CONTACTS 71
- 2.8.2 DELETING LOCAL CONTACTS 72
- 2.8.3 IMPORTING CONTACTS 74
- 2.8.4 MACINTOSH CONTACTS 75
- 2.9 PARKED CALLS SCREEN 76**
- 3 TEAM MESSAGING - CHAT GROUPS 78**
- 3.1.1 TO CREATE A NEW GROUP: 78
- 3.1.2 TO EDIT A GROUP: 79
- 3.1.3 TO VIEW/CONVERSE THE GROUP CHAT: 81
- 3.1.4 TO CREATE AN MXCONFERENCE WHEN IN A GROUP CHAT: 83
- 3.1.5 INVITE EXTERNAL GUEST USERS TO CHAT SESSION 83
- 3.1.6 EXTERNAL GUEST OPERATION 85
- Main guest screen 86
- Guest viewing a screen share 88

- Joining a conference call 89
- Guest viewing video 91
- Guest receiving file share..... 91
- Guest sending a file 92
- Minimizing participant screen 93
- 3.1.7 SCREEN SHARING 94
- 3.1.8 CHAT SESSION 94
- 3.1.9 SPELL CHECK..... 95
- 3.1.10 CALL SESSION 96

- 4 FILE TRANSFER..... 99**
- 4.1.1 SCREENSHOT..... 100
- 4.1.2 RECENT IMAGES/FILES 101
- 4.1.3 FILE/LINK STORAGE DISPLAY 103

- 5 FAX..... 104**
- 5.1.1 VIEW: 104
- 5.1.2 DELETE..... 104
- 5.1.3 SEND 105
- 5.1.4 FAX RECEIPT 107
- 5.1.5 PRINT TO FAX (WINDOWS ONLY) 108
- 5.1.6 SENDING A FAX FROM THE FAX DRIVER: 112

- 6 CONFERENCE..... 114**
- 6.1.1 CREATE AN AUDIO CONFERENCE: 114
- 6.1.2 CREATING A CONFERENCE WITH MXMEETING COLLABORATION 117
- 6.1.3 CREATING A CONFERENCE WITH MX GUEST USER COLLABORATION..... 119
- Generating and Adding guest link to conference invitation..... 119
- 6.1.4 STARTING AND CONFERENCE OPTIONS 122
- 6.1.5 HOST OPTIONS 123
- 6.1.6 WEB CONFERENCE..... 124
- 6.1.7 CONFERENCE DESCRIPTION 124

- 7 NOTIFICATIONS..... 126**
- 7.1 SYSTEM TRAY AND TASKBAR OPTIONS: 128**

- 8 GUEST USERS 130**
- 8.1 GUEST USERS (INVITE EXTERNAL PARTY) 130**
- 8.1.1 GUEST CALLING HOST 132
- 8.1.2 HOST CALLING GUEST 133
- 8.1.3 GUEST RECEIVING FILE FROM MX USER 135
- 8.1.4 GUEST SENDING A FILE TO THE MX USER..... 135

8.1.5	GUEST VIDEO	137
8.1.6	MX USER SCREEN SHARE WITH GUEST.....	138
9	<u>FULL SCREEN MODE.....</u>	140
10	<u>AGENT ROLES/CALL GROUP OPERATION.....</u>	142
10.1	PRESENCE FOR OPERATORS	142
10.2	PRESENCE FOR ACD AGENTS	142
10.2.1	AGENT ROLES	145
••	Incoming group call notification:	146
••	Call group session.....	146
••	Transfer call	146
••	Record a call	147
••	Hold	147
••	Retrieve	149
••	Park.....	149
••	Conference.....	150
••	Placing outbound in group role.....	150
••	Call log	151
10.2.2	ZAC 8 QUEUE MONITOR	152
10.2.3	SUPERVISOR FUNCTIONS	153
11	<u>SMS 2.0 SERVICE.....</u>	155
11.1	DESCRIPTION	155
11.1.1	REQUIREMENTS	155
11.1.2	OVERVIEW PROCESS	155
11.2	OPERATION	156
11.2.1	SENDING SMS MESSAGES	156
11.2.2	RECEIVING SMS MESSAGES	158
11.3	CALL GROUP SMS	159
11.3.1	OPERATION	159
11.4	CONDITIONS.....	162
12	<u>MICROSOFT OFFICE UNIFIED COMMUNICATIONS.....</u>	163
12.1	DESCRIPTION	163
12.2	OPERATION	163
12.3	CONDITIONS.....	166
13	<u>VIDEO CALLING – USER TO USER.....</u>	167
13.1	DESCRIPTION	167
13.1.1	VIDEO CALLING REQUIREMENTS:.....	167
13.2	OPERATION	167

13.3	CAMERA SELECTION	170
13.3.1	DESCRIPTION	170
13.3.2	OPERATION	170
14	<u>VIDEO CALLING – MULTI-PARTY.....</u>	171
14.1.1	STARTING A VIDEO CONFERENCE	171
14.1.2	HOST VIEW:	172
14.1.3	COLLAPSED - EXPANDED MODE	173
14.1.4	SPEAKER – GRID MODE.....	174
14.1.5	CHAT SESSION.....	175
14.1.6	SCREEN SHARE	175
14.1.7	PARTICIPANTS	177
14.1.8	ADD PARTY	177
15	<u>COMMAND LINE PARAMETERS.....</u>	179
15.1	DESCRIPTION	179
15.1.1	STEPS TO COPY AND EDIT SHORTCUT:.....	179
15.1.2	MACINTOSH.....	180
15.1.3	AVAILABLE PARAMETERS:.....	181
16	<u>ZAC 8.2 FEATURES/FUNCTIONALITY</u>	183
16.1	SPEED DIAL	183
16.1.1	DESCRIPTION	183
16.1.2	OPERATION	183
	CONDITIONS.....	184
16.2	CHANGE ANOTHER USER’S PRESENCE.....	185
16.2.1	DESCRIPTION	185
16.2.2	OPERATION	185
	CONDITIONS.....	186
16.3	USER PROFILE SETTINGS	187
16.3.1	DESCRIPTION	187
16.3.2	OPERATION:	187
16.3.3	CONDITIONS	187
16.4	ZAC LOCAL FILE ENCRYPTION.....	189
16.4.1	DESCRIPTION	189
16.4.2	OPERATION	189
16.4.3	CONDITIONS	189
16.5	QUEUE MONITOR SUPERVISOR COMMANDS.....	190
16.5.1	DESCRIPTION	190
16.5.2	OPERATION	190
16.5.3	CONDITIONS	191
16.6	RECENT SCREEN IMPROVEMENTS.....	192

16.6.1	DESCRIPTION	192
16.6.2	OPERATION	192
16.6.3	CONDITIONS	193
16.7	MXIE CONTACT IMPORT	194
16.7.1	DESCRIPTION	194
16.7.2	OPERATION	194
16.8	READ STATUS IMPROVEMENTS OF VOICEMAIL AND CALL RECORDINGS	195
16.8.1	DESCRIPTION	195
16.8.2	OPERATION	195
16.8.3	CONDITIONS	196
16.9	CONFERENCE ACCEPT/REJECT STATUS	197
16.9.1	DESCRIPTION	197
16.9.2	OPERATION	197
16.9.3	CONDITIONS	200
16.10	SEARCH FUNCTIONS	201
16.10.1	DESCRIPTION	201
16.10.2	OPERATION	201
17	ZAC 8.4 FEATURES	202
17.1	FULL SCREEN MODE IMPROVEMENTS	202
17.1.1	DESCRIPTION	202
17.2	OPERATIONAL IMPROVEMENTS	202
17.2.1	GENERAL	202
17.2.2	CONFERENCE:	204
17.3	DRAG AND DROP CALL TO A SPEED DIAL	211
17.3.1	DESCRIPTION	211
17.3.2	OPERATION	211
17.4	START NOW CONFERENCE	212
17.4.1	DESCRIPTION	212
17.4.2	OPERATION	212
17.5	VIDEO WARNING	215
17.5.1	DESCRIPTION	215
17.5.2	OPERATION	215
17.5.3	CONDITIONS	215
17.6	AUDIO AND VIDEO DEVICE SELECTION WHILE ON A CALL	216
17.6.1	DESCRIPTION	216
17.6.2	AUDIO OPERATION	216
17.6.3	VIDEO DEVICE OPERATION	216
17.6.4	CONDITIONS	217
17.7	PRESENCE NOTE FOR AGENT ROLE	218
17.7.1	DESCRIPTION	218
17.7.2	OPERATION	218

Revision History

Date/Revision	Comments
June 2021/Revision P1	Initial release internal pre-EA review
July 2021/Revision P2	Early Access Release
October 2021/Revision 1	GA Release version Softphone signaling/media updated File/link storage display added. Guest user section added. Conference section updated. Various call screenshots updated, command line update to include location.
November 2021/Revision 2	Updated 16.0.4 patch requirements
March 2022/Revision 3	Updated softphone protocol, added new features section associated with 8.0.28 maintenance release
May 2022/Revision 4	Added new features section associated with 8.2 release – Section 16
April 2023/Revision 5	Added new features section associated with 8.4 release – Section 17 ZAC 8.4 Features

Getting Started

1.1 Description

Zultys Advanced Communicator (ZAC) is a Unified Communications client that provides an easy to use interface to access all capabilities of the MX system.

1.2 PC Requirements

- **Version** – Windows 8 (32-bit or 64-bit), Windows 10 (32-bit or 64-bit), Windows 11 (32-bit or 64-bit)
- **RAM** – 256 MB standard
- **Processor** – 1 GHz minimum
- **Hard Drive Space** – 200 MB

1.3 Macintosh Requirements

- **Version** – OS X v10.13 or higher (64-bit only)
- **RAM** – 1GB
- **Processor** – 1GHz Intel Core 2 Duo (64-bit)
- **Hard Drive Space** – 400 MB

1.4 Other Requirements

- MX software version 17.0.10 is recommended for full functionality/compatibility
- Security certificate installed on the MX
- ZAC license for each user
- Ports 443, 7778, 7779 open or mapped if behind firewall (screen sharing/external chat link)

NOTE: If the MX system is running version 16.0.4 Patch 16065 must be installed to utilize ZAC softphone.

1.5 What's new in ZAC 8.4

- Full screen mode improvements
- Preview screen prior to joining a conference
- Audio/video device selection while on a call
- Floating conference window
- Join a conference by conference ID
- Show/Hide side panel
- Agent presence note visible in Agent roles/Contacts
- Drag and drop transfer to Speed Dial


You may jump directly to the new features section here:


[17ZAC 8.4 Features](#)

1.6 Installation


1.6.1 PC

Double click the download ZAC installation file. The installation process will begin.

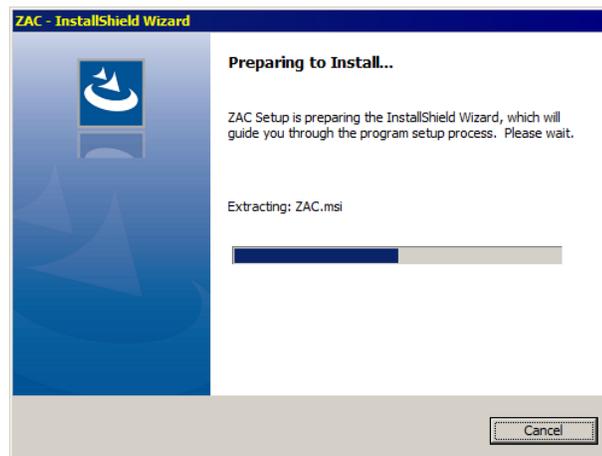


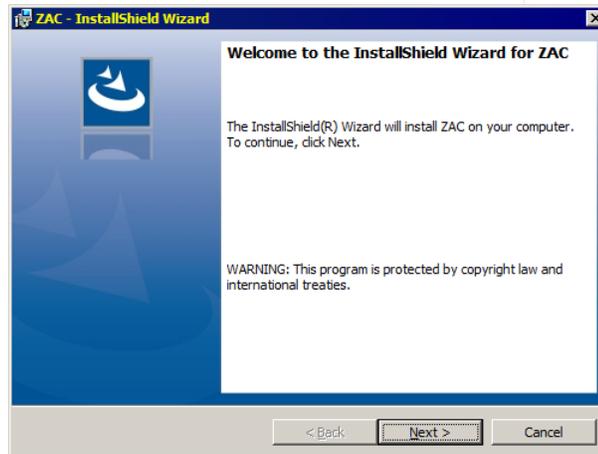


Click the Next button to continue

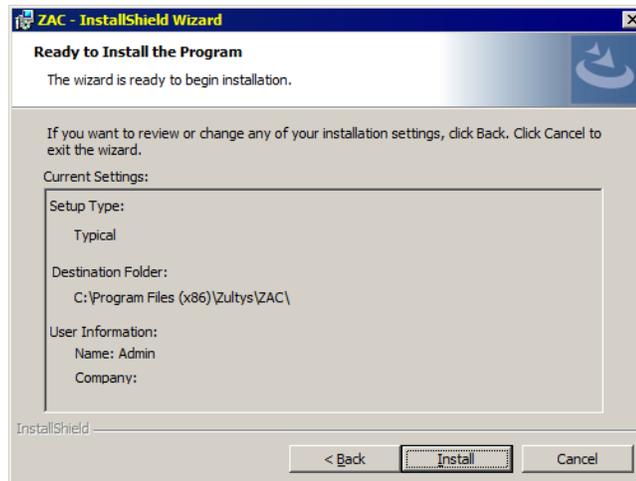

It is recommended to leave the default installation settings.

Click the Install button.

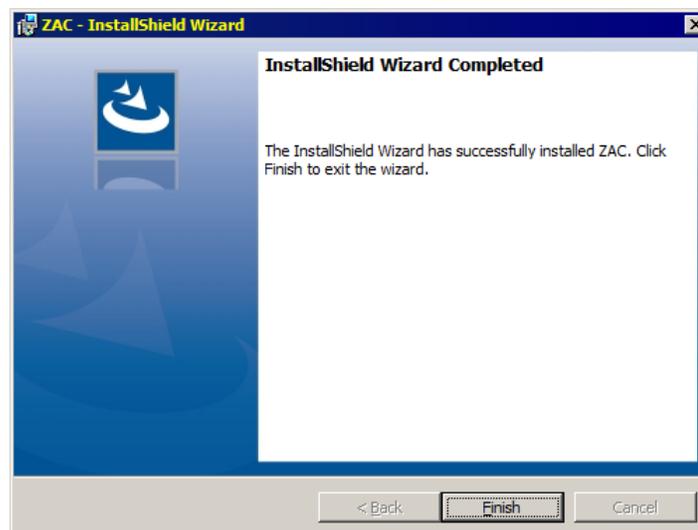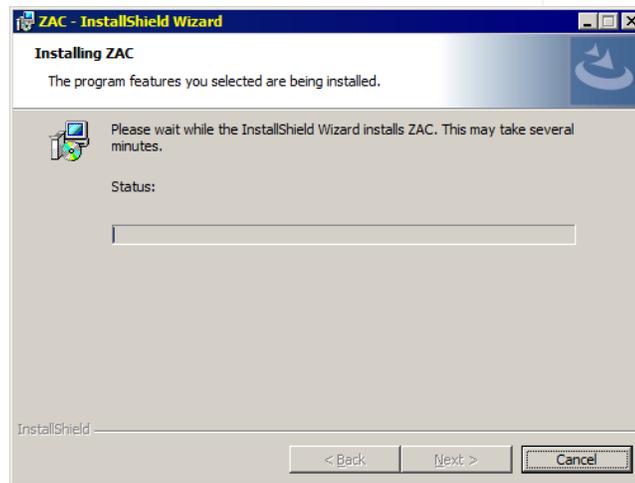

Click the Finish button to complete the installation.

1.6.2 MSI Installation

The ZAC installer contains .MSI logic that will facilitate group policy scripts for installation. This allows the ZAC installer to work silently from the command line parameter. An example of parameters:



```
"C:\Users\xxxxxxxx\Desktop\ZAC_x64-7.2.0.16.exe /S /v/qn "- Install
```

```
"C:\Users\xxxxxxxxxx\Desktop\ZAC_x64-7.2.0.16.exe /S /x /v/qn" –  
Uninstall
```

1.6.3 Macintosh

Open the DMG file after downloading it.

Drag the program icon into the Applications folder

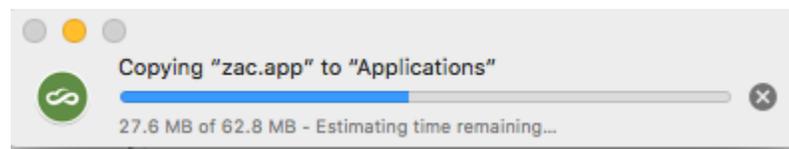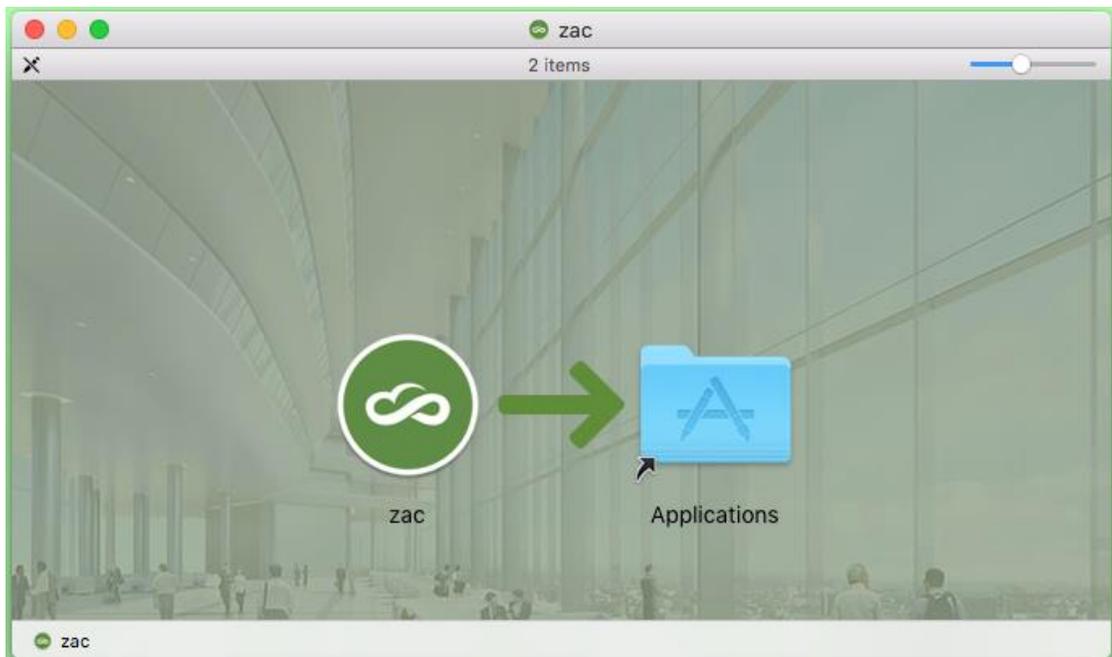


You may then open ZAC from the Applications folder.

Note: This process does NOT create an Alias in the Macintosh Dock at the bottom of the screen. The user will need to do that themselves.


2 Operation

2.1 Login Screen

When you first start the program, the login screen will appear. You will need to enter your login information in order to login to the program.

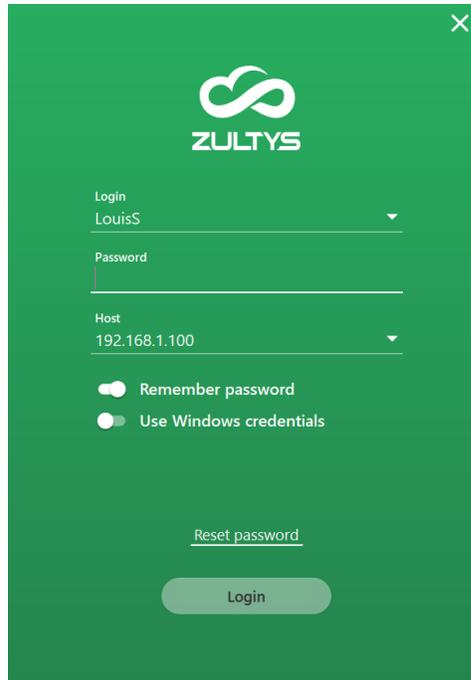

- Enter your user name, password and the MX system address/domain name.
You may also select Remember password to avoid re-typing each time.
- If you wish to utilize LDAP, enable the Use Windows Credentials and enter your Windows login/password information.
Macintosh users can also utilize LDAP credentials for logging in.
- If you cannot remember or want to change your password, click the Reset password link to start the process.
Click Yes to have an e-mail sent to you with password reset instructions.

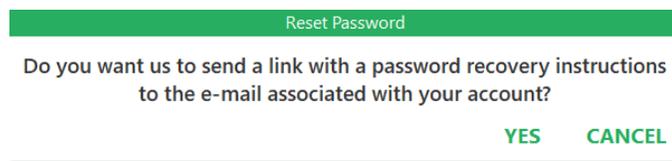


Click Login to proceed

2.1.1 Logging in Call Groups

If you are a member of a call group, you will be prompted to select any group role for which you are a member of.

You may also select the desired location to log into as well.

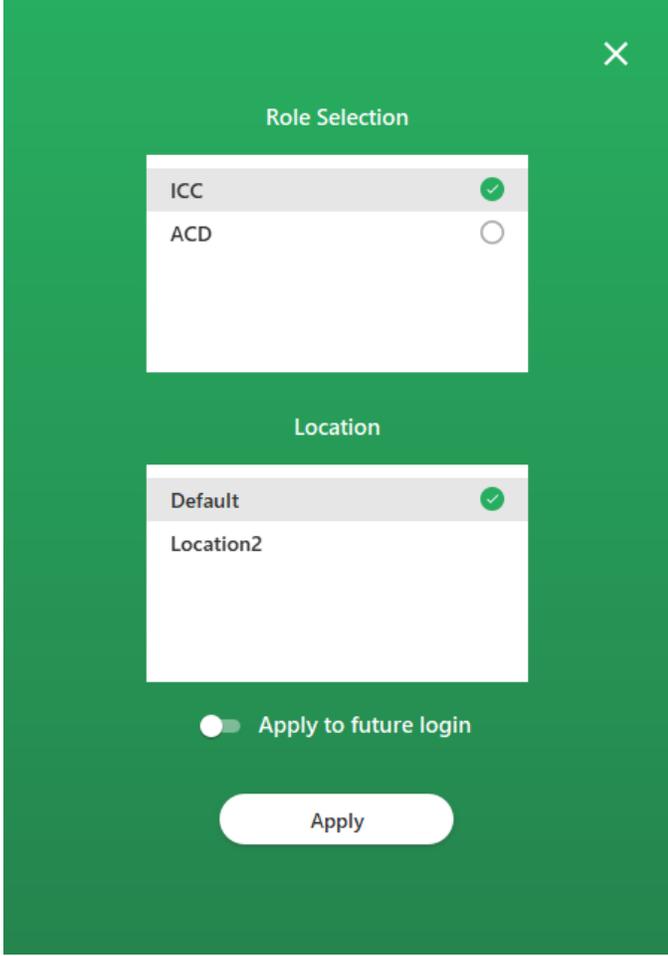

Role Selection

ICC	<input checked="" type="checkbox"/>
ACD	<input type="checkbox"/>

Location

Default	<input checked="" type="checkbox"/>
Location2	<input type="checkbox"/>

Apply to future login

Apply


You may select any or all roles you want to login to.

If you want to always login to specific roles and a specific location, click the Apply to future login checkbox.

Click Apply to login to ZAC.

2.2 Main Screen

Once you have logged in, the main screen will appear. ZAC has two basic screen layout options, compact mode or full screen mode.

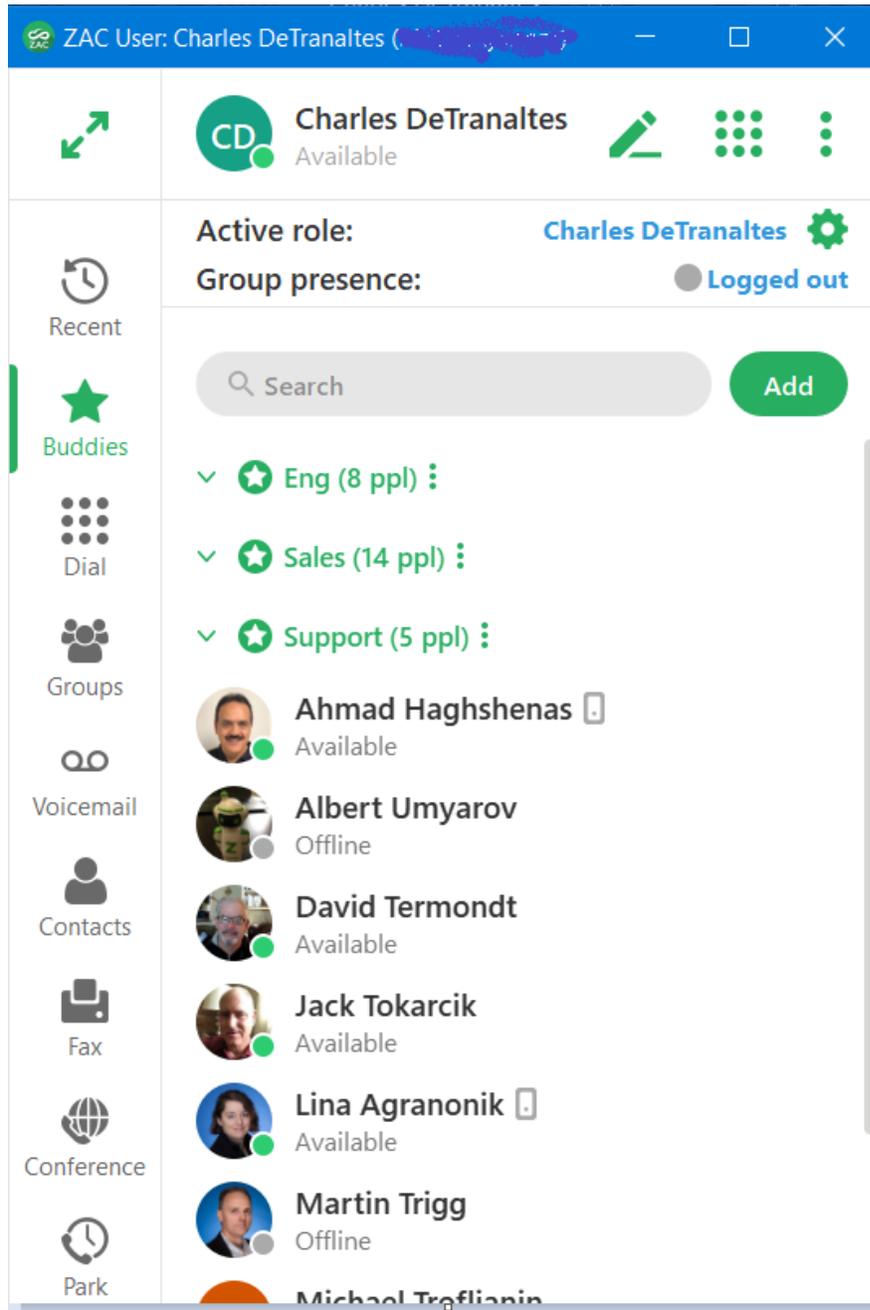


Compact mode


Select the desired presence from the list.

Type a note and press ENTER to save the note. You may click X to clear the note entry and retype.

To delete a note remove the note and press ENTER.

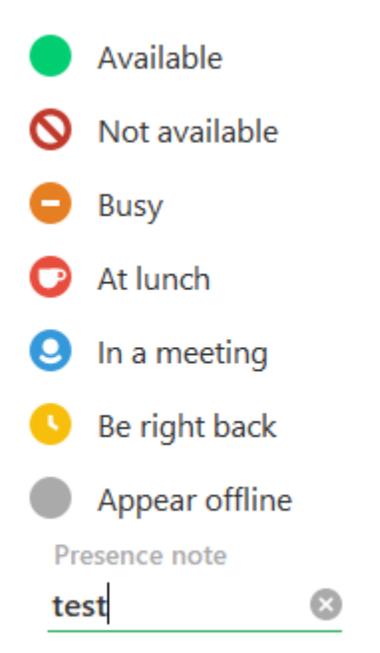


Users who are also logged into Zultys MX Mobile will have their presence as well as a mobile phone indicator displayed.

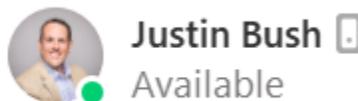

2.2.2 Locations


You may select which location you want to be logged into using the locations icon. Locations are configured on the MX system and determine how your emergency calls will be processed. Please consult with your administrator on which location you should select.

Click the location icon  and select the desired location.

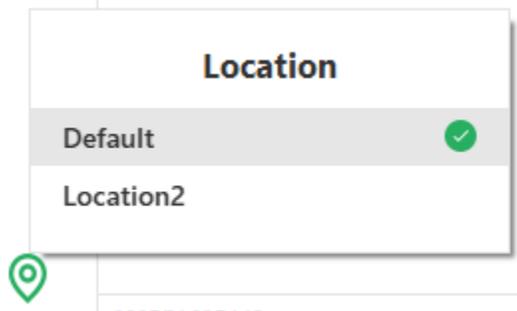


2.2.3 User Information/Image


You may add an image that can be associated to you. You may also add/edit your contact information in this area as well. Click your name in the presence indicator bar. The My Info screen will appear.

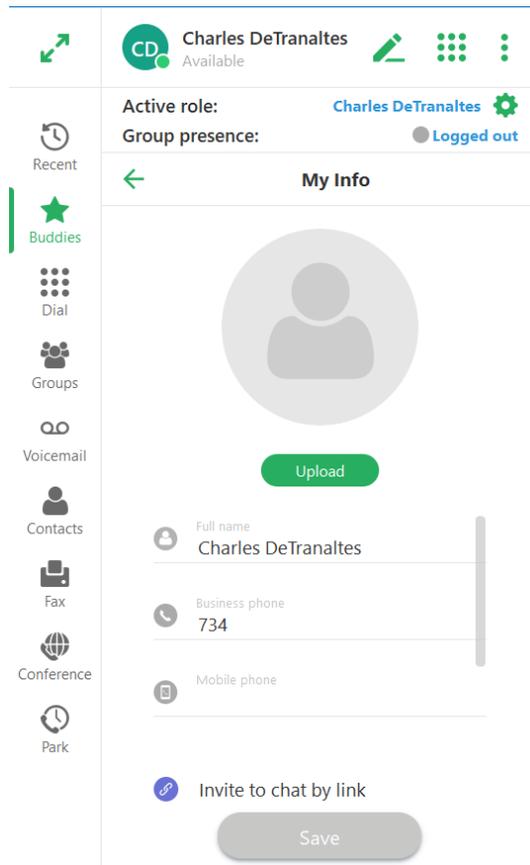

Click the Upload button. The File Explorer window will open. Navigate to the location where your desired image is stored and double click on the image.

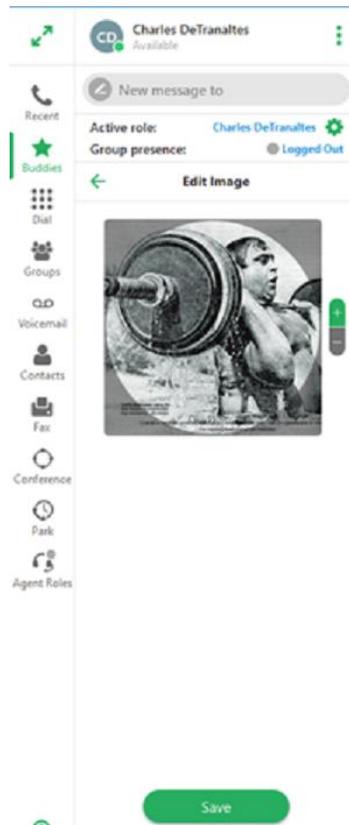

You may size the image using the controls to the right of the image. When you are finished, click Save.
To clear an existing image, click the trash can icon and select clear.

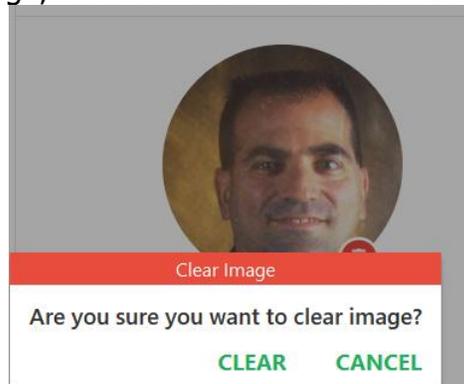


You may edit your contact information:
Full name
Mobile phone
Home phone
e-mail

2.2.4 Bind Area

ZAC can initiate voice calls and handle multiple voice calls through Zultys ZIP phones, generic SIP devices, external numbers or the internal softphone to which it is bound. ZAC instances can be bound to only one device at a time. The Bind window is used to select which device should be bound to ZAC.

To access the Bind window click the Bind to or current device in the lower left corner of ZAC. A drop down menu will appear.

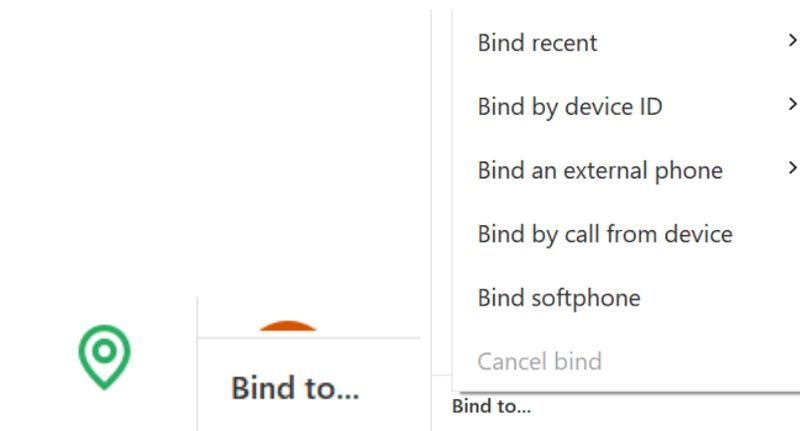


- **Bind Recent:** This option allows you to select from a menu of devices and registered contacts to which your ZAC was recently bound.
- **Bind Device by ID:** This option binds your ZAC instance to an MX managed device. When entering the MAC address, make sure you utilize **upper case** for any letters in the MAC address.
- **Bind to External Phone:** This option allows you to bind to a Cell Phone, Home Phone Line.
- **Bind by call from device:** This option binds your ZAC instance to an MX managed device that you designate by making a voice call.
- **Bind softphone:** This option binds your ZAC instance to the ZAC internal Softphone. You can bind only one instance to the Softphone.
- **Cancel bind:** This option cancels the current binding leaving ZAC with no bound device.

2.3 Option Menu

This menu contains the About screen, Setup screen, Log off function, and the Exit function.

It is accessed by clicking on the  icon in the upper right corner.

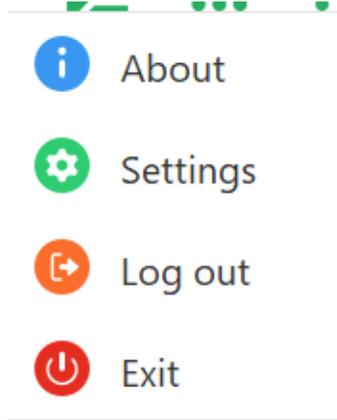

- **About** – Displays the version number of the program
- **Settings** – Provides access to programmable areas that users can customize. See Settings Menu section of this document for more details.
- **Log off** – This will log you out of the program but keep the program open. You must login again to utilize the program.
- **Exit** – This will close the program and log you off of the system.


2.3.1 About

This screen will display the version of the program.



2.3.2 Settings Menu - Application

- **General**

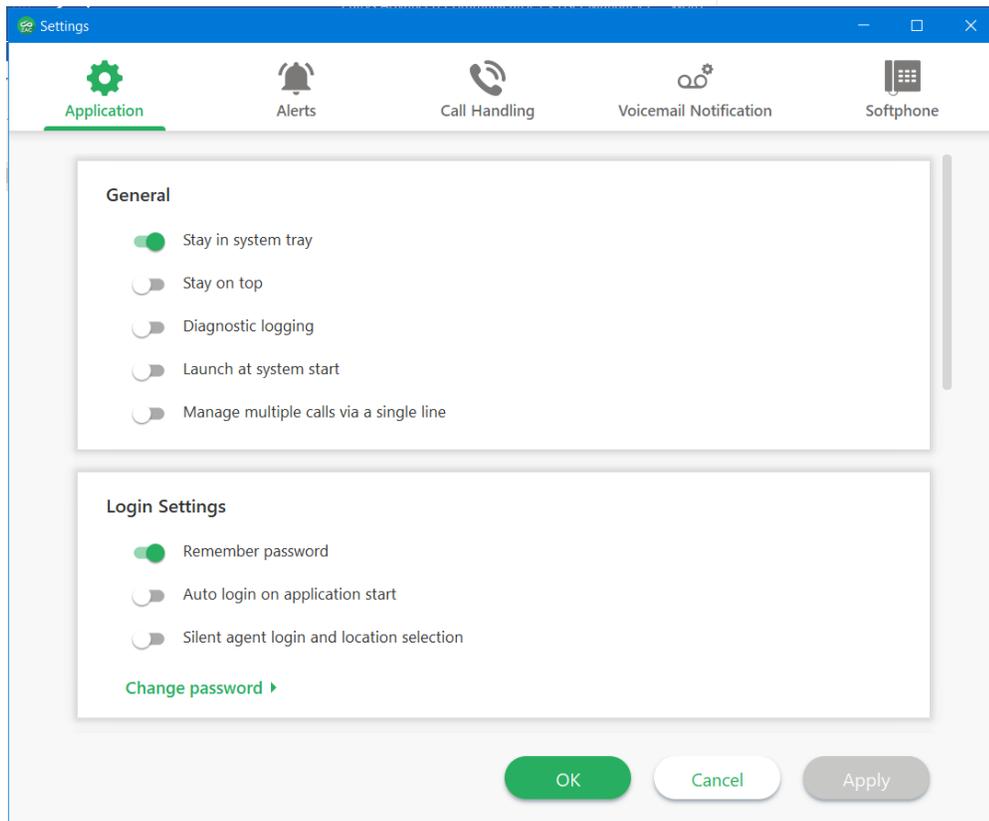

Stay in system tray – This option determines if the program logs the user off and closes if the X in the menu bar is pressed. If the option is enabled, the user/program remains and the program minimizes to the system tray. If the option is disabled, the pressing the X will exit the program.

Stay on Top – This setting allows the program to remain on the screen and in focus.

Diagnostic Logging – This enables the diagnostic log which is used by Zultys Technical support.

Launch at System Start – This setting will start the program anytime the computer starts.

Manage multiple calls via single line – This setting determines how multiple calls are handled. The default setting is to have ZAC manage multiple calls through the ZAC interface. Disabling this setting creates a *Manage via device* and you will not be using ZAC call control features, but will use all the call control features of the device itself.

- **Login Settings**

Remember password –When the "Remember password" is unchecked, "Auto login" option should be unchecked and disabled as auto login is not possible without a stored password.

Auto Login on application start – This will perform an automatic login when the program is started.


Silent Agent login – This setting will log the user in and have their call group roles activated when the program starts. This bypasses the user having to select the role each time at startup.

Change password – This allows you to change your user password. Click the icon. You then need to enter your old, new and then confirm the new password.

- **Integration**

This area allows you to select Outlook Contacts (32/64 bit), Microsoft Unified Communications (see section **12**), as well as the settings for the screen dial feature. If you enable Outlook Contacts, Outlook contacts will display in the Contacts/Imported area.

Note: Outlook contact and Unified Communications are supported on Windows version only

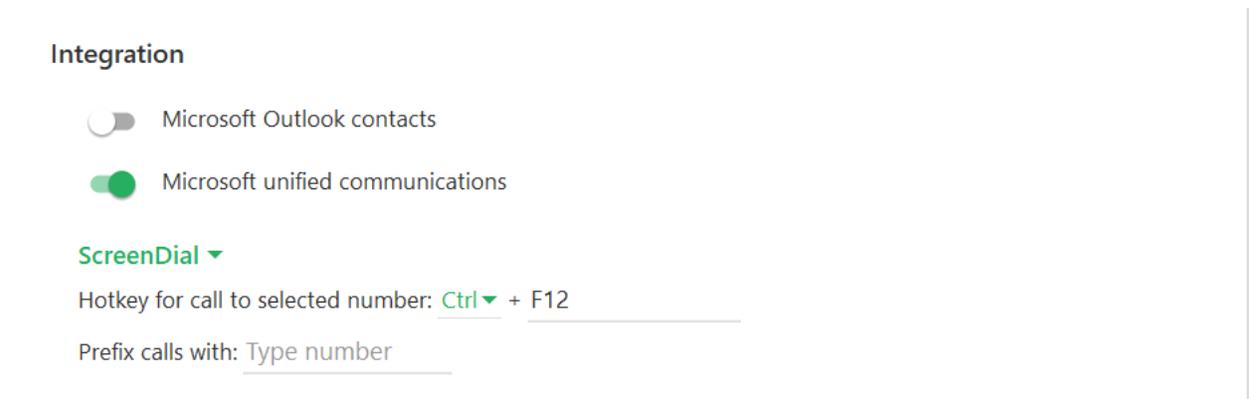

NOTE: ZAC synchronizes the default account Contacts folder (what is shown under My Contacts | Contacts folder in the People tab in Outlook), its' subfolders and from any Public Folders(if present).


If contacts are located in any other local folders different from the default Contacts, those contacts are not integrated into ZAC.

ZAC 8.0: allows synchronization of contacts from non-Exchange profiles (IMAP/POP) as well as synchronization of contacts from any Outlook (Exchange) folder containing contacts.

Screen Dial - You may define the hotkey combination that will be used to activate the ScreenDial feature. In addition, you may add a prefix to use with the screen dial feature. This is the number that will be inserted prior to the highlighted screen dial number to be dialed before making the call. By default, (CTRL+F12 on Windows, Command+F12 on Macintosh) invokes the ScreenDial feature.

- **Audio and Video devices**

This area allows the selection of the audio/video devices on the PC that can be used for program audible notifications of various events. This area is also used to select headset audio devices connected to the PC. The camera selection allows you to specify which video device to utilize for video calling.

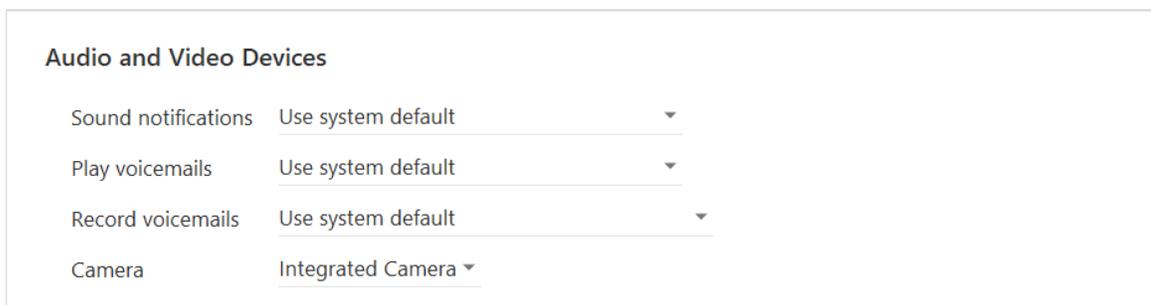


The screenshot shows a settings panel titled "Audio and Video Devices". It contains four rows, each with a label on the left and a dropdown menu on the right:

Setting	Value
Sound notifications	Use system default
Play voicemails	Use system default
Record voicemails	Use system default
Camera	Integrated Camera

- **Call and Message History**

Delete messages older than - You may define the amount of time to store instant messages. Messages older than the specified number of days will be deleted automatically.

Delete call history older than – You may define the amount of time to store your call history data. Data older than the specified number of days will be deleted automatically.

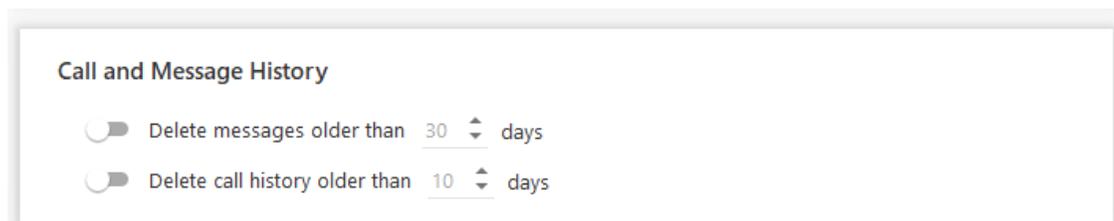

The screenshot shows a settings panel titled "Call and Message History". It contains two rows, each with a toggle switch on the left and a text field with a dropdown arrow on the right:

Setting	Value
Delete messages older than	30 days
Delete call history older than	10 days

- **Automatic Presence Change**


You may define how the application should automatically change presence based on several conditions:

- Change presence if computer is locked
- Change presence from Available to Be right back after a programmable time period of inactivity.
- Change presence from Be right back to Not Available to Be right back after a programmable time period of inactivity.

Automatic Presence Change

- When computer is locked change presence to 'Not available' if currently 'Available' or 'Be right back'
 - After 5 minutes of inactivity change presence to 'Be right back' if currently 'Available'
 - After 5 minutes of inactivity change presence to 'Not available' if currently 'Be right back'
-

2.3.3 Settings Menu - Alerts:

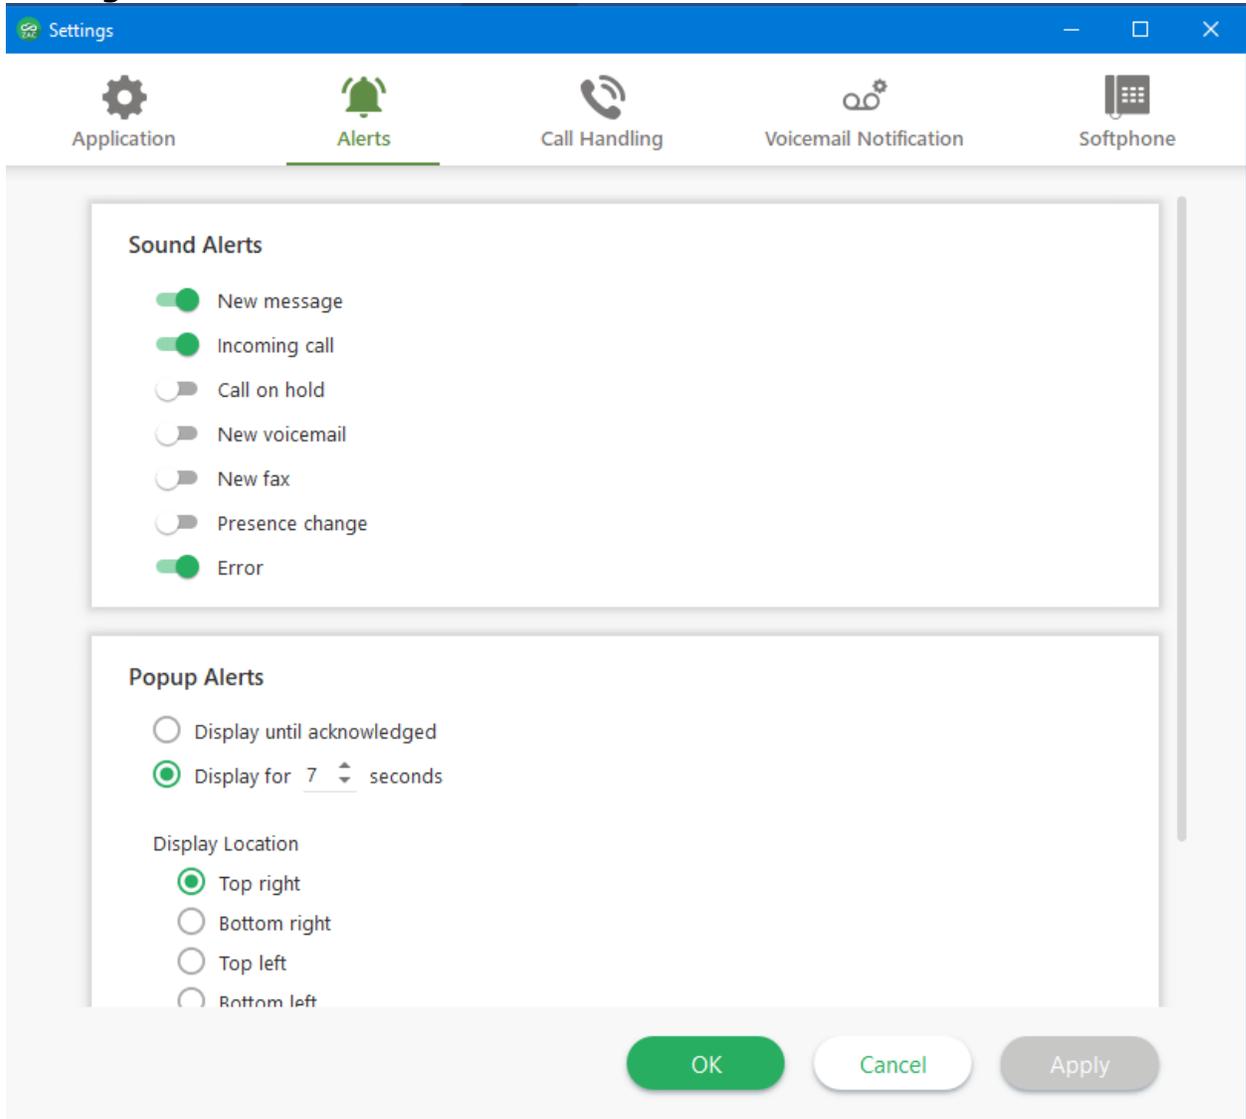


- **Sound Alerts**

Allows you to select which actions have an audible alert associated with them.


- **Popup Alerts**

This allows the selection of actions associated with popup events. The duration and display location of popup alerts can be programmed here.

Please note that incoming call popups will remain until the call is answered, rejected, or the caller hangs up. The duration parameter does not apply to incoming calls.

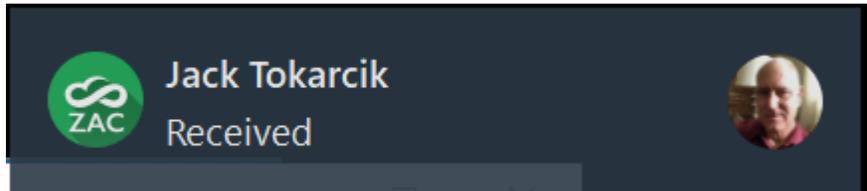


Popup alert for a message

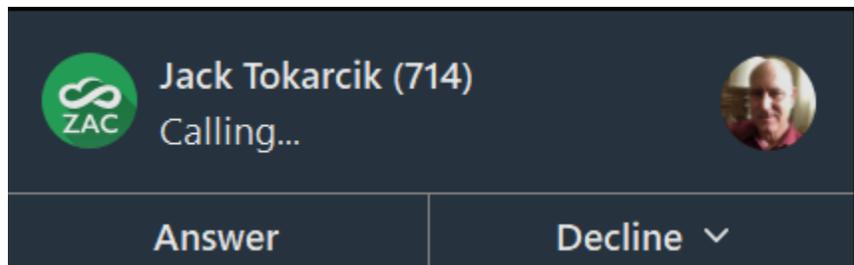


Popup alert for incoming call

Incoming Call Popup Alert - This setting allows you to present the application while the call is ringing or only after the call was answered.

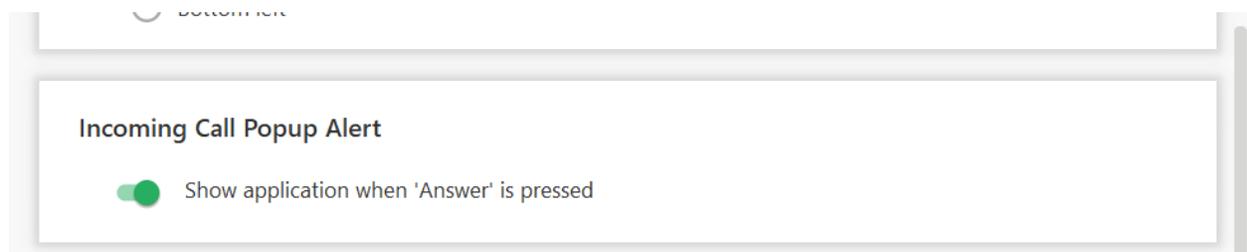


- **Presence Change Alert:**


This area is where all active Presence Change Alerts can be viewed, cleared, and edited. Click See List to view all active change alerts.

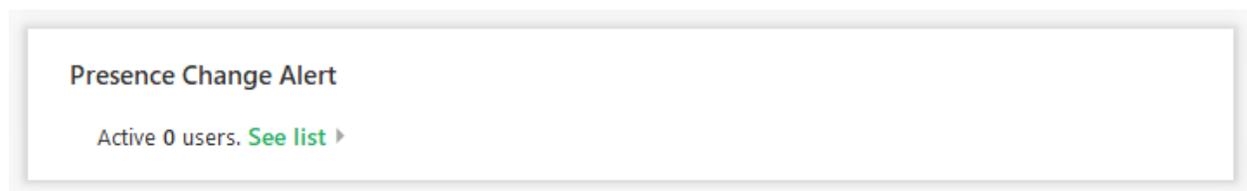

You may edit any or clear all active alerts by clicking the See list text:

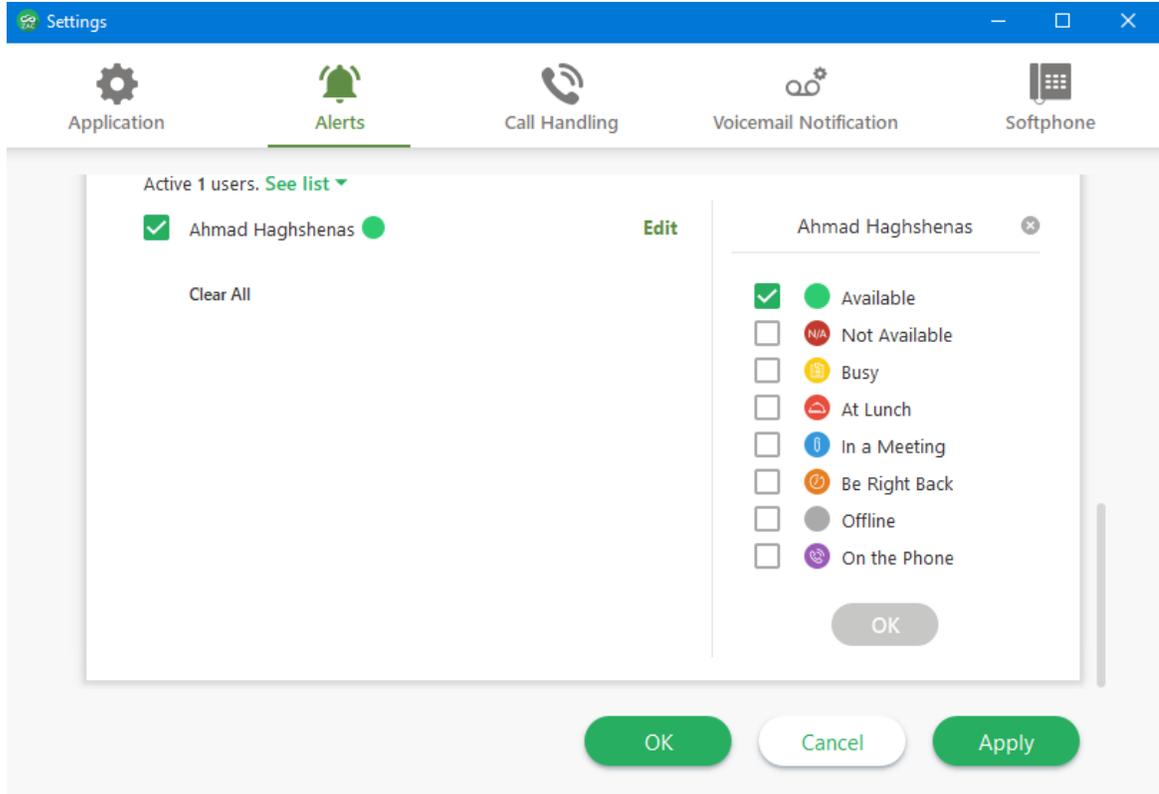

2.3.4 Settings Menu - Call Handling:

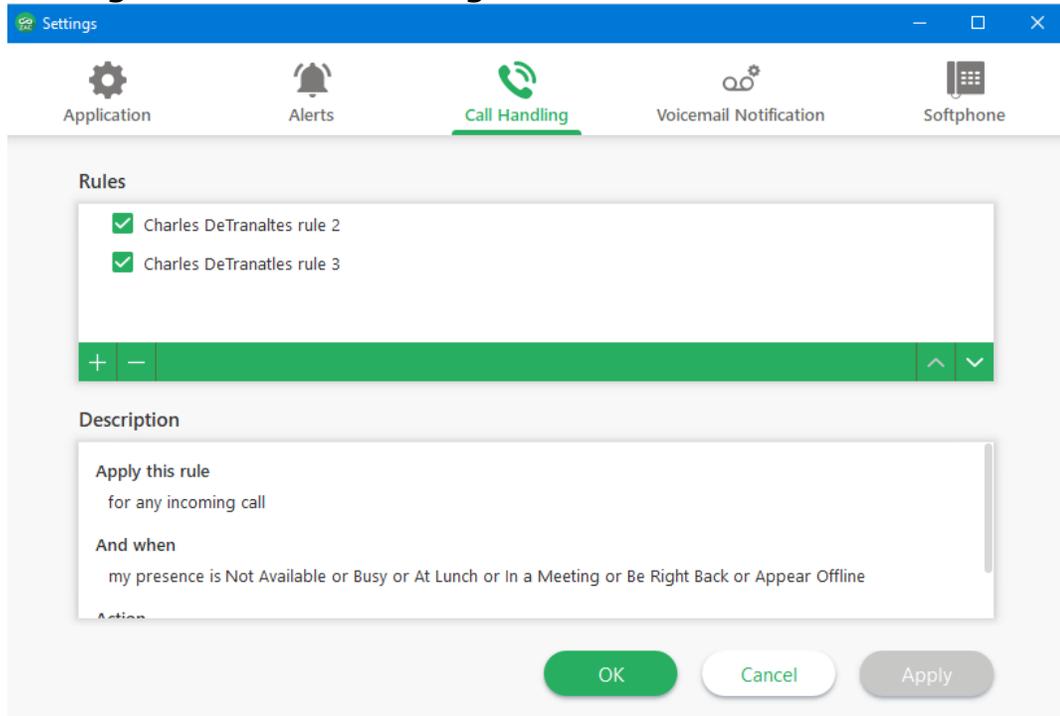

This area allows you to setup individual call handling rules to control how calls are handled under different conditions. Rules can be created, edited, or deleted in this area. Call handling rules manage incoming calls that you do not answer.


To add a new rule, click the  icon at the bottom of the Rules area.

To delete an existing rule, highlight the rule and click the  icon at the bottom of the Rules area.

After creating a new rule or to edit a rule (double click the rule), the call rule editor window will appear.

You may also enable/disable an existing rule by clicking the checkbox next to the rule  .

Adding or editing a call handling rule:

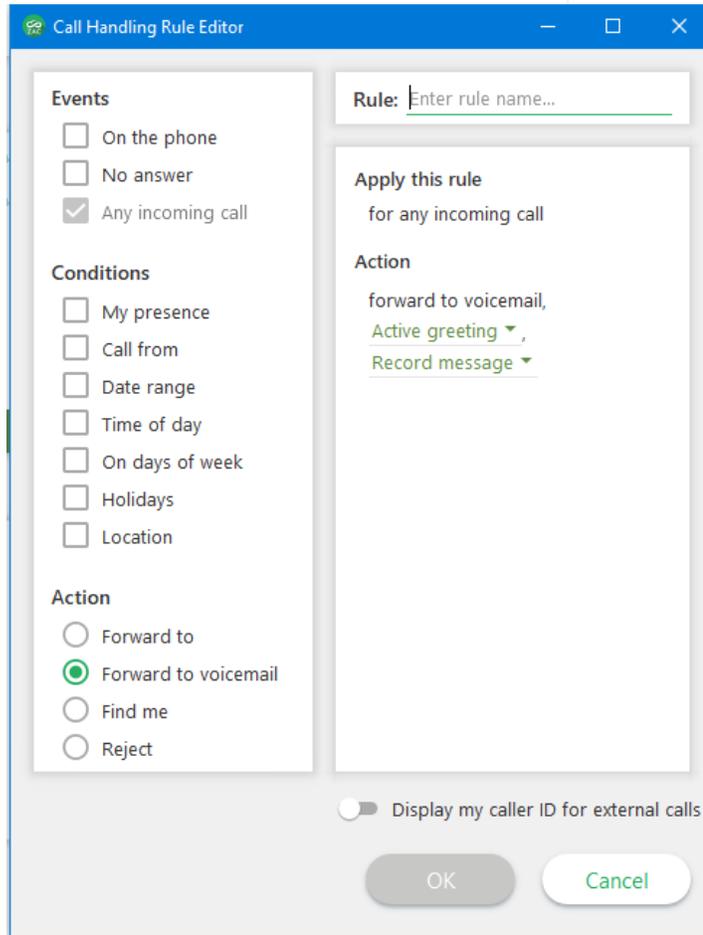


Rule – If you are adding a new rule, enter the rule name that you want associated with the rule.

Events – Allows you to select which events can trigger the rule. On the Phone, No answer, or any incoming call.

Conditions – Allows you to select specific conditions that can be associated with the event. Options include, My presence, Call from, Date range, Time of day, Days of week, Holidays, or Location(MX system) are available.

Action – Allows you to select what action will be performed by the rule based on the selected events and conditions programmed. Forward to, forward to VM, find me, or reject the call area available actions.

2.3.5 Settings Menu - Voicemail Notifications:

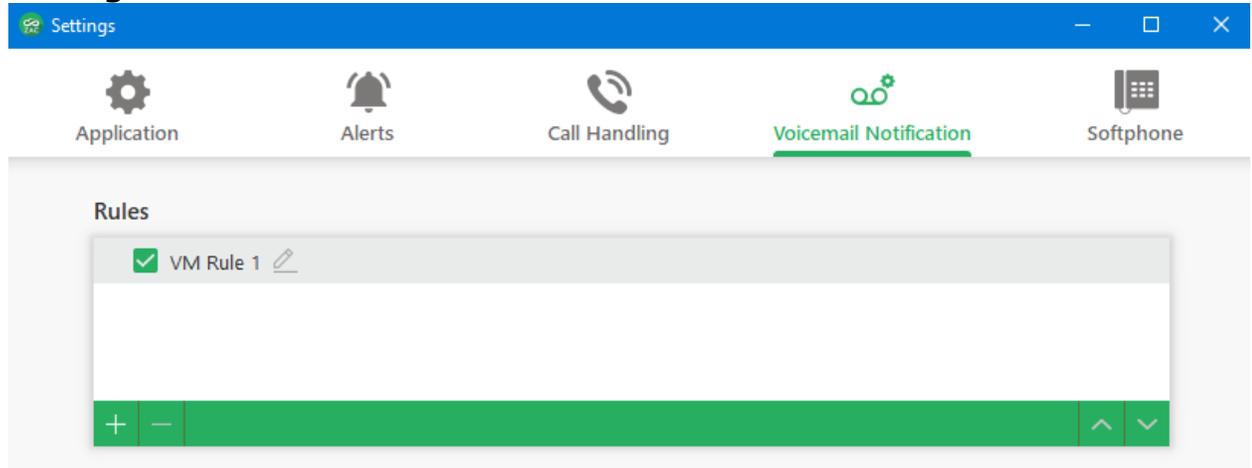

This area allows you to setup individual voice mail notification rules to control how voice mail notifications are handled under different conditions. Rules can be created, edited, or deleted in this area.


To add a new rule, click the  icon at the bottom of the Rules area.

To delete an existing rule, highlight the rule and click the  icon at the bottom of the Rules area.

You may also enable/disable an existing rule by clicking the checkbox next to the rule  .

After creating a new rule or to edit a rule (double click the rule), the notification rule editor window will appear.

Adding/editing a voicemail notification rule:

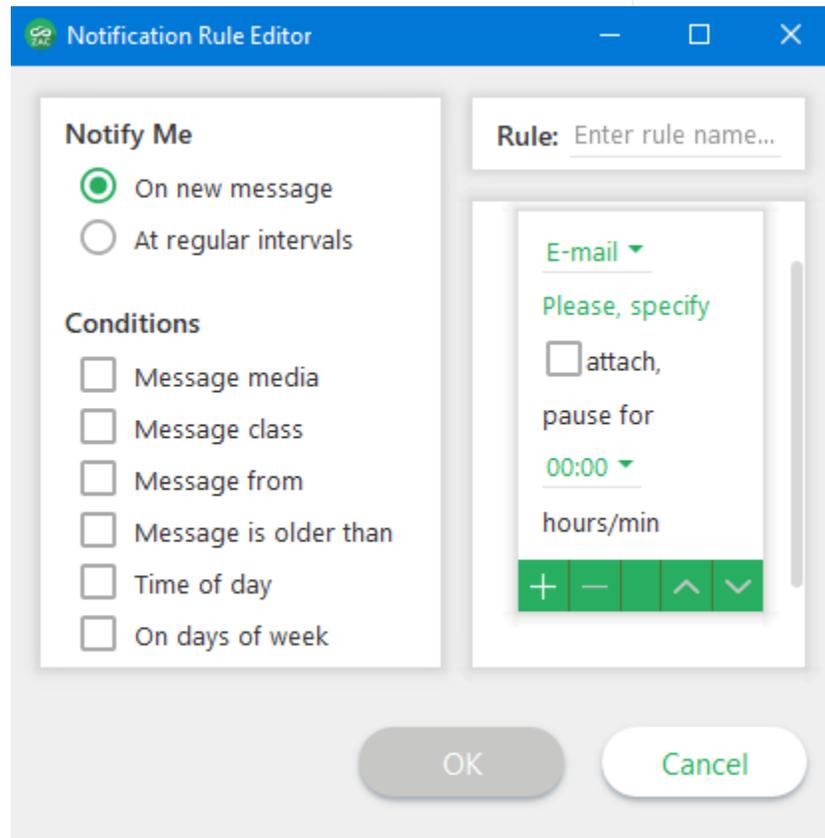

Rule - If adding a new rule, enter the desired name to be associated with the rule.


Notify me – Allows you to select when notification occurs, with each new message or at a specified/regular interval.

Conditions – Allows you to select specific conditions with the notification that will trigger the rule. Media type, class, from, older than, time of day, and days of week are available.

2.3.6 Settings Menu - Softphone:

This area allows you to setup the parameters associated with the internal softphone provided by the program. The softphone allows you to utilize your PC audio to handle calls without requiring a desk phone.

Note: Softphone signaling is through a TLS Secured WebSocket connection. Media signaling is sent over DTLS, an encrypted UDP-based protocol and the media is sent via SRTP. There is no need to configure UDP/TLS as on previous versions.

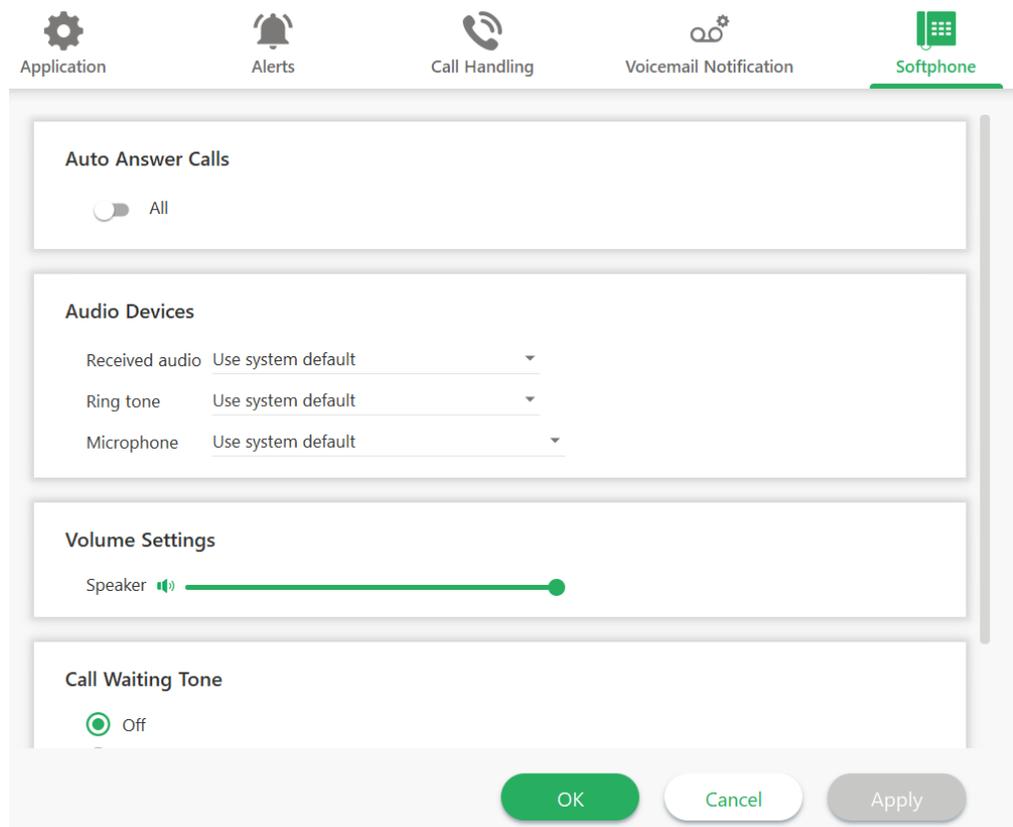


Auto answer calls – Allows you to select if calls are automatically answered when they ring your phone. Call types that can be selected are internal/external or both.

Audio devices – This area allows the selection of the audio devices the softphone uses for receive audio, ringtone, and transmit audio.

Volume Settings – This allows you to set the speaker volume of the audio device the softphone utilizes.

Call Waiting Tone –This setting adjusts the audio level of the call waiting tone when using ZAC softphone. Default setting is Medium.

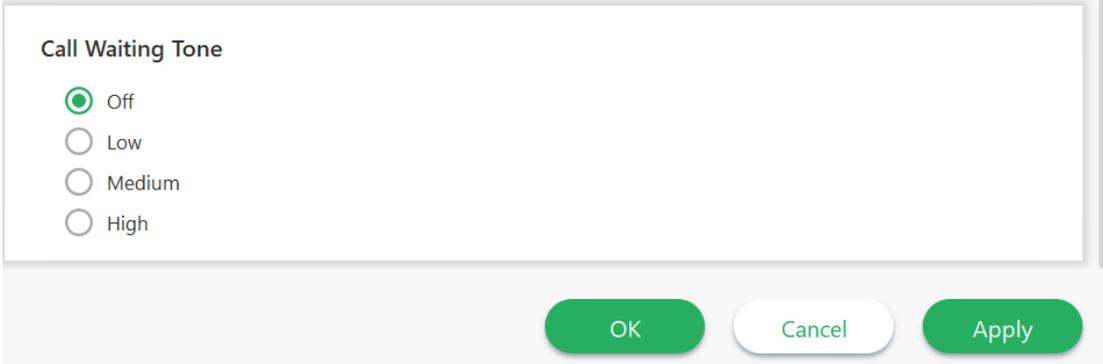

Call Waiting Tone

Off

Low

Medium

High

OK Cancel Apply


2.3.7 Plantronics Headset Support

ZAC 3.2+ includes built in support for the most recent Plantronics SDK - HUB. There is no Plantronics driver software required. This allows ZAC to integrate with the most recent Plantronics headsets including the Bluetooth versions. All versions of Windows that support Plantronics HUB software are compatible with ZAC. On Macintosh OS, versions 10.13+ are supported with ZAC.

This support extends to call control of the Plantronics headset as well. Answering and disconnecting calls can be performed by using the headset answer/disconnect button. Plantronics Savi 710/740 and Voyager Legend Pro have been tested with ZAC. These headsets provide call control via the headset buttons.

2.4 Buddies Screen


This is the screen where the contacts you designate as buddies and buddy groups are located. This provide easy access to users/groups of users you may frequently communicate with.

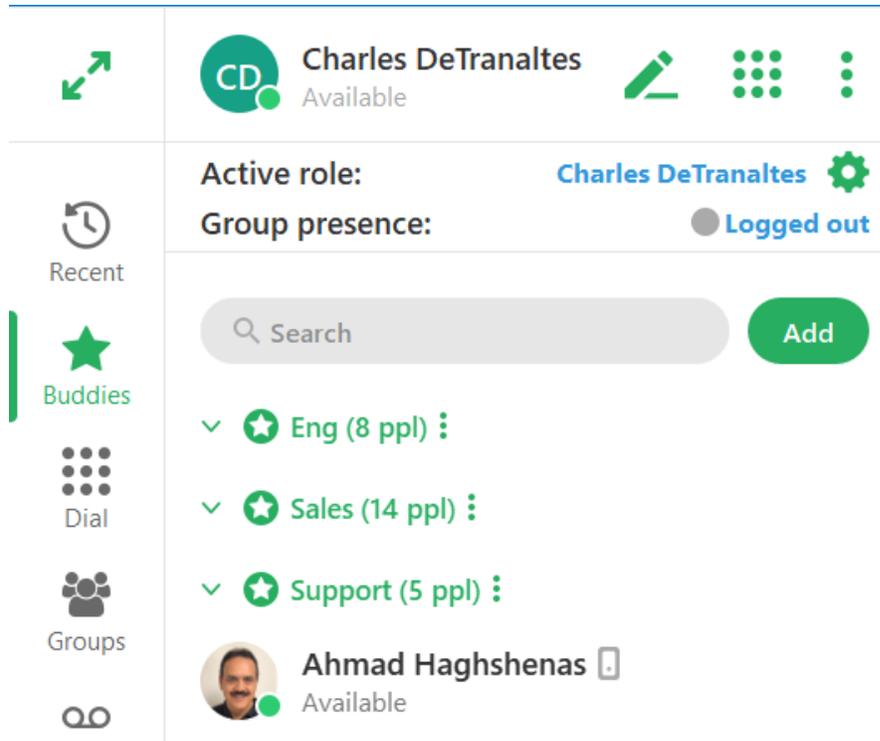


As you mouse over a buddy, the chat and call icons will appear. This allows you to start a chat session or call the user by clicking on the icon:




Clicking on a buddy will display the call and message history for the user.

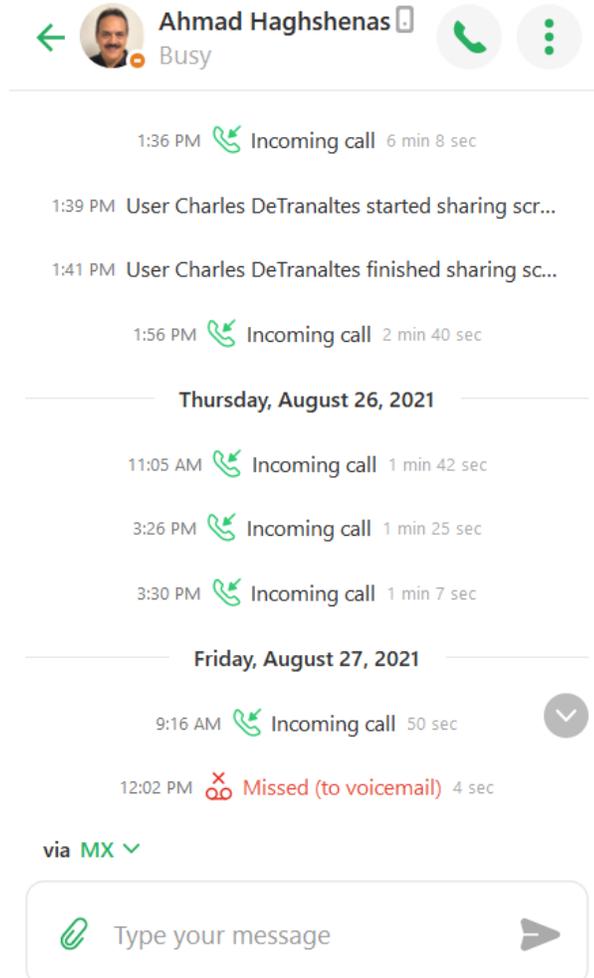

Clicking the Options icon will present a sub menu as:

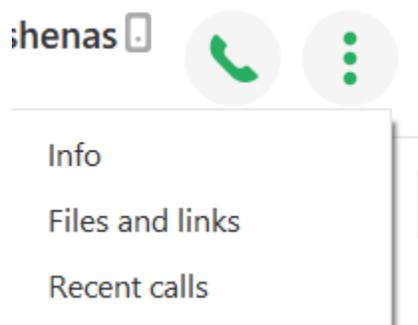


- **Info**

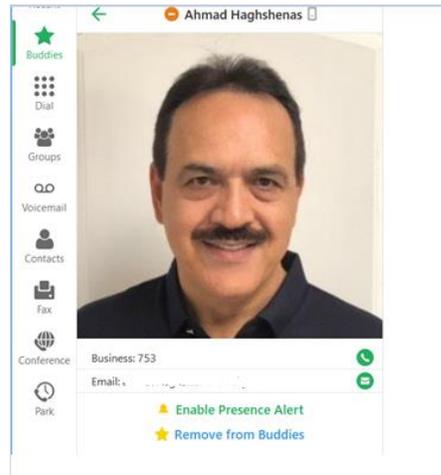


This will display the presence state, extension number, e-mail, enable presence alert action and remove from buddy list action.

- **Files and Links**

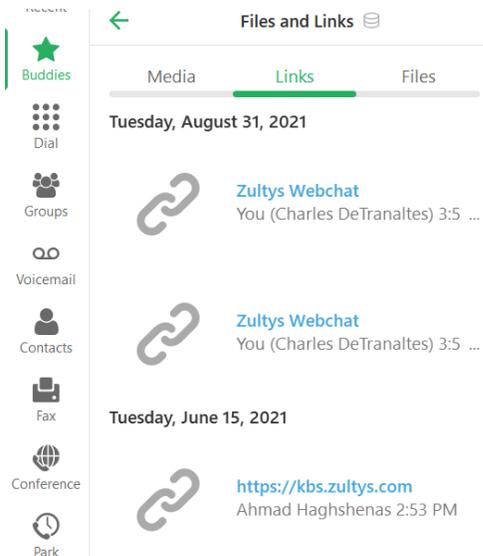


This area will display media, links and files that were shared with the user. You may sort by media type by clicking media, links or files. This will display all the media types exchanged with the user for the history period.

- Recent Calls

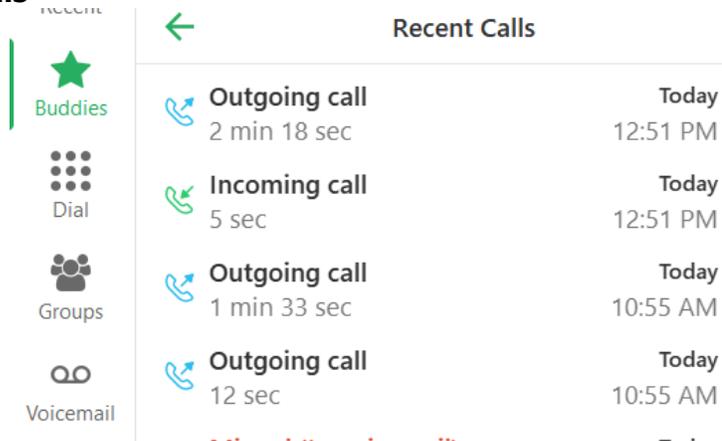

This area will display a history of all recent calls with the user.

Right click on a buddy in the list to display the following options

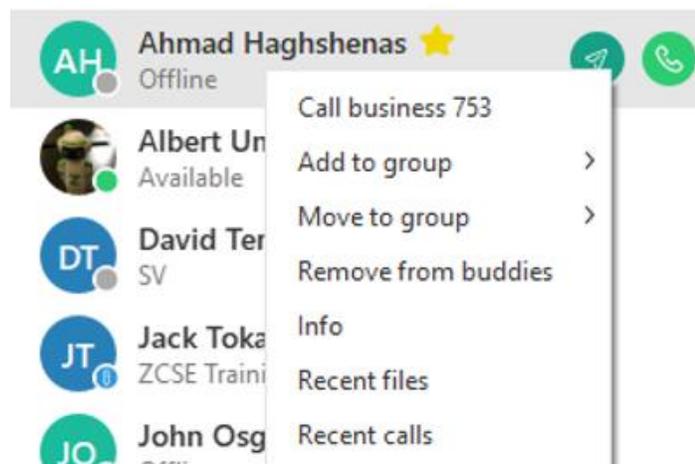

Call – Will place a call the user

Add to group – This action will allow you to add the user to an existing buddy group.

Move to group – This action will allow you to move the user to an existing buddy group.

Remove from buddies – This action will remove the user from you buddy list or buddy group.

Info – This will display the information screen about the user.

Files and links – This will display the file and link activity associated with the user.


Recent calls – Will display a list of recent call activity associated with the user.

2.4.1 Buddy Groups


ZAC allows you to configure your buddies into groups for easy identification. For example, you may group your buddies by department Sales, Engineering, Operations etc.

- **Create a new group:**

Click the Add button in the Buddies screen.

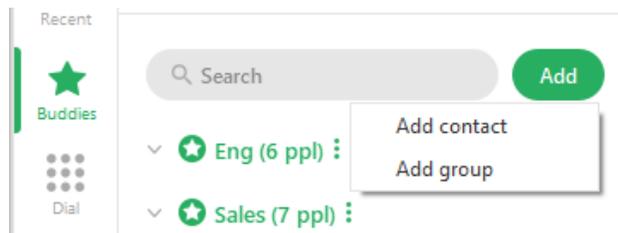

Click the Add group option.

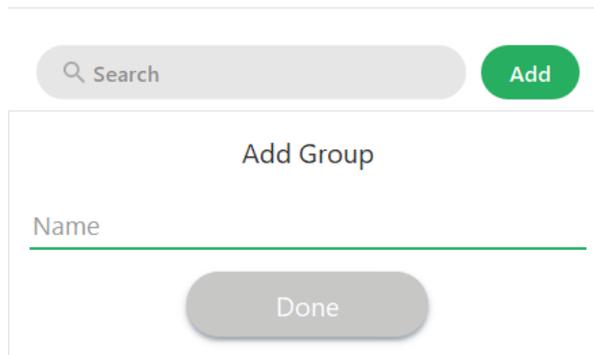


Enter the desired name and click Done. You will see the newly created group appear in your list.

- **To add buddies/contacts to a group:**

You may add existing buddies to a group simply by dragging the buddy into the group.

You may right click on a buddy and use the Add or Move a buddy to a group. Adding to group allows the same buddy to be in multiple groups.

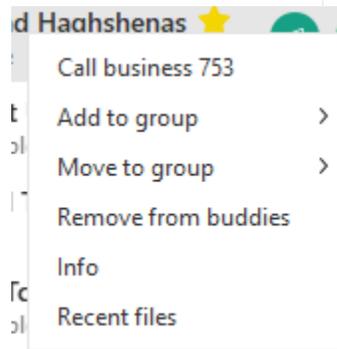


2.4.2 Presence Change Alert:

This allows you to set an alert based on a users' presence change. For example, you may want to know when a user goes from Not available to Available. Two methods are available for the user:


- **Option 1:**

Click on the desired buddy/contact.

Click on their presence status. A dropdown will appear.

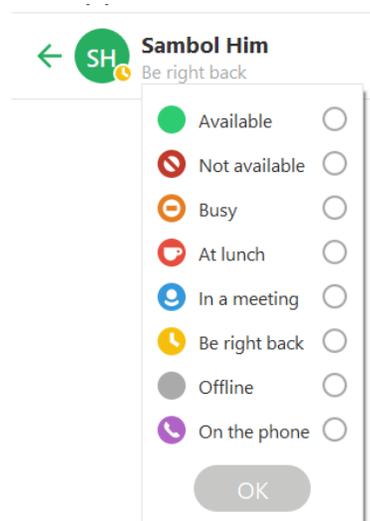

Select the desired presence state and click OK

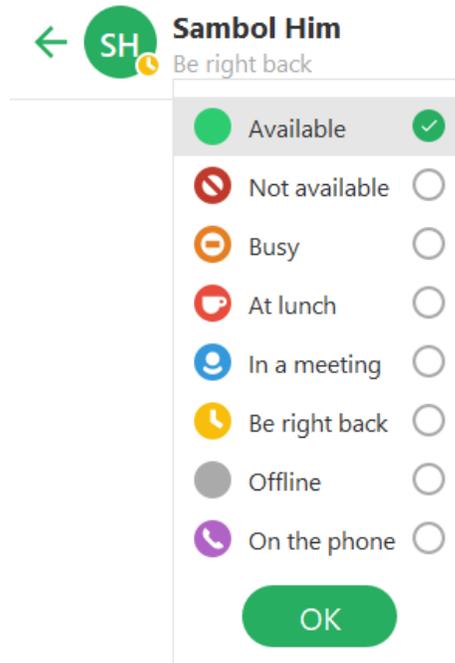


- **Option 2:**


Right click on the desired buddy/contact and click Info. Click the Enable Presence Alert, select the presence state and click OK.



If you are in expanded mode with the contact selected, you may select the info icon:

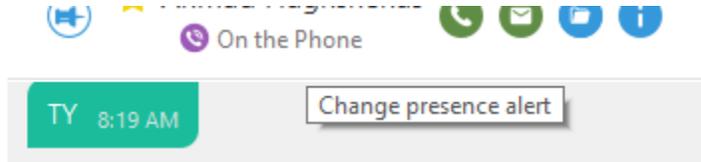



Click Enable Presence Alert or select Change presence alert

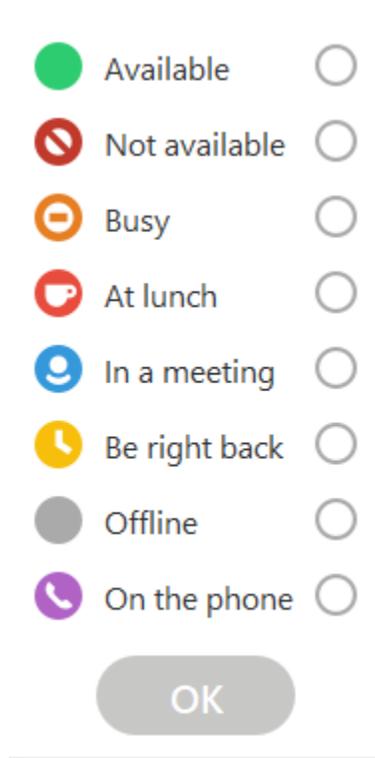

Select the presence and click OK

Once the alert is set using any option, an alert icon will appear on the current presence state of the user (compact/expanded mode shown):

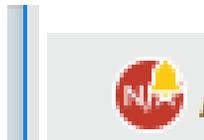

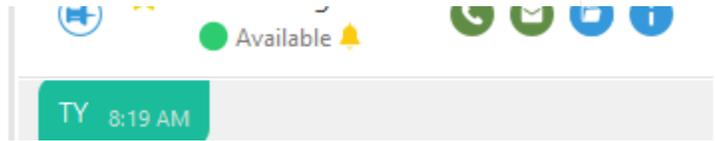


You can edit/delete the alerts by clicking Edit Presence Alert

 Edit Presence Alert

You may select another presence state or uncheck the current one and click OK to cancel the alert request.

Note: You may also navigate to **Settings>Alerts** to manage all your active presence change alerts.

When the selected users' presence changes, an alert notification will appear and a sound will play.

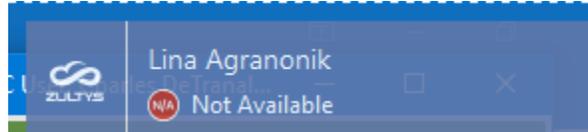


2.4.3 My Contacts

In addition to Buddies, you may view all MX users, create your own local contacts and import contacts from Outlook, Vcard or .csv file types can be imported.


- **Adding contacts**

Click the options button in Contacts>Local screen:

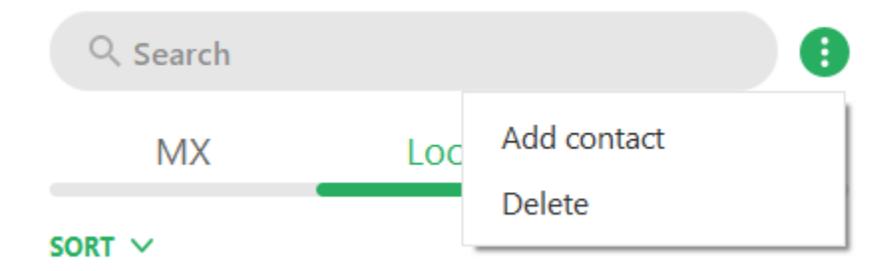

Click Add contact.


Enter the desired contact information:

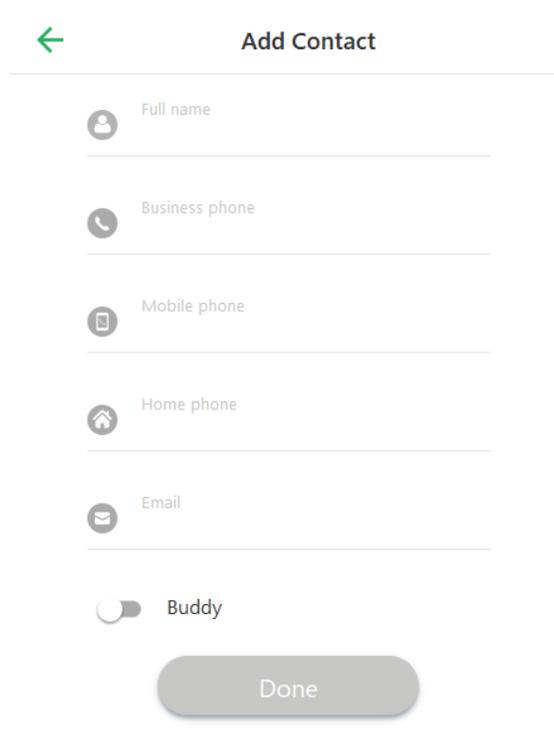


Click Done

- **Importing contacts**

Click the options button in Contacts>Imported screen:

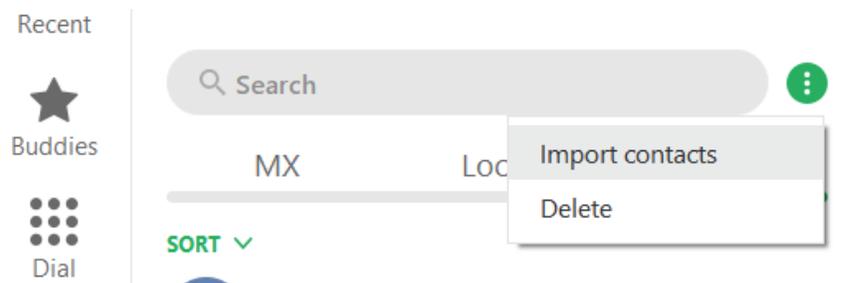


Navigate to the folder/file to import. Select the filename and click Open.

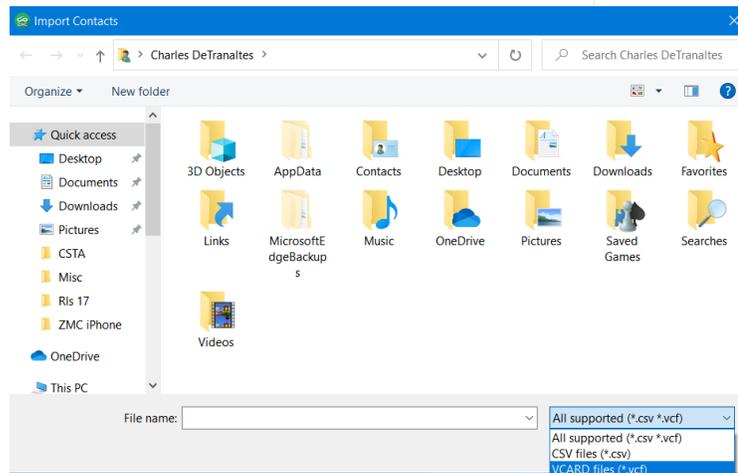

Contacts will display in the Imported area.

Right click to present option.

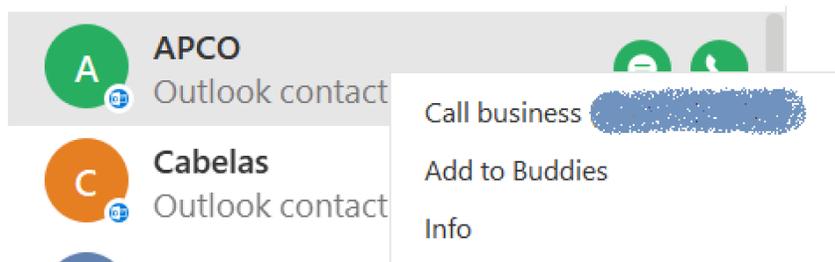


Call business – This will place a call to the callerID the MX received.

Add to Buddies – This will add the contact to your buddy list.

Info = This will present the information screen for the contact.

2.5 Recent Activities Screen

The recent activities screen displays a list of the most recent activity you have had. In addition, the Call Log can be accessed from the Recent screen.

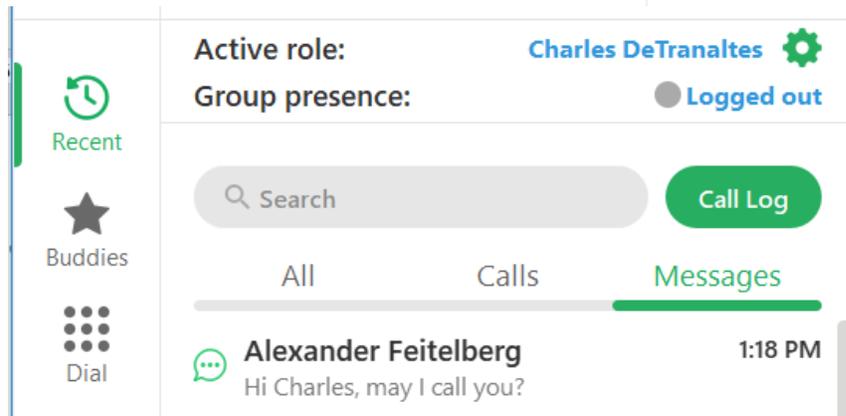

You may filter Recent activity by All, only Calls, or only Messages. Simply select the All/Calls/Messages header items to select that particular filter.


Recent activities>ALL - displays all calls (inc/out/missed) and all messages the ZAC user handled grouped by contact. If there are multiple entries for the same contact, only the most recent entry is displayed.

Recent activities>CALLS - displays all calls (inc/out/missed) the ZAC user handled

Recent activities>MESSAGES - displays only the messages the ZAC user handled


Moving your mouse over the contact will display the call and message options.

The history for that contact is also available by clicking the contact.

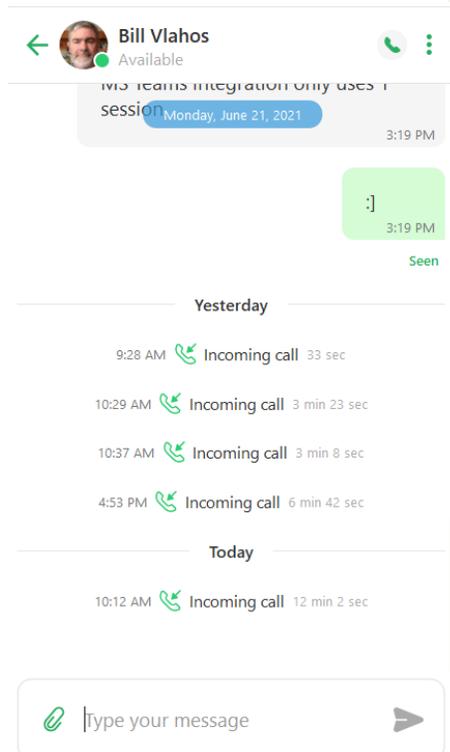


2.5.1 Call Log

You may access the Call Log from the Recent activity area by clicking on the Call Log icon.

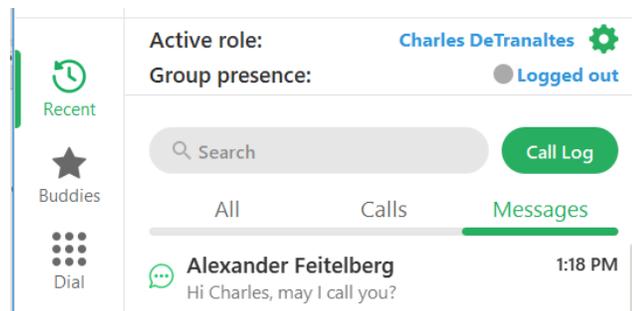


A list of calls will be displayed.

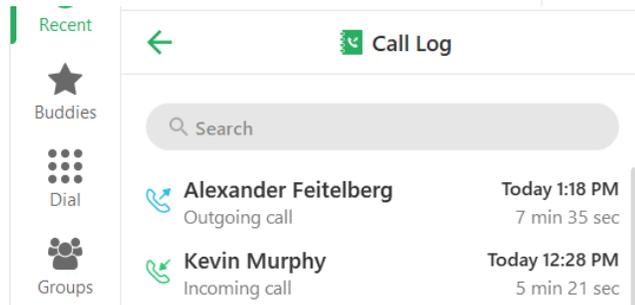


You may select a specific call log entry and click Call Back to call the party.

In expanded mode, the Call Log will display additional log information.

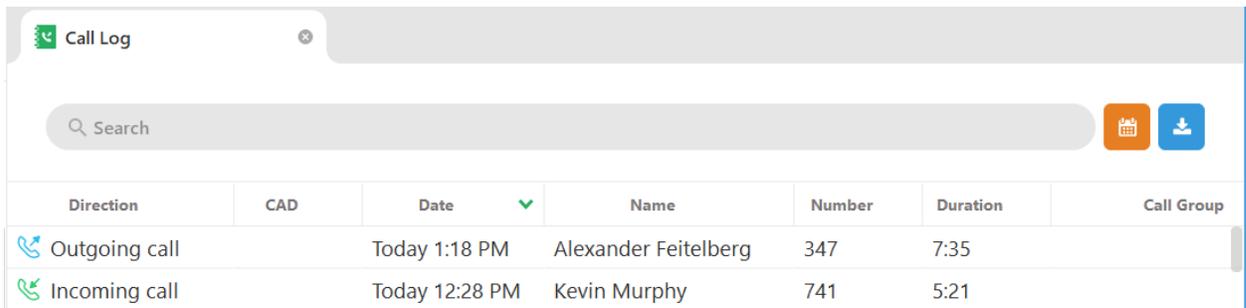


You may sort the entry order of columns by clicking on the column heading.

You can utilize the search function to locate a number, name, etc. The example below shows a search for "mx" returns all MXconference items to the top.

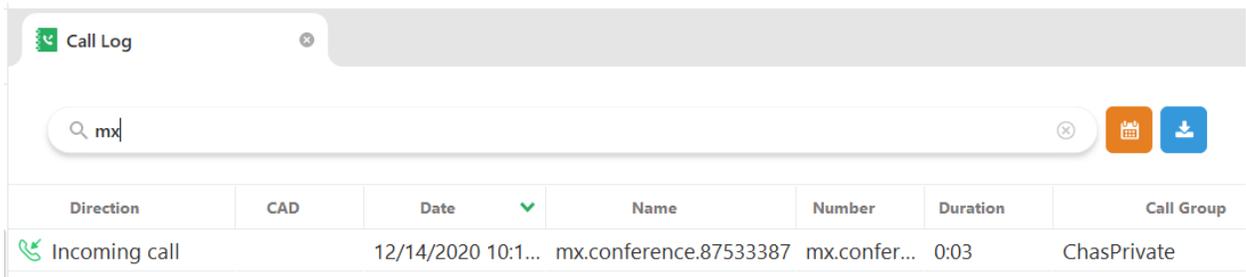

You may also filter the Call Log by date and time:


- Click the filter by date icon 

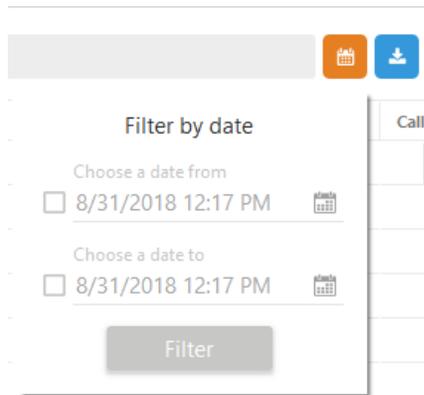

- Check the box and enter the desired From date/time
- Check the box and enter the desired To date/time
- Click Filter

The Call Log entries may be exported in a .csv file format.

- Click the Save to .csv icon 
- Navigate to the desired drive/folder
- Enter the desired filename

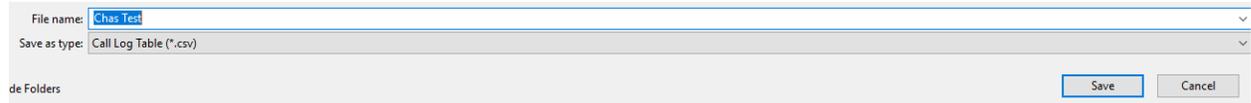


- Click Save

2.6 Dial Screen


This is the screen in which you make and receive calls as well as manage active calls.

- **Incoming calls:**

If you have popups enabled, a popup with call information and the ability to answer/decline will be presented on your screen.

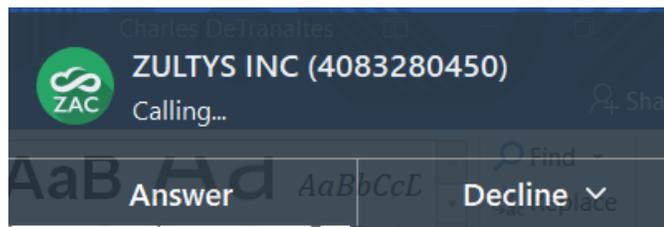


Clicking decline will allow you to end the call or send the call to voicemail.

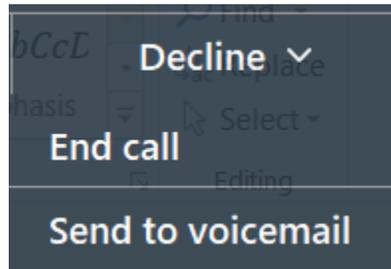


- **Retrieving a call that went to voicemail**

You may retrieve a call that has forwarded to voicemail. In the call session window, click the answer button to retrieve the call from voicemail.

A voicemail message will not be left if the call is retrieved from voicemail.

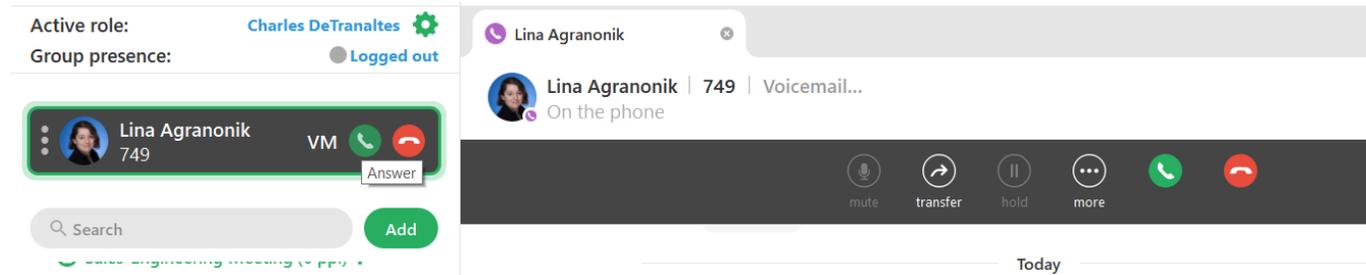


- **Outgoing calls**

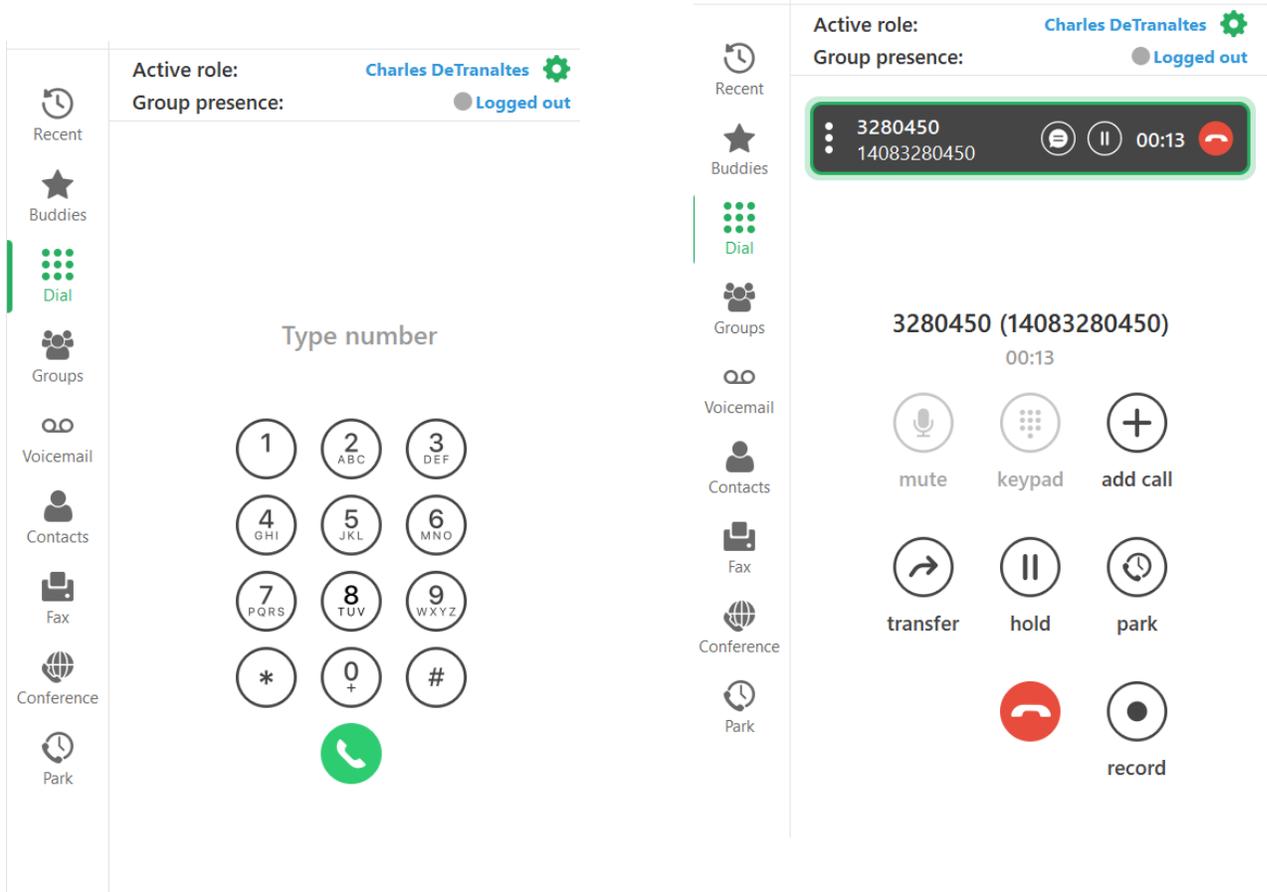

Dial screen, ready to enter phone number

Active call session, external call

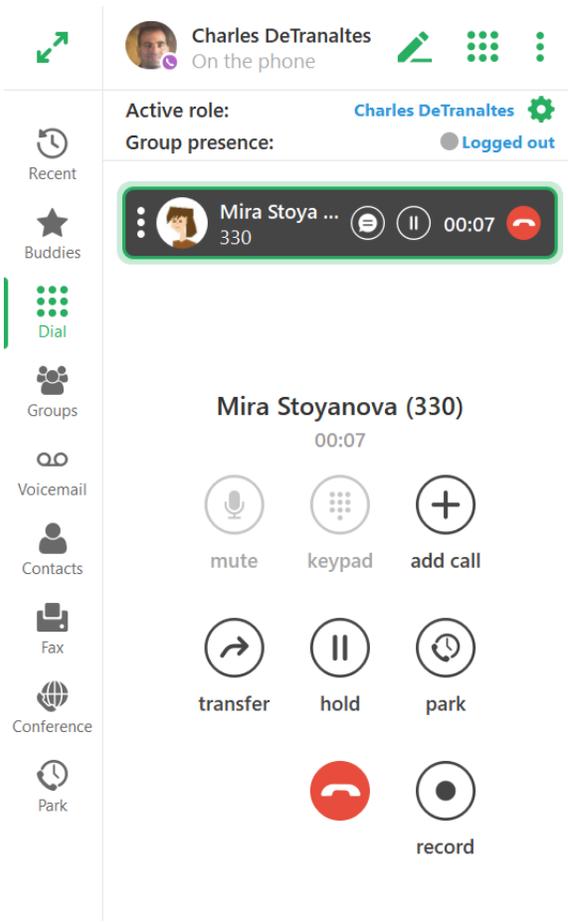

Charles DeTranlates
On the phone

Active role: Charles DeTranlates
Group presence: Logged out

Mira Stoya ...
330

Mira Stoyanova (330)
00:07


mute keypad add call

transfer hold park

record

Note: The Mute and Keypad options are only available when you are bound to the internal Softphone. If you are bound to a desk phone, you utilize the mute/keypad of the desk phone.

Single call session in full mode:

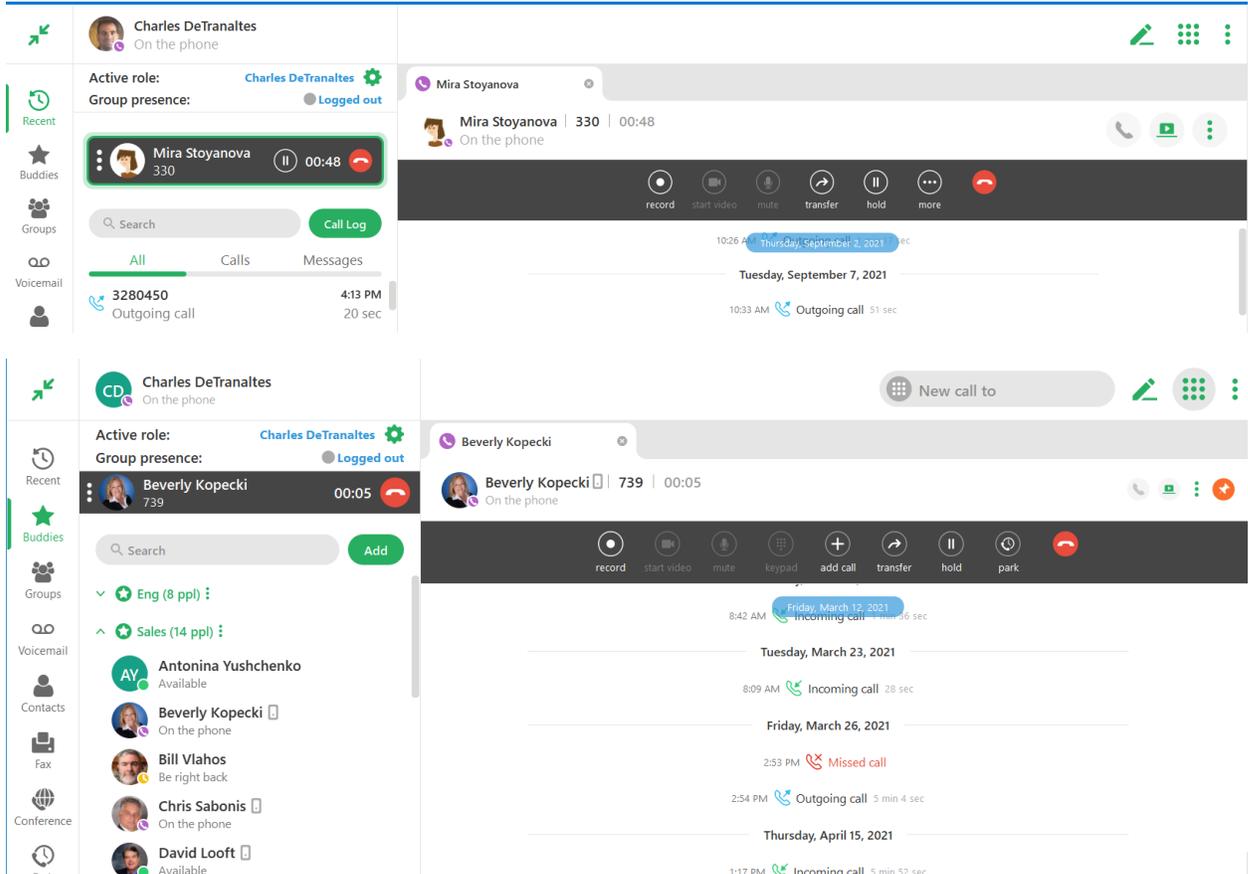

The screenshot displays the ZULTYS interface for a single call session in full mode. The interface is divided into two main sections: a left sidebar and a main call area.


Left Sidebar:

- User Profile:** Charles DeTranltes, On the phone.
- Active role:** Charles DeTranltes (with settings gear).
- Group presence:** Logged out.
- Recent:** A list of recent calls, including one with Mira Stoyanova (330) for 00:48.
- Buddies:** A search bar and a "Call Log" button.
- Groups:** A search bar and a "Call Log" button.
- Voicemail:** A list of voicemails, including one from 3280450 (Outgoing call) at 4:13 PM (20 sec).
- Contacts:** A list of contacts including Antonina Yushchenko (Available), Beverly Kopecki (On the phone), Bill Vlahos (Be right back), Chris Sabonis (On the phone), and David Loof (Available).

Main Call Area:

- Call Header:** Mira Stoyanova | 330 | 00:48. Includes call controls: record, start video, mute, transfer, hold, more, and end call.
- Call Log:** A list of call history entries, including an outgoing call to 3280450 on Tuesday, September 7, 2021.

Multiple call sessions in full mode:

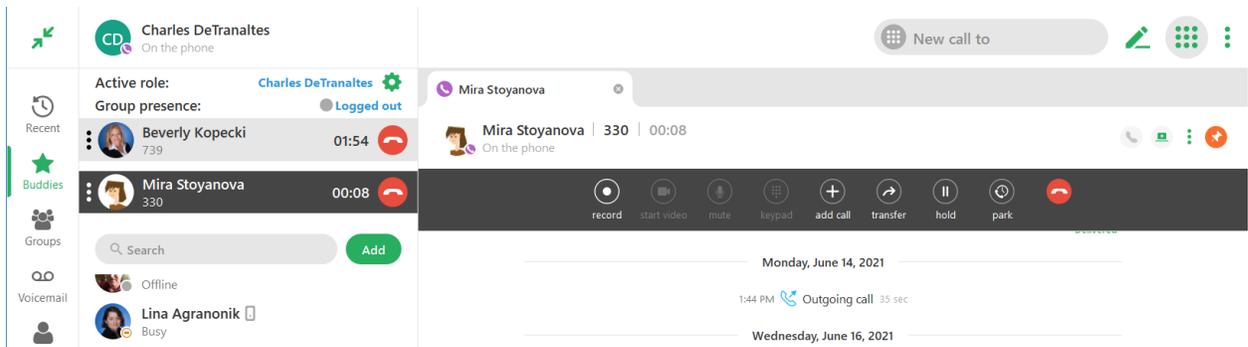

The screenshot displays the ZULTYS interface for multiple call sessions in full mode. The interface is divided into two main sections: a left sidebar and a main call area.

Left Sidebar:

- User Profile:** Charles DeTranltes, On the phone.
- Active role:** Charles DeTranltes (with settings gear).
- Group presence:** Logged out.
- Recent:** A list of recent calls, including one with Beverly Kopecki (739) for 01:54 and one with Mira Stoyanova (330) for 00:08.
- Buddies:** A search bar and an "Add" button.
- Groups:** A search bar and an "Add" button.
- Voicemail:** A list of voicemails, including one from "Offline" and one from Lina Agranonik (Busy).

Main Call Area:

- Call Header:** Mira Stoyanova | 330 | 00:08. Includes call controls: record, start video, mute, keypad, add call, transfer, hold, park, and end call.
- Call Log:** A list of call history entries, including an outgoing call to 330 on Monday, June 14, 2021.


Switching between call sessions will display the corresponding tab associated with the selected call session.

- **Call transfer**

While on a call, click the transfer button



Search for the user to transfer the call to.

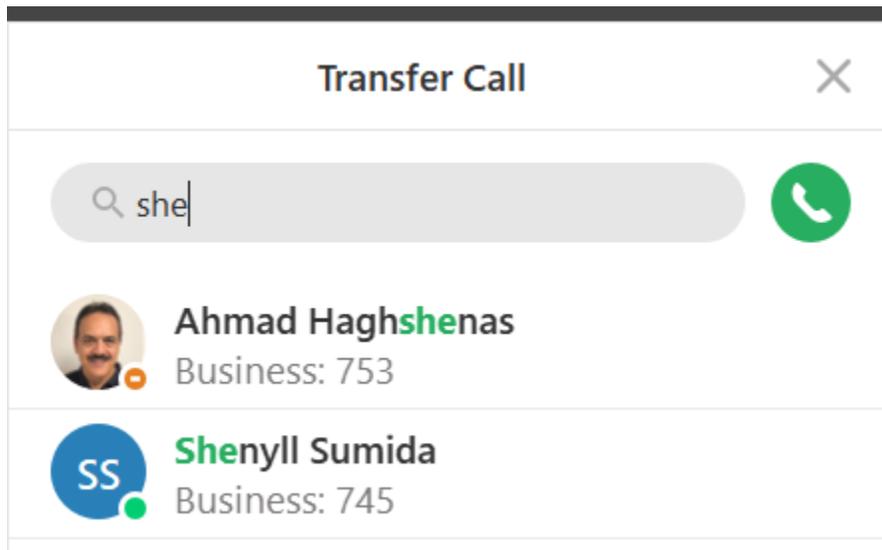

Mouse over the user and click the transfer icon. You may also transfer the caller directly to the user's mailbox by clicking the voicemail icon.




2.6.1 Drag and Drop Operations


ZAC allows many drag and drop operations to be performed to make call processing operations simple.

- **Call transfer**

While on a call session, drag the call session to the user you wish to transfer the call to and release the mouse button.

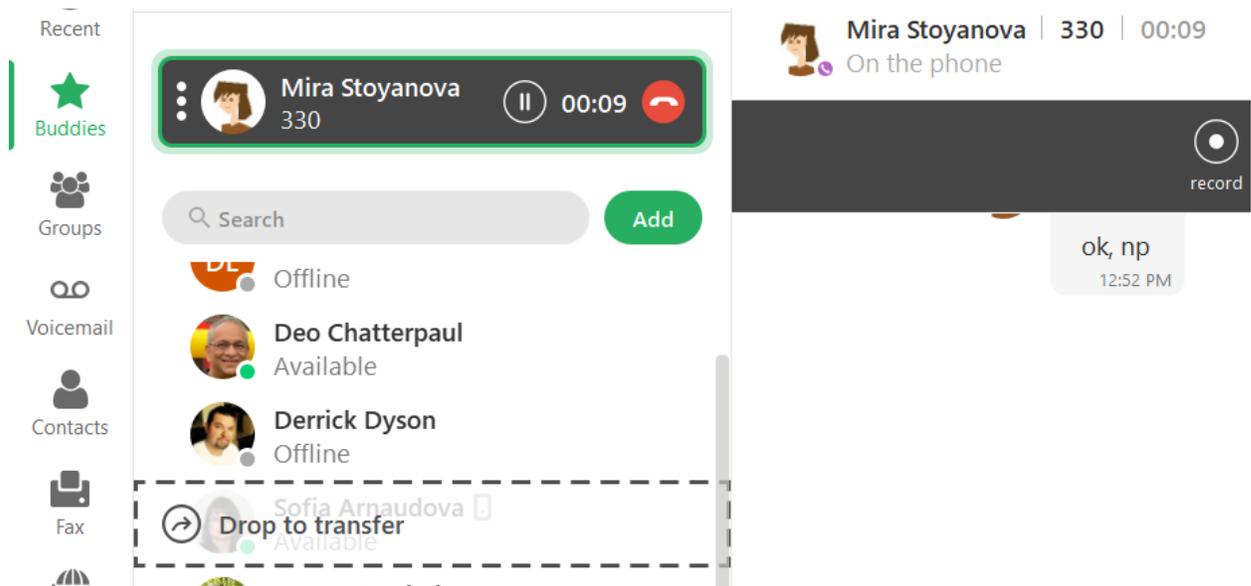

- Attended transfer of calls by dropping one call onto another in the calls area or to call tab.
- Add a call to a conference by dropping it into the conference call in the calls area or conference tab.
- When a drag and drop operation is available, the icon will change to indicate the action to complete the drag and drop operation.

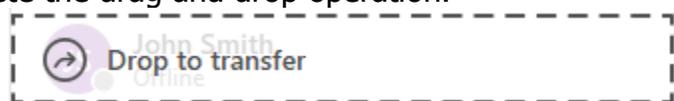

2.6.2 Attended Transfer

In an attended transfer, you speak to the party to whom you are transferring the call prior to the transfer. This may also be referred to as attended, or supervised transfer.

Call the first party.

Place the first party on hold by pressing the hold button on ZAC or simply call another user.


Call the second party

To transfer the call:

drag and drop the session control block to the recipient's address book or buddy list contact.


2.6.3 Transfer to Voicemail

A user may transfer a call directly to another user's mailbox.

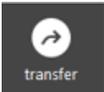- While on a call, press the transfer icon 
- Locate the desired individual in the Transfer Call area.

- Click the transfer to voicemail icon 


The call is transferred directly to that user mailbox.

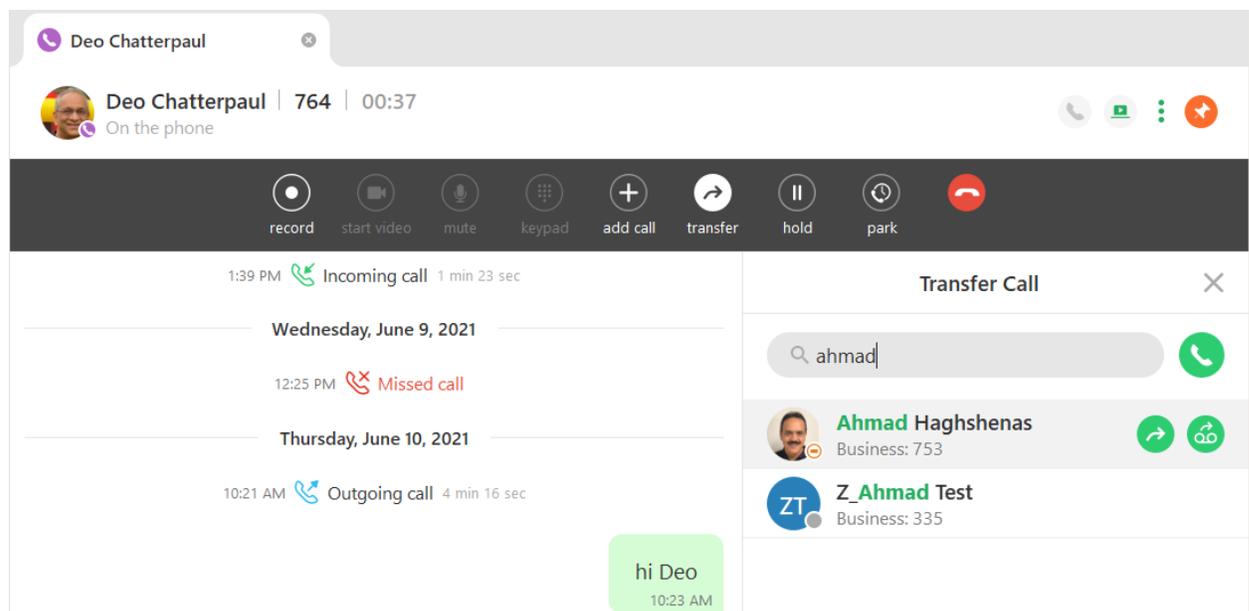


2.6.4 Ad Hoc Conference

You may add a party to an existing conference using drag and drop operation.

- When talking to a user, click the option icon on the left side of the call session window.

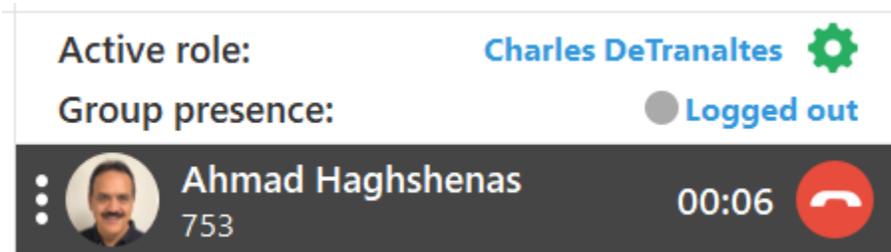

- Call the desired party to add to the conference:
- When the party answers, drag their call session window into the conference window.

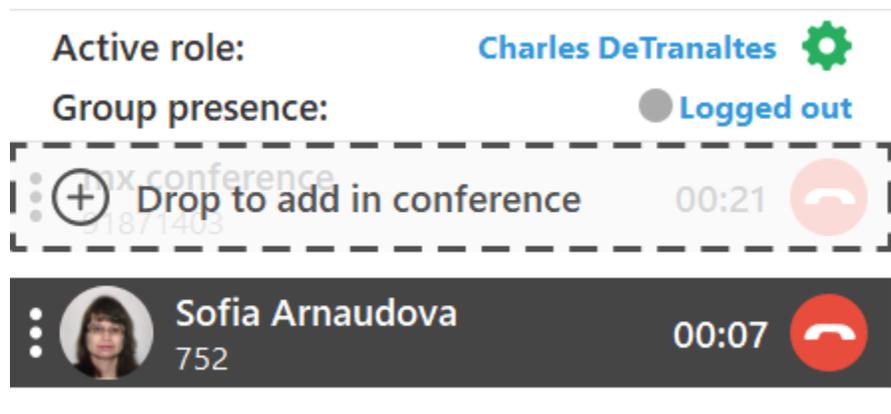

- Place the called party on hold and return to the conference.
 - The called party is now added to the conference.


2.6.5 Whisper/Monitor/Barge

This feature allows users with proper administrative privileges to perform monitor/barge-in/whisper operations on user calls.

To monitor/barge-in/whisper to another user:

Right click on the desired user that is on an active call.

Select the desired action to perform.

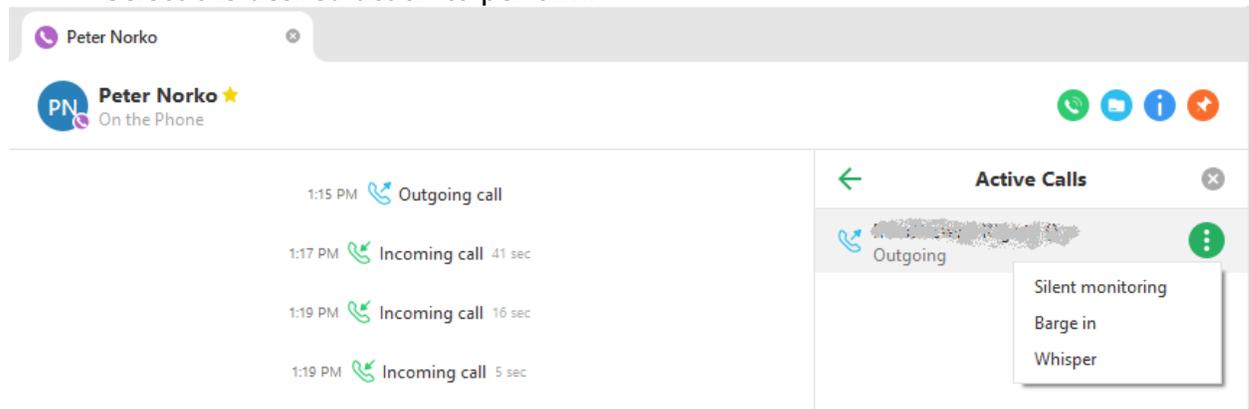

Silent - This allows you to monitor the conversation of the user without them knowing they are being monitored.

Barge-In – This allows you to enter the call and listen/converse with both parties of the call. Effectively a conference is created.


Whisper – This allows you to speak with the user without the outside/third party hearing what you say.

- Users must be configured to access the feature in MX Administrator [Can Monitor] If this setting is checked, this allows a user to monitor other users that have the “can be monitored” setting enabled in their profile. [Can be Monitored] If this setting is checked, users that have the “can monitor” setting enabled can perform the monitor function(s) on this user.
- Users cannot utilize this feature across an MXnetwork. Users can only monitor other users within their own system.
- Call group agents may only be monitored by Supervisors of the call group. Standard users are not able to monitor any call group agent with this feature.


2.6.6 On demand call recording

This feature allows users to record calls and have them saved in their voicemail box. Calls are recorded from beginning to end even if the user started the recording after the call started. Users must be properly configured for access to on demand call recording to utilize this feature.

- While on a call click the Record button

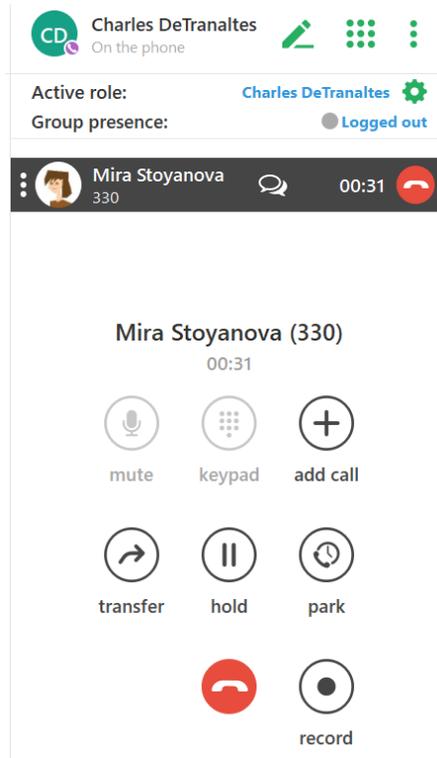

- The screen will change to:

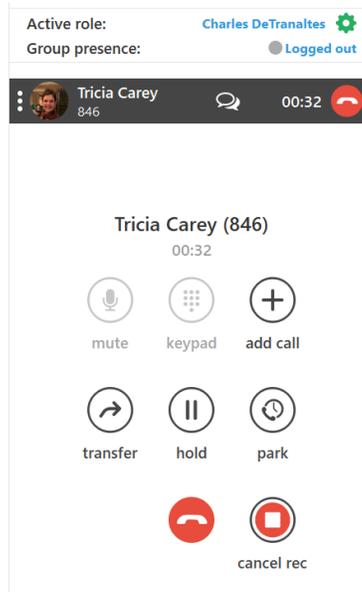


- Continue the conversation. When finished, hang up the call.


- If you want to cancel the recording, click the  . The recording is cancelled and will not be saved.

Once you have ended the call, several notifications will appear indicating you have a new call recording.


- Popup notification

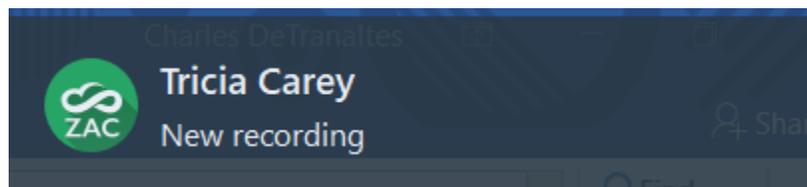


- New voicemail indication

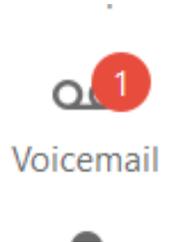

- New Recording indicator in the voicemail area

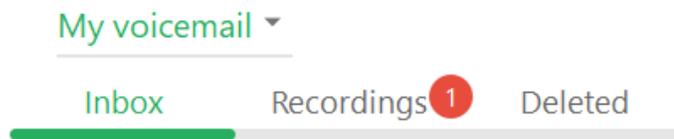


- Click on the recording to view available options.

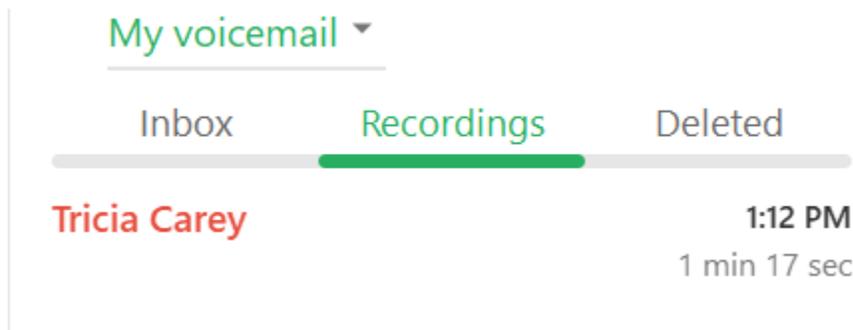


2.6.7 Pause/Resume Automatic call recording

This feature (if configured) allows a user to pause and resume an automatic call recording. This can be used to omit sensitive information that a user does not want included in a voice recording.

- To pause an automatic call recording, while on a call click the  icon in the call session window.

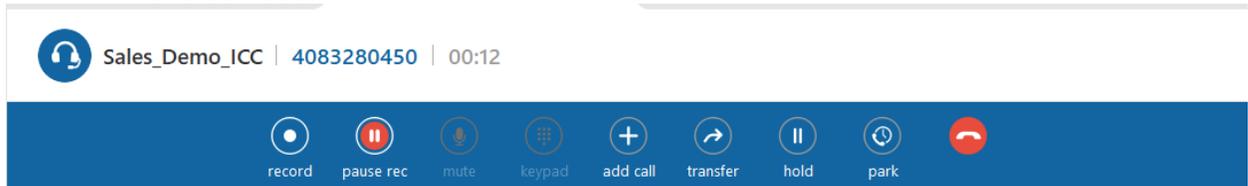


To resume an automatic call recording, click the  icon in the call session window

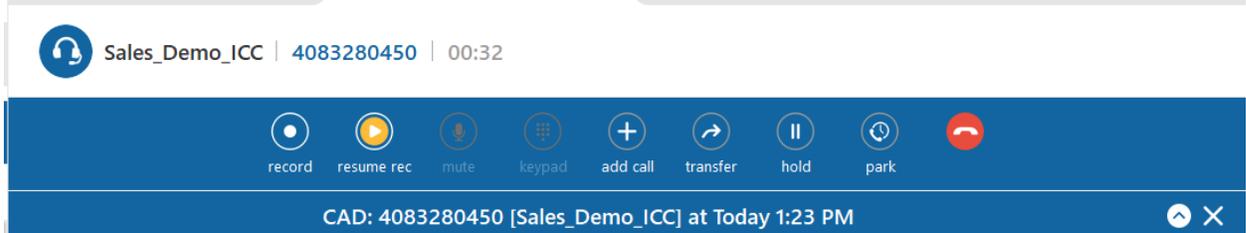


2.7 Voicemail Screen

This screen is where your voice mail, on demand call recordings, and mailbox greetings are accessed/managed.

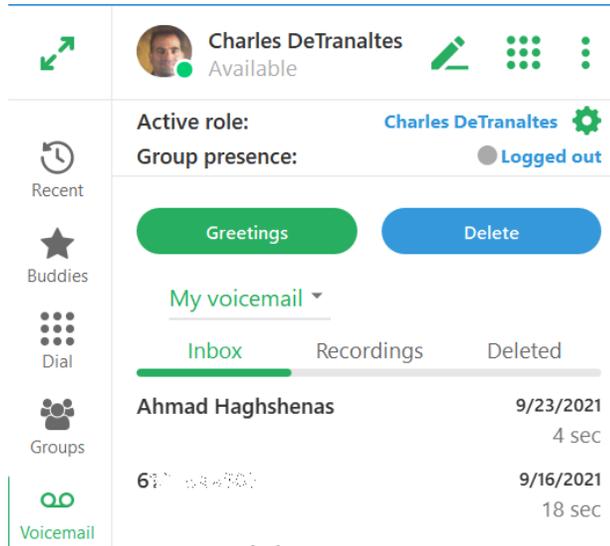

You may choose to view your inbox or deleted box. A list of the voice messages will be displayed in each. Selecting the Recordings item will display a list of on demand call recordings you have.

When you right click or select the options on a message or recording, the options for the message will be presented:

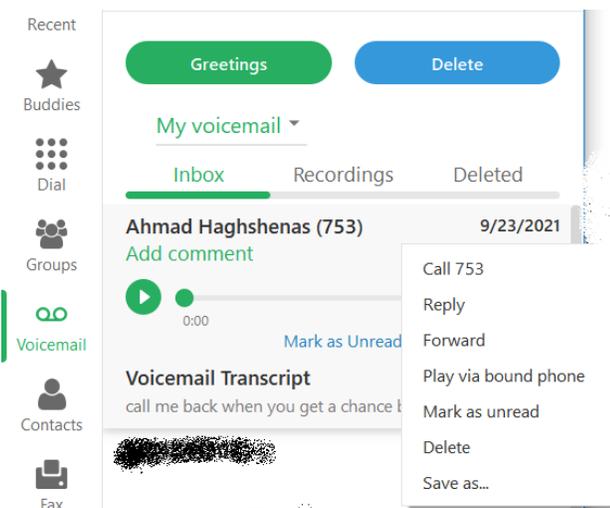


Add comment – Allows you to type a comment to be associated with the voice message. This comment will follow the voice message if you choose to forward the message.

Play/Replay/Pause – Allows you to listen or pause the message. You may also click on the sound bar to jump to any point of the message.

Delete – Deletes the message from the current box. If you are deleting from the delete box, you will be asked for a confirmation.

Delete multiple or all voicemails – You may delete multiple or all voicemail messages at one time. To do this, perform the following:


At the voicemail screen, click the Delete icon:

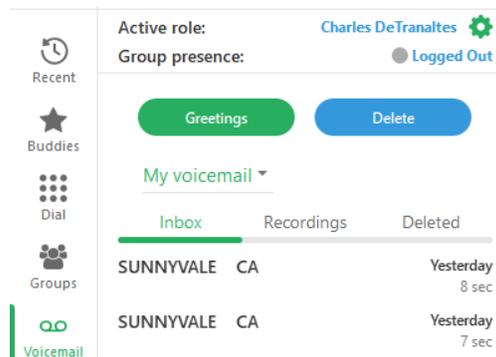


Select the desired voicemail messages to delete.

Click the Delete Selected icon

To delete all voicemail messages select the Delete All icon.

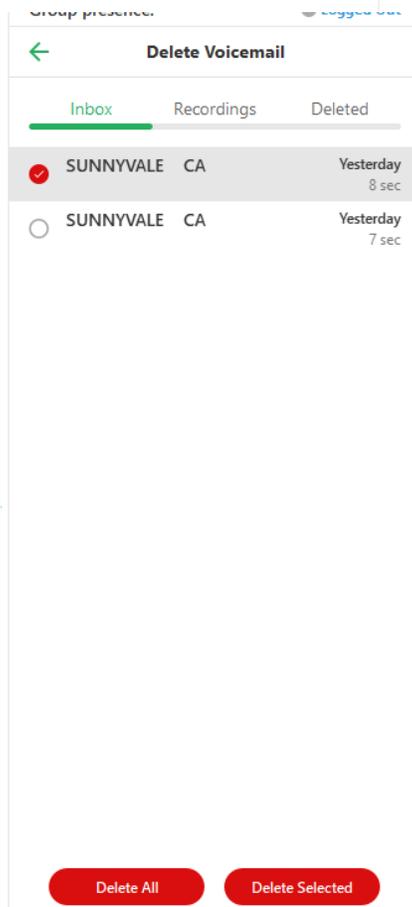


Click Yes at the confirmation window.

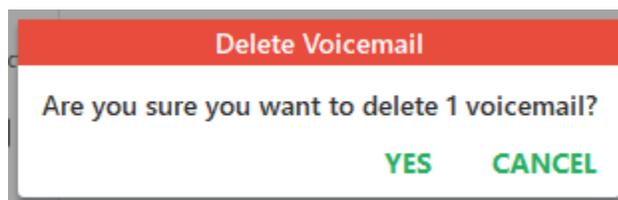

Call – This allows you to place a call back to the party that left the message.


Forward – This allows you to forward the message to another mailbox user. You may optionally record a pre-amble message to the forwarded message. When you forward a message, you can start typing the intended forward party in the To field. ZAC will display matching names in the directory as you type.

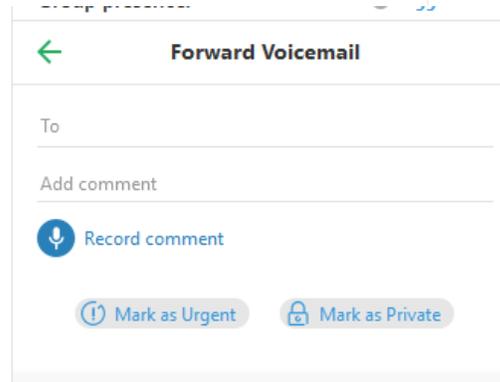

Mark as unread – This allows to store the message in a unread/new state.

Reply – This allows you to reply to another mailbox user that left you the message.

When you reply to a message, you can start typing the intended reply party in the To field. ZAC will display matching names in the directory as you type.

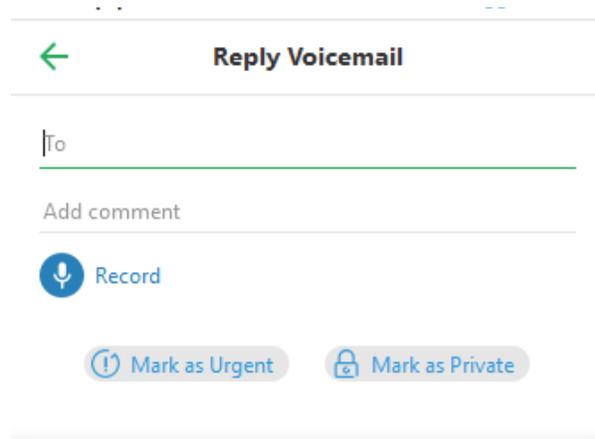


Play via Bound – This allows you to listen to the message on your desktop phone instead of your PC if you desire.

Save as – This allows you to download a copy of the voice message onto your local PC.


2.7.1 Voicemail Transcription

This feature will display the text of a voicemail that was left for a user. This service must properly be configured by your MX Administrator. Once configured, transcription is displayed as:

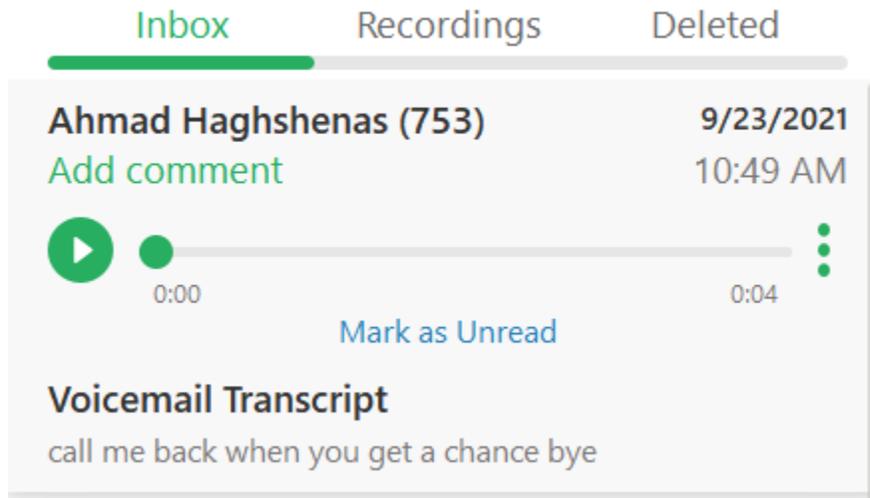


2.7.2 Voicemail Greetings

This menu is accessed by clicking the Greetings in the Voicemail screen. This screen is where you manage your greetings, name, and auto attendant greeting.

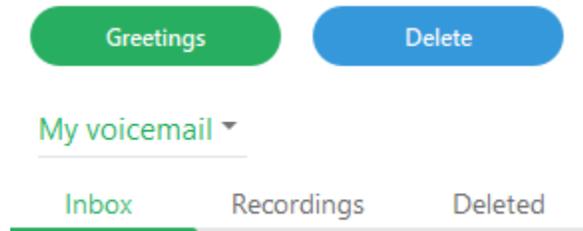

You may select your personal voicemail greeting or if you are part of a call group you may select the call group greeting.

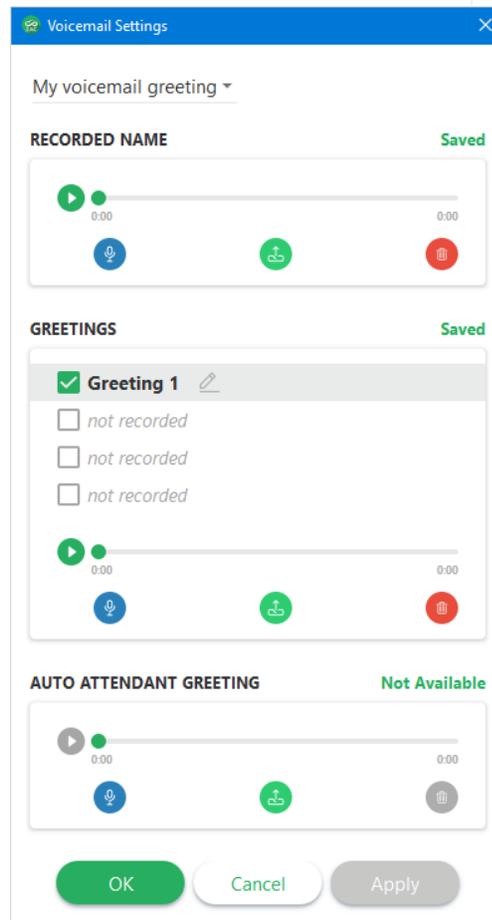


Recorded name – This allows you to import, record, or delete a user name that is associated with your mailbox.

Greetings – This allows you to import, record, or delete a greeting that is associated with your mailbox. You may have up to 4 unique greetings associated with your mailbox. To make a greeting active, click the checkbox next to the desired greeting.

Auto Attendant Greeting – This allows you to import, record, or delete an auto attendant greeting that is associated with your mailbox. The MX auto attendant routes calls to system users. Prior to routing a call to your phone, the auto attendant can play your greeting, recorded name, or extension to the caller. The auto attendant greeting is the greeting played by the auto attendant to a caller prior to routing the caller to your extension.


2.8 Contacts Screen

This is the screen where all the MX system contacts are located. This includes contacts in multiple locations if you are part of an MXnetwork.

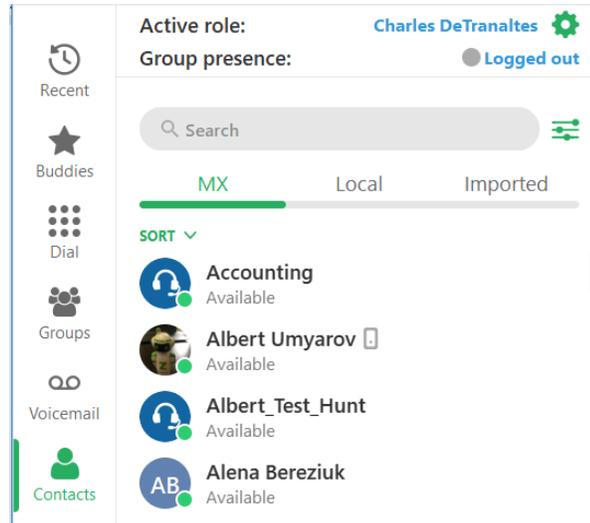


You can filter the contacts by locations when in an MXnetwork by clicking the Filter

contacts icon . Select the desired locations you want to display. All the contacts from that location will be added to your contact list.

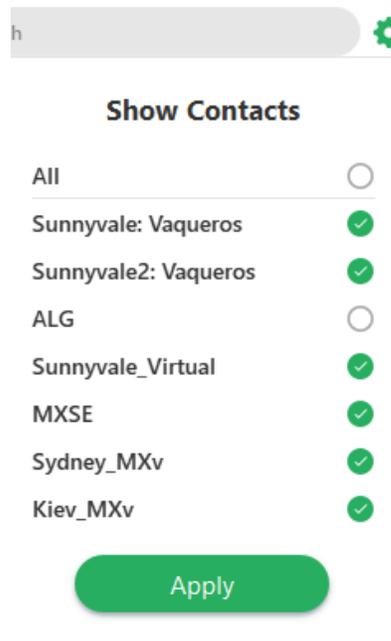

To add a contact as a buddy, highlight the desired contact and click the star icon on the desired contact: . The icon will change to: .

You may sort Contacts by first name, last name, or presence by clicking the sort button:

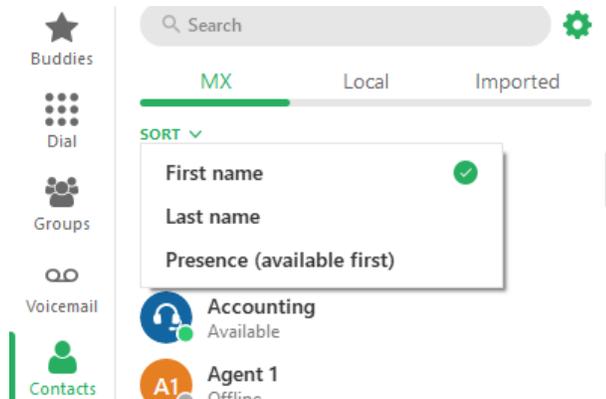



Contact Notes:

ZAC introduces the approach of showing local contacts - both old MXIE buddies and contacts created in ZAC are displayed in Contacts | Local screen. Only contacts that are mentioned as buddies (same as for MX contacts) are displayed in the Buddies screen. There is still the ability to un-buddy a contact from the Contacts screen.

2.8.1 Adding Local Contacts

- Select the Local tab and click the Add contact options icon:
- Select Add contact

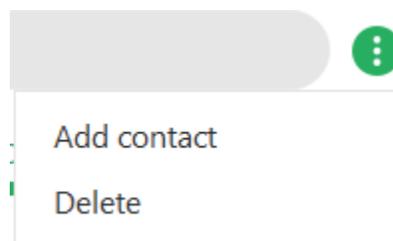

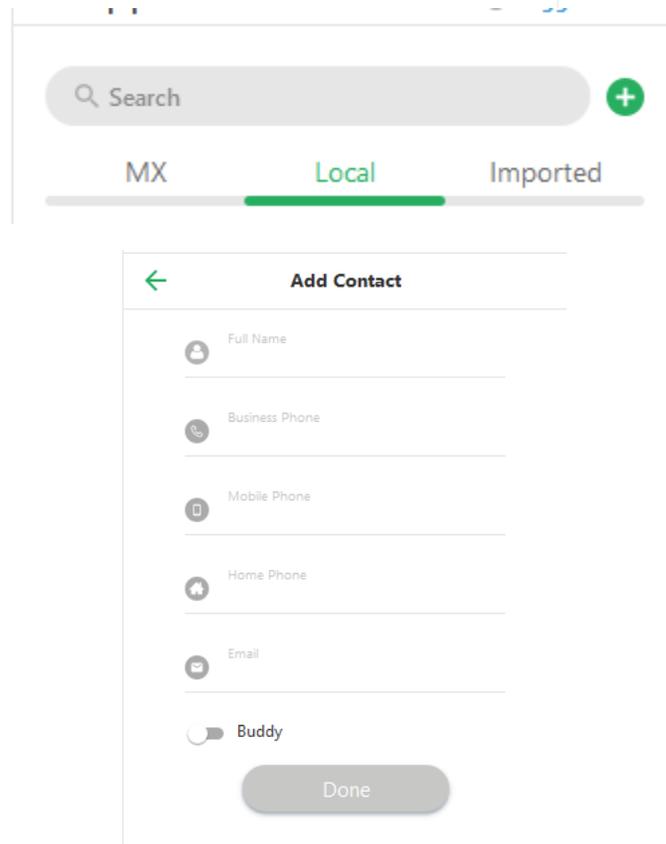


- Enter the desired information and click Done when finished.


2.8.2 Deleting Local contacts

You may delete 1 or more local contacts.

In the Local Contact screen select the  icon and click Delete.

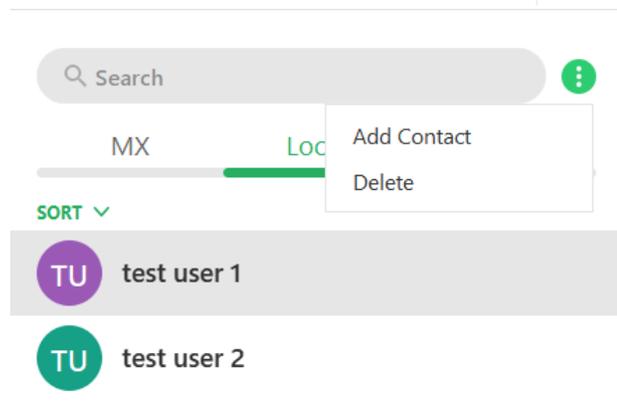


Select the desired contacts to delete or select Delete All:

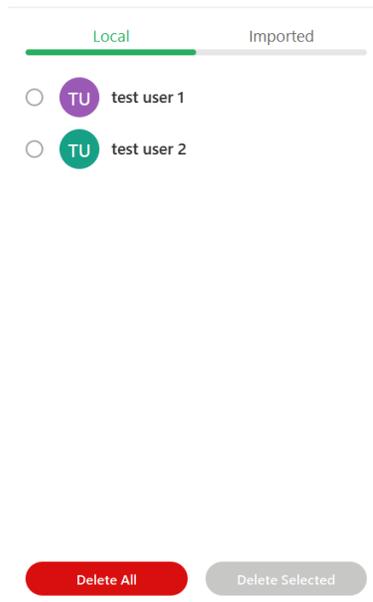

Click the Delete Selected if only selected contacts are to be deleted.

Click the confirmation button to delete.

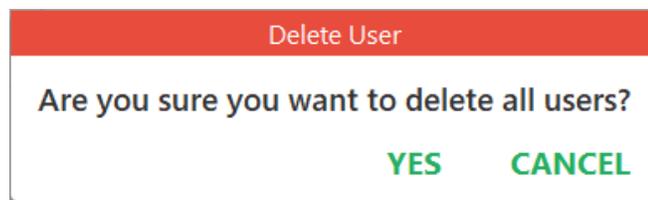


2.8.3 Importing Contacts

ZAC allows the importing of contacts into the Imported area of ZAC.


Click the Imported tab

Click the  icon

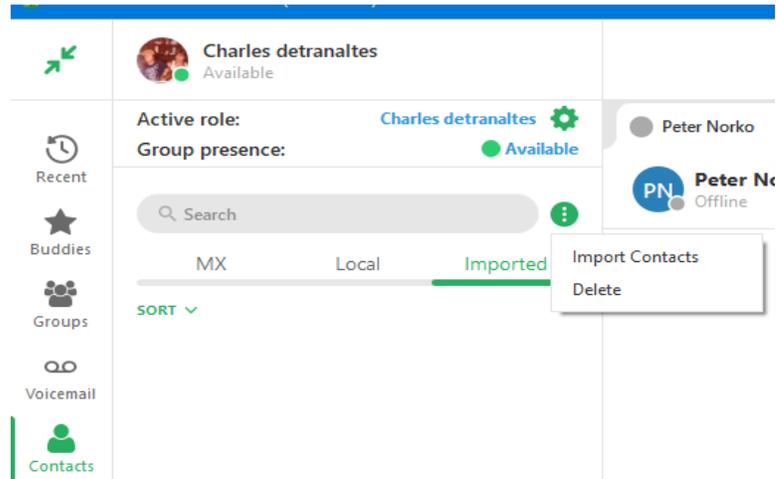


Select Import Contacts

Navigate to the desired folder/file

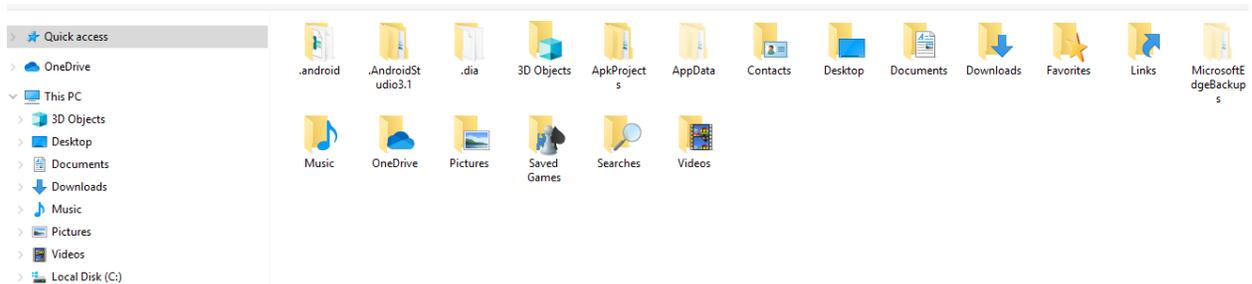

You may import vCard or .CSV file types.

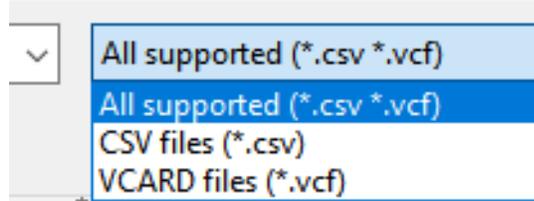


For the .csv import, the format should be as follows:


	A	B	C	D	E	F
1	First Name	Last Name	Business Phone	Mobile Phone	Home Phone	Email
2						
3						

NOTE: If a user sends a file via Chat that is a vCard type with a single contact, an "Add to contacts" item is available which will result in adding the vCard to Address Book.

2.8.4 Macintosh Contacts

You may enable support for native Macintosh contacts. In Settings>Application>Integration>Apple Contacts

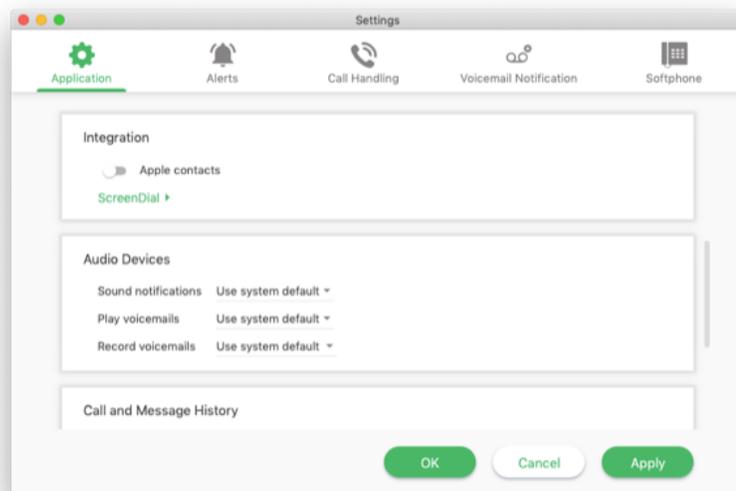

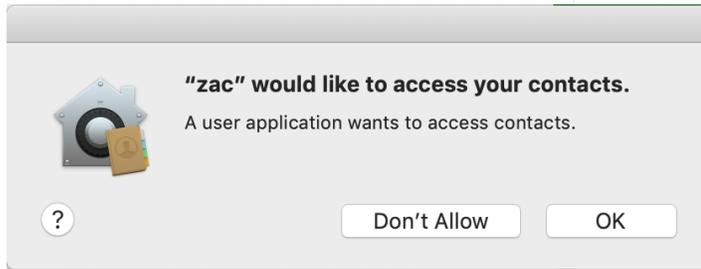


Click OK.

2.9 Parked Calls Screen

This is the screen where calls that are parked can be managed. This area allows the users to place/retrieve calls that are in call park locations.

To park a call, click the park icon while on a call:

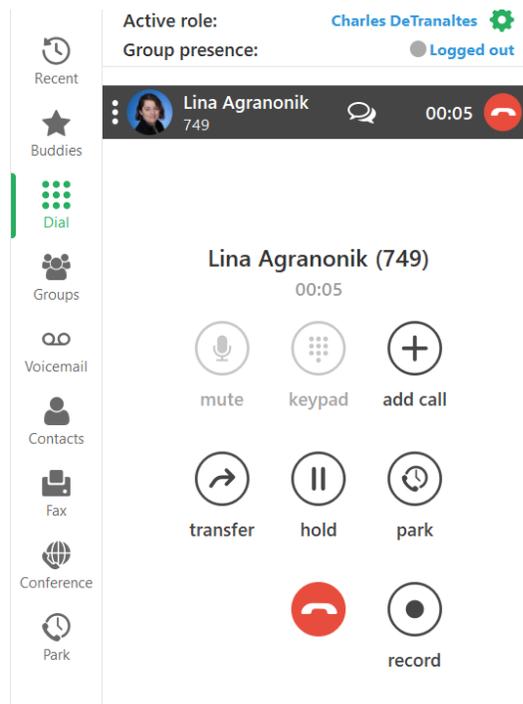

When a call is parked the screen will display:

ID Ahmad Haghshenas
01 Parked by: Charles DeTranltes

0:11

ID – The park slot ID

Caller – The caller that was parked

Parked by – The user who parked the call

The screen will indicate the amount of time the call has been parked.

The Park notification area will also indicate that a call is parked:



To retrieve a parked call:

Click the handset icon on the parked call.

ID 14083280450
01 Parked by: Charles DeTranltes




3 Team Messaging - Chat Groups

This is the screen where the Team Messaging (Chat Group) function is accessed and managed. Team Messaging allow users to have group chat, group audio and video calls, file sharing and desktop screen sharing while in a group chat or group chat conference.

Group members will receive notifications and can respond to any chats that come to the group. Any member of the group can send a message and all other members in the group will receive the message.

Starting in ZAC 5.0+, group chat members can send files to other members as well as create an audio conference with members.

You may filter Chat Groups by My, Private, Public.

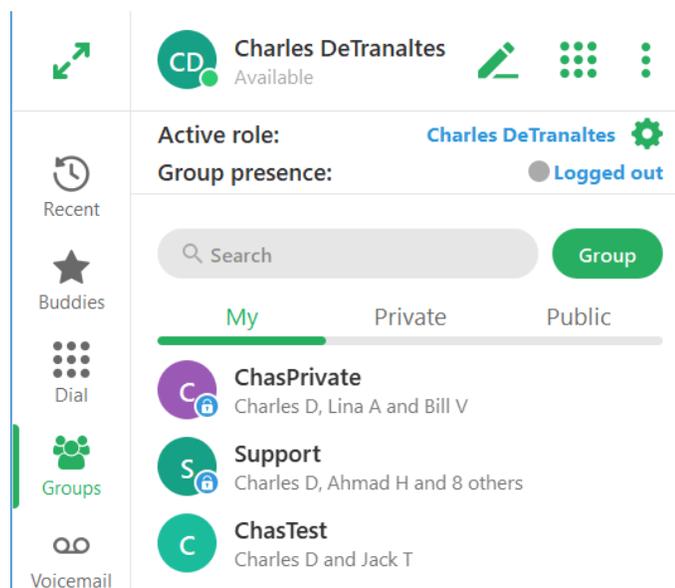

Public groups allow any user to join the group without requiring approval. Private groups require the owner of the group to add members to the private group.


3.1.1 To create a new group:

Click the Group icon 

- Select Create Group.
- Enter the desired name of the group.

Select the desired members by clicking on the member in the directory or typing their name.

Once a member is added, you may remove them by clicking on the X next to their name

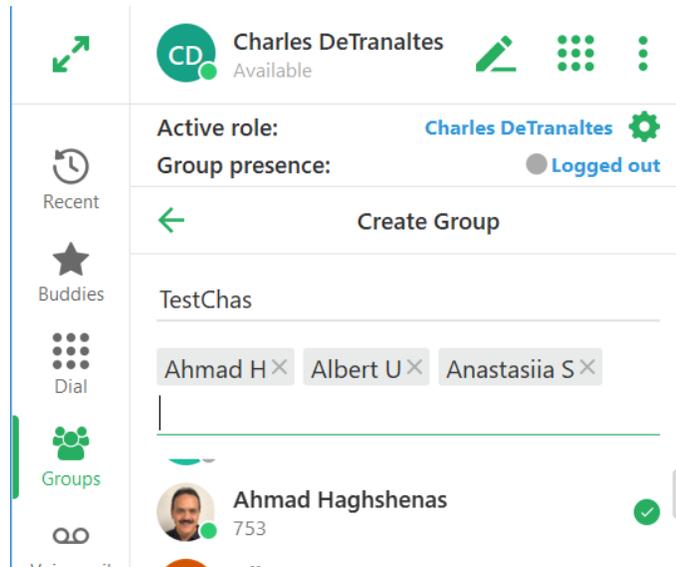


- Check the box if the Group is to be a Public type group. By default, newly created groups are private.

Make public

- Click Create.


3.1.2 To edit a group:

Right click on the desired Chat group and select Info:

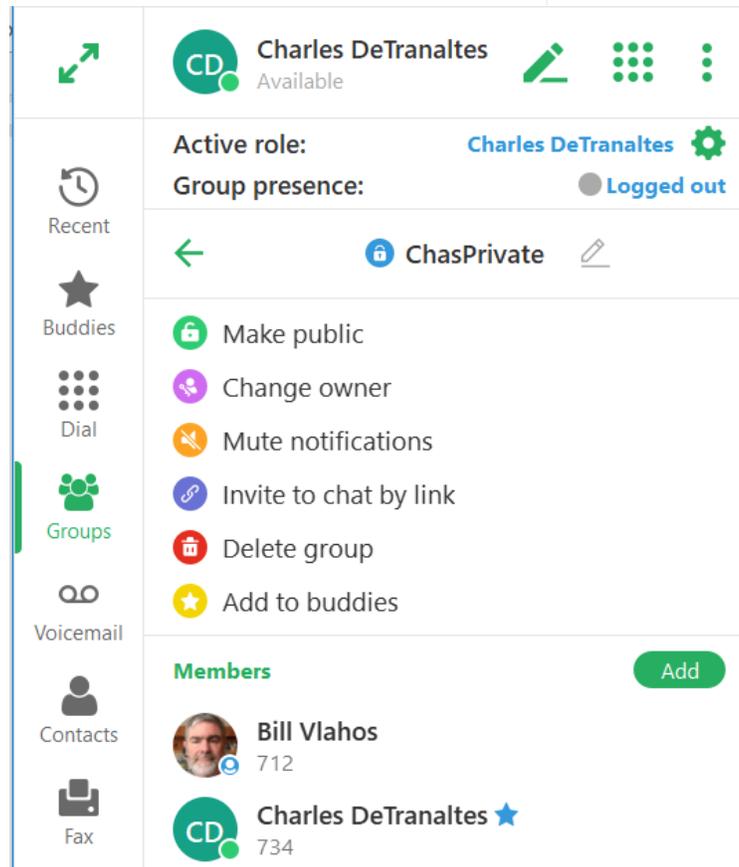

The screenshot shows the ZULTYS interface in compact mode. On the left is a vertical navigation sidebar with icons for Recent, Buddies, Dial, Groups, Voicemail, Contacts, and Fax. The main content area is divided into sections: a top header for 'Charles DeTranltes' (Available), an 'Active role' section showing 'Charles DeTranltes' and 'Group presence' as 'Logged out', a 'Recent' section with a back arrow and 'ChasPrivate', a 'Buddies' section with a list of actions: 'Make public', 'Change owner', 'Mute notifications', 'Invite to chat by link', 'Delete group', and 'Add to buddies', and a 'Members' section with a profile for 'Bill Vlahos' (712) and 'Charles DeTranltes' (734) with a blue star, and an 'Add' button.

Compact mode

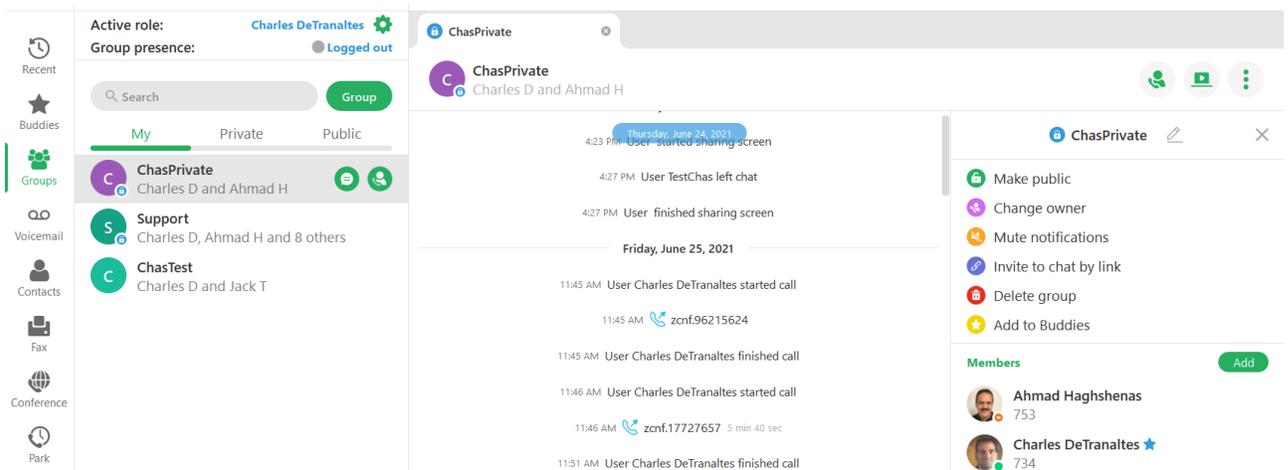

The screenshot shows the ZULTYS interface in full mode. On the left is a vertical navigation sidebar with icons for Recent, Buddies, Groups, Voicemail, Contacts, Fax, and Conference. The main content area is divided into sections: a top header for 'Charles DeTranltes' (Logged out), a search bar, a 'Group' section with 'My', 'Private', and 'Public' tabs, a list of groups including 'ChasPrivate' (Charles D and Ahmad H), 'Support' (Charles D, Ahmad H and 8 others), and 'ChasTest' (Charles D and Jack T), a chat window for 'ChasPrivate' showing messages from 'User TestChas' and 'User Charles DeTranltes', and a 'Members' section with profiles for 'Ahmad Haghshenas' (753) and 'Charles DeTranltes' (734) with a blue star.

Full mode

Select the desired option you wish to perform on the group.

Rename(pencil icon) – Allows you to rename the group

Make Public – Changes the group from a private type to a public type.

Change Owner – You may transfer the ownership of groups you created to other users

Mute Notifications – This allows the user to mute popups and missed activity indications in the navigation panel. This can be useful for extremely active groups with a large number of messages exchanged.

Invite Guest to chat by link – This allows the user to create a link that can be sent to external guest users so they may access the group chat even though they are not MX system users. Guest users may chat, participate in audio/video conferences, file share and screen share with group members.


Delete Group – This action will delete the existing group. You will be prompted for a confirmation to delete.

Add to Buddies – This action will add the group to your buddy list.

Add Members – This action allows you to add additional members to the group.

3.1.3 To view/converse the group chat:


- Open the desired Chat group by clicking on the group. The group chat screen will appear.

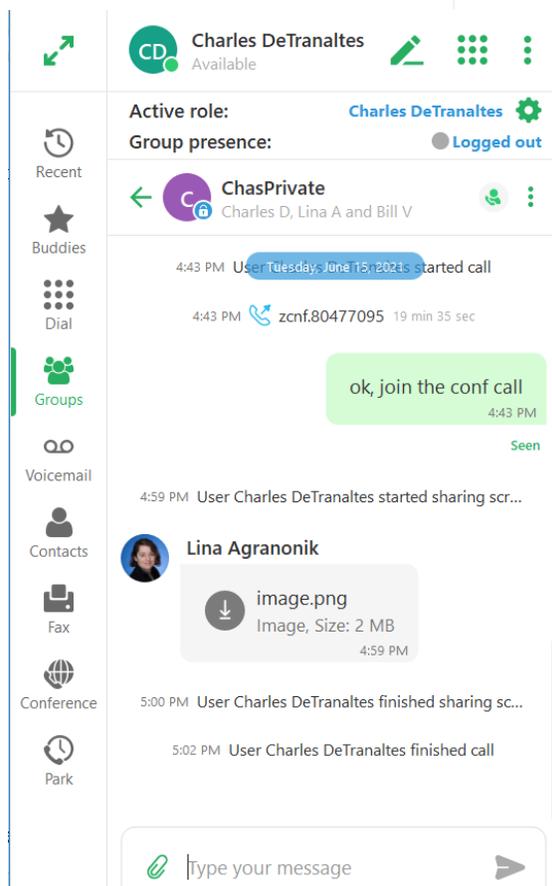

You will see the most recent message threads. Type your text in the text box and press  to send or press ENTER key on the keyboard.

In expanded mode, each group will open as a separate tab. You may pin  the tab to keep it on the screen and move from tab to tab. Group notifications will appear in non-focused tabs so you are aware of activity.

3.1.4 To create an MXconference when in a group chat:

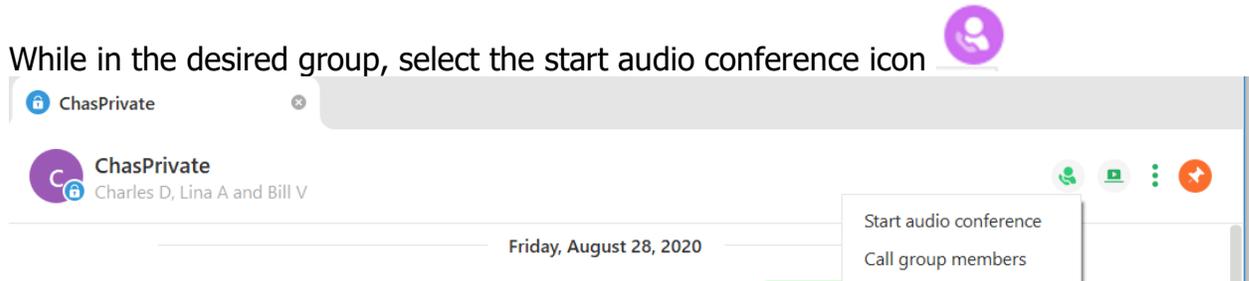


Click the Start Audio conference option.

A conference call will begin. Your audio device will ring indicating a conference call. Answer the call to start the MXconference.

A group text will be sent stating the conference call has started. When the call ends, a group text stating call ended is sent.

To create an MXconference by calling group participants first:

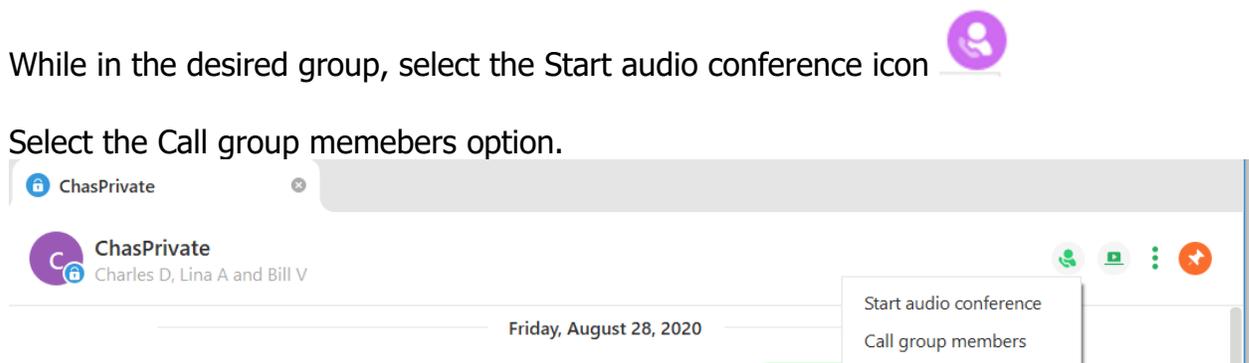


An MXconference is created and each participant is called by the MX system. When they answer, they will hear "connecting now" and be placed into the MXconference.


3.1.5 Invite external guest users to Chat session

This feature will allow you to send a link to an external guest and have them join the Chat session. Guest users may chat, participate in audio/video conferences, file share and screen share with group members.

Click the Info button from the options icon in the Chat session:

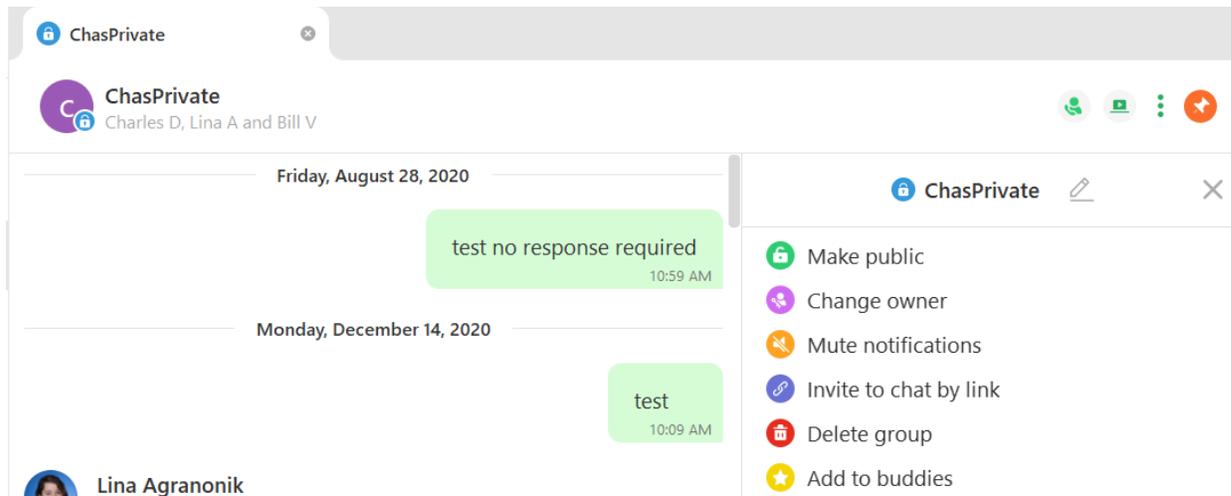


Select Invite to chat by link:

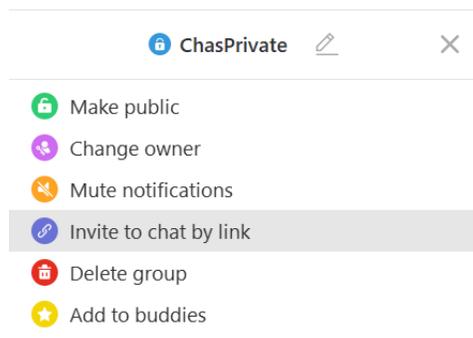


Set an expiration time for the link (default = 24 hours) and enter a password (optional).

Click OK

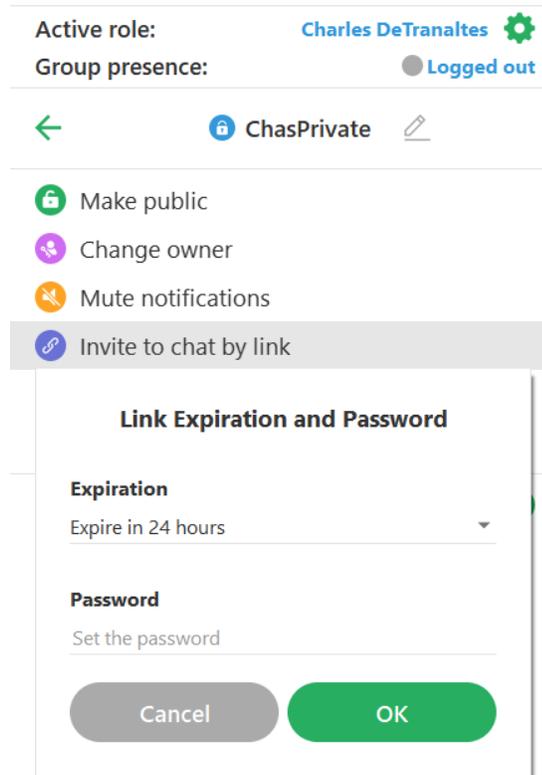


Note: The link is now copied into the clipboard.

Paste the link into an e-mail and send the link to the external party:

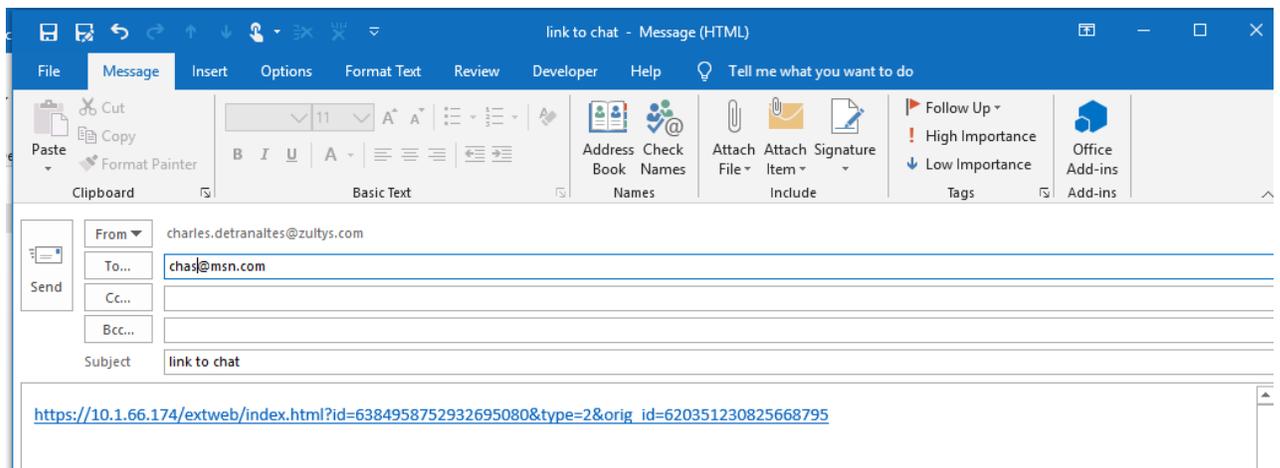


3.1.6 External Guest operation

When the external party clicks the link, they will receive an invite in their web browser.

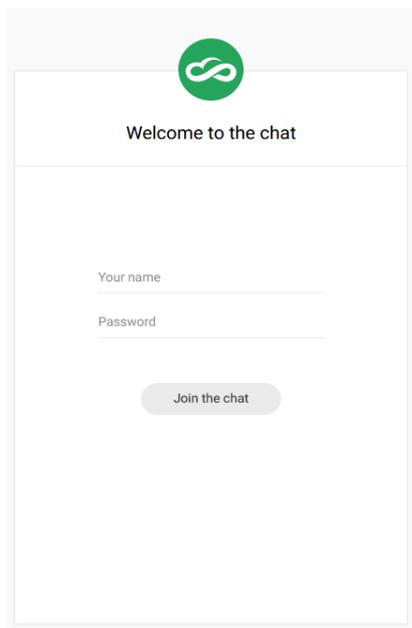


They enter their name, password (if configured) and click Join the chat.

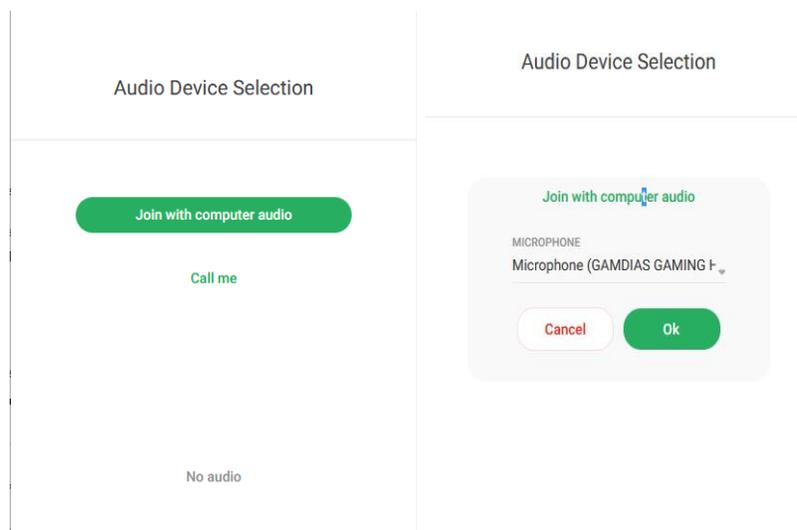

They can select their audio device (**only computer audio is supported**). They may have to select some additional options based on the audio devices installed on their computer.

- **Main guest screen**

The external user will receive a web based Guest screen. This screen provides all the controls for the guest user to collaborate with group members.

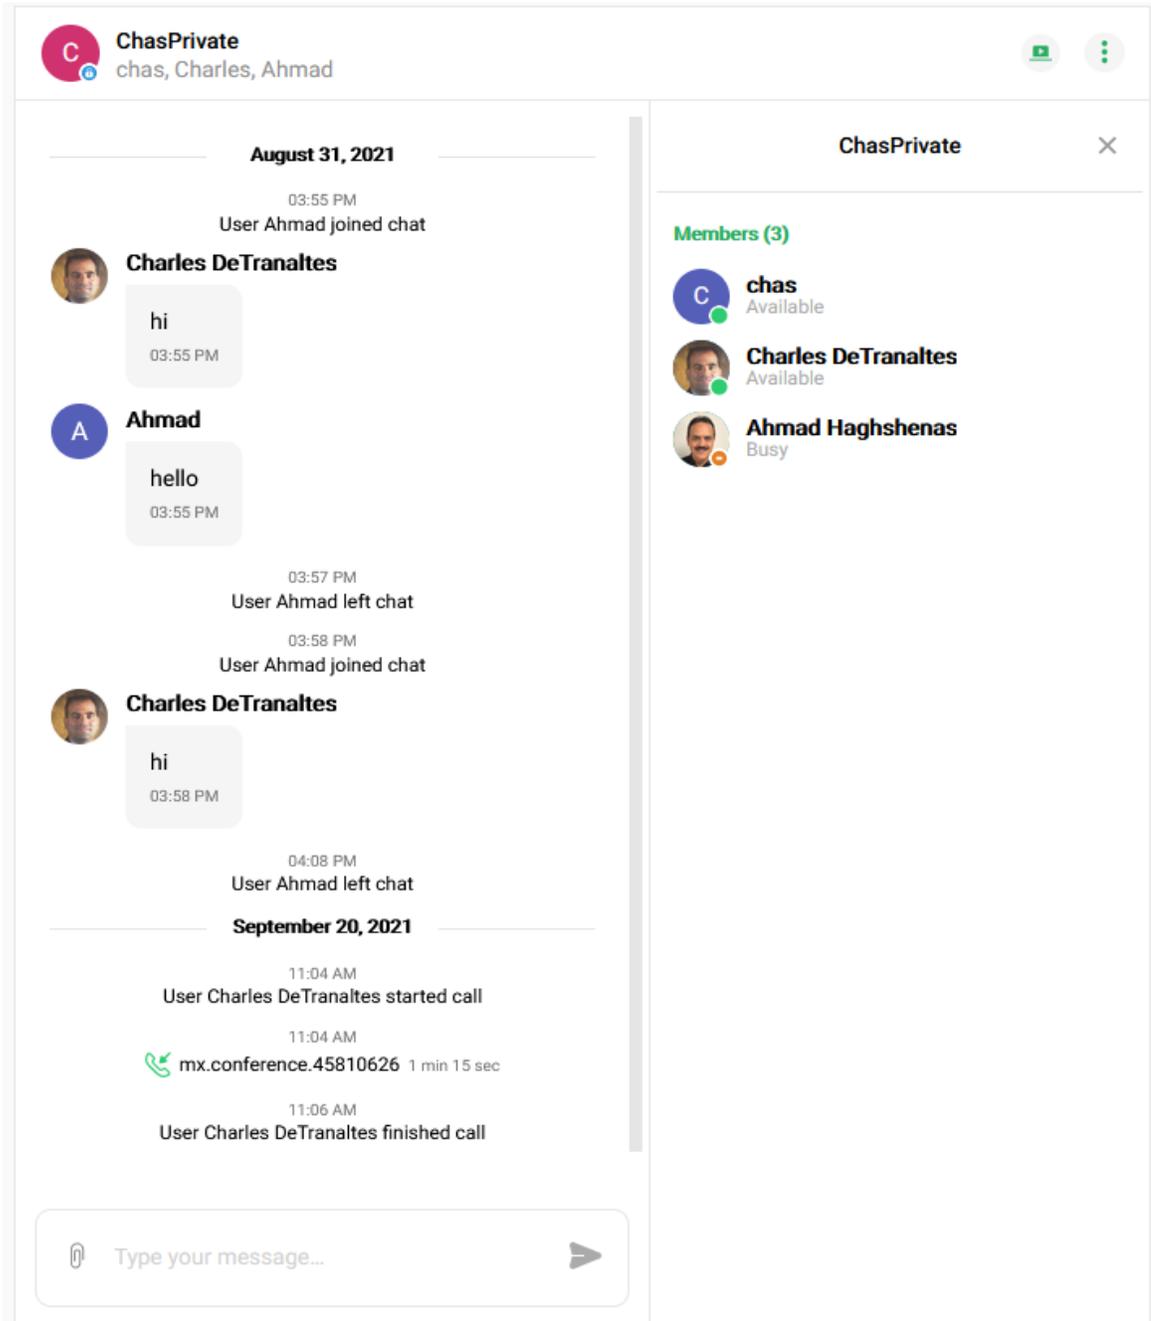

The screenshot shows a Microsoft Teams chat interface for a group named "ChasPrivate". The chat history includes:


- August 31, 2021**
 - 03:55 PM: User Ahmad joined chat.
 - 03:55 PM: Charles DeTranltes (C) sends "hi".
 - 03:55 PM: Ahmad (A) sends "hello".
 - 03:57 PM: User Ahmad left chat.
 - 03:58 PM: User Ahmad joined chat.
 - 03:58 PM: Charles DeTranltes (C) sends "hi".
 - 04:08 PM: User Ahmad left chat.
- September 20, 2021**
 - 11:04 AM: User Charles DeTranltes started call.
 - 11:04 AM: A call link is shown: mx.conference.45810626 1 min 15 sec.
 - 11:06 AM: User Charles DeTranltes finished call.

The right sidebar shows the "Members (3)" list:

- chas (C) - Available
- Charles DeTranltes - Available
- Ahmad Haghshenas - Busy


At the bottom, there is a text input field with the placeholder "Type your message..." and a send button.

- **Guest viewing a screen share**

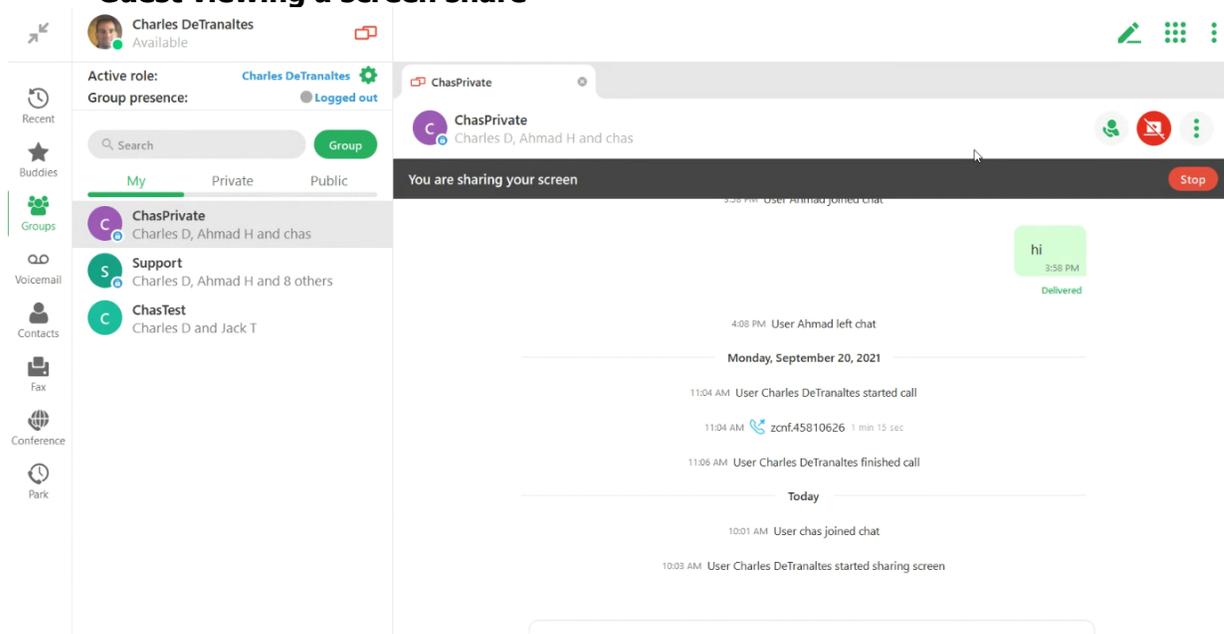


Click Stop to end the viewing session.


- **Joining a conference call**

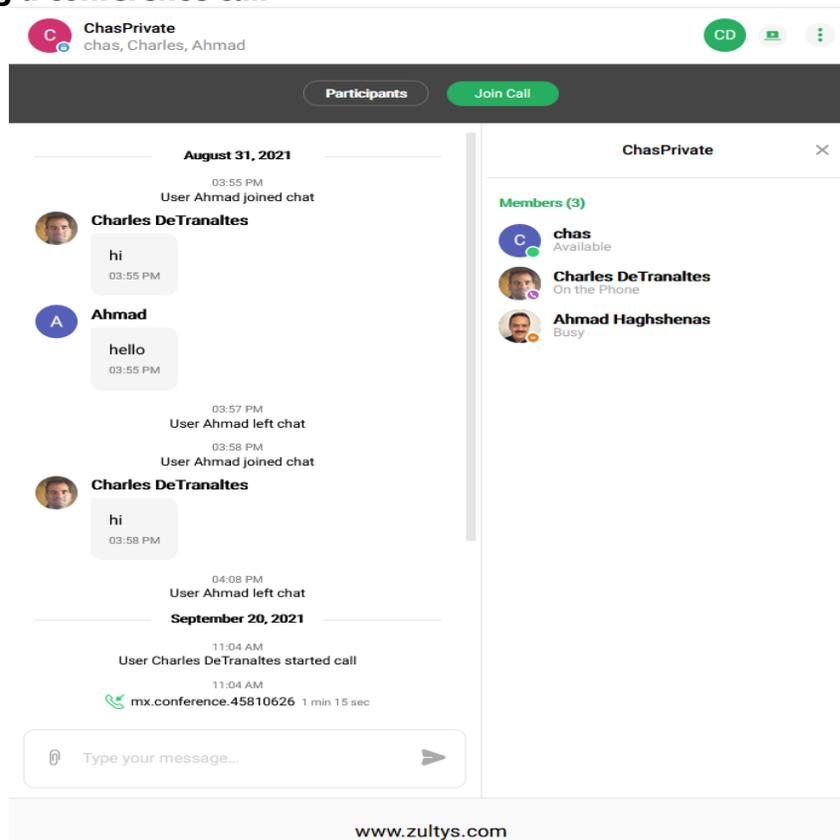

Click the Join call button. You will be placed into the MXconference with other members.

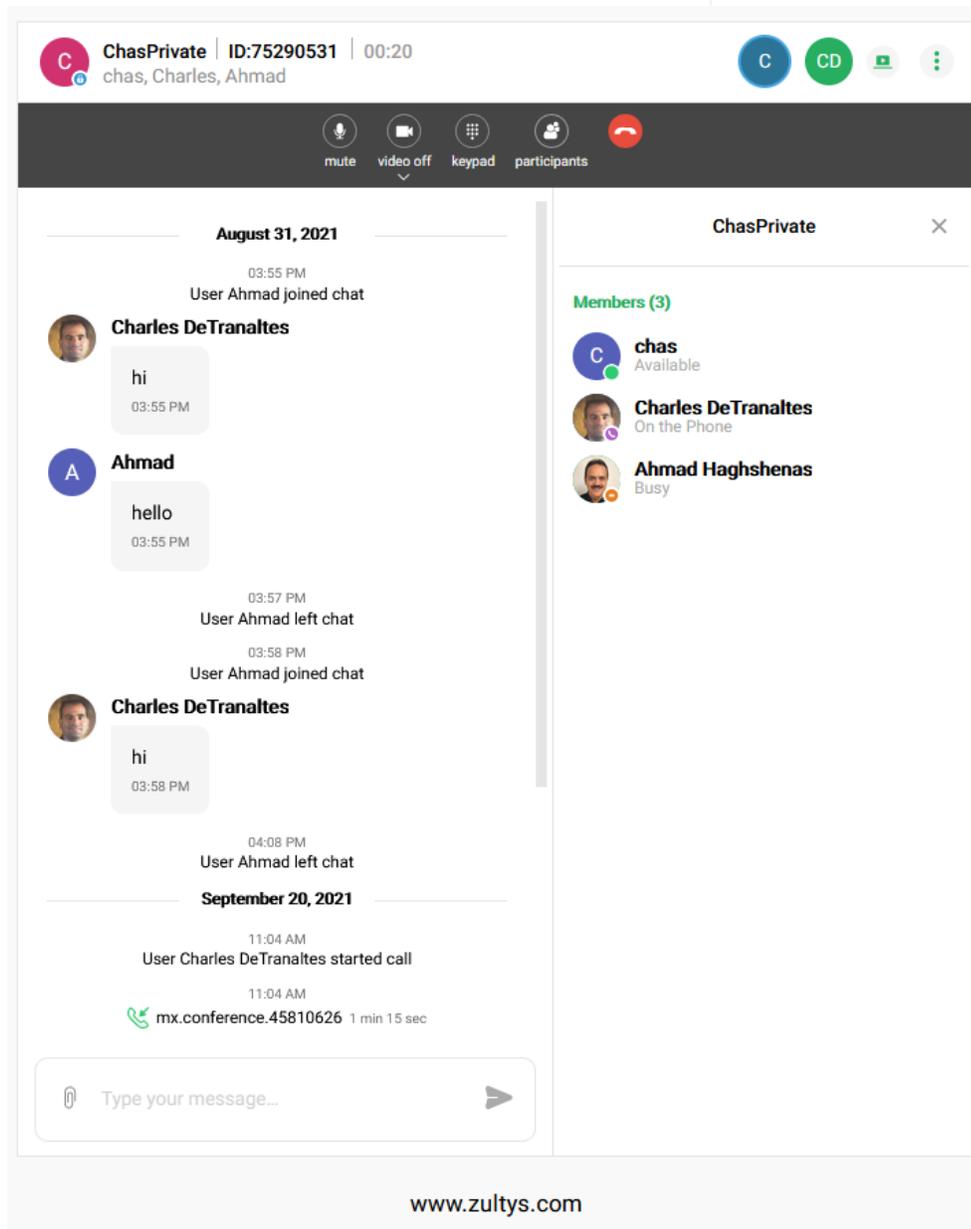


- **Guest viewing video**

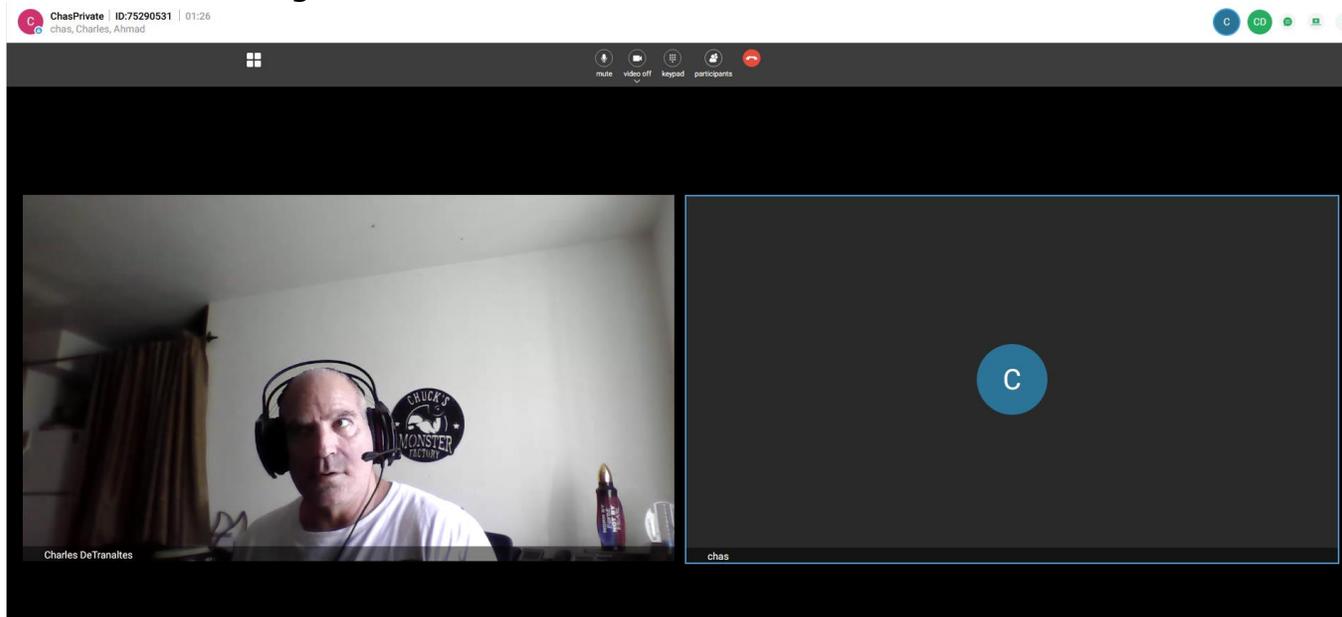

Click the video on/off button in the control menu to enable/disable the camera.


- **Guest receiving file share**

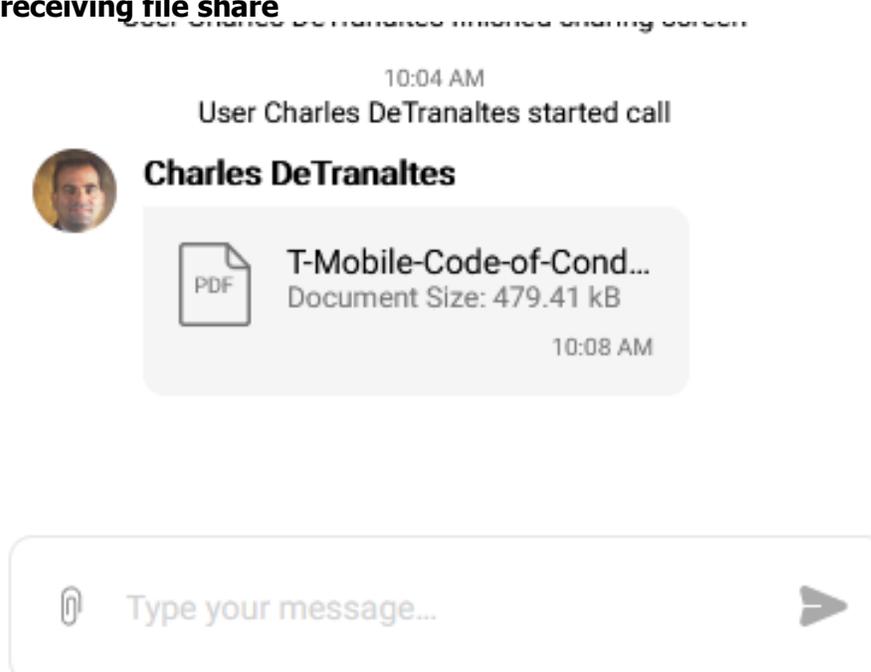

- **Guest sending a file**


Click the paperclip icon in the chat area.

Navigate to the desired file and click open. The file is sent to all group members.

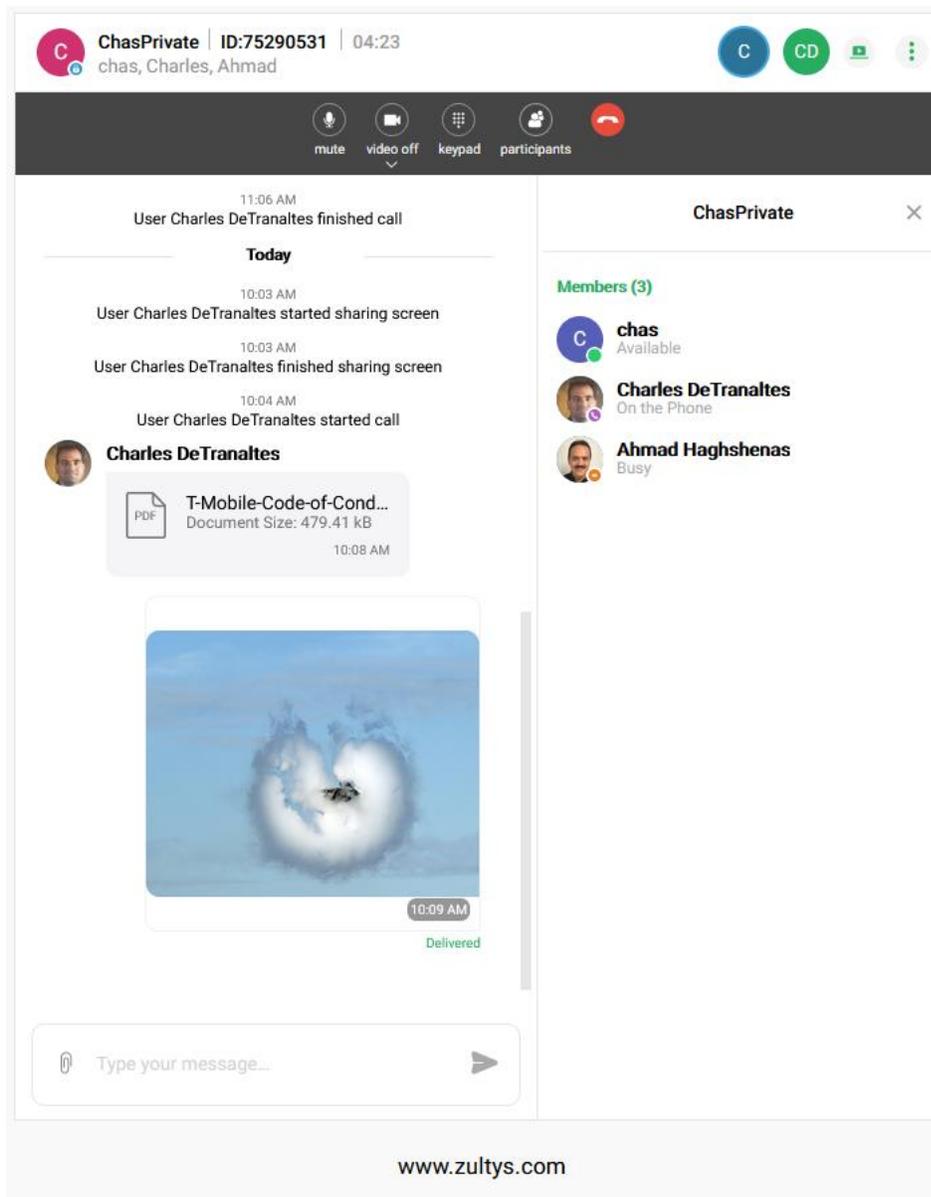

- **Minimizing participant screen**

Click the X next to the group name /member list to hide the participants.

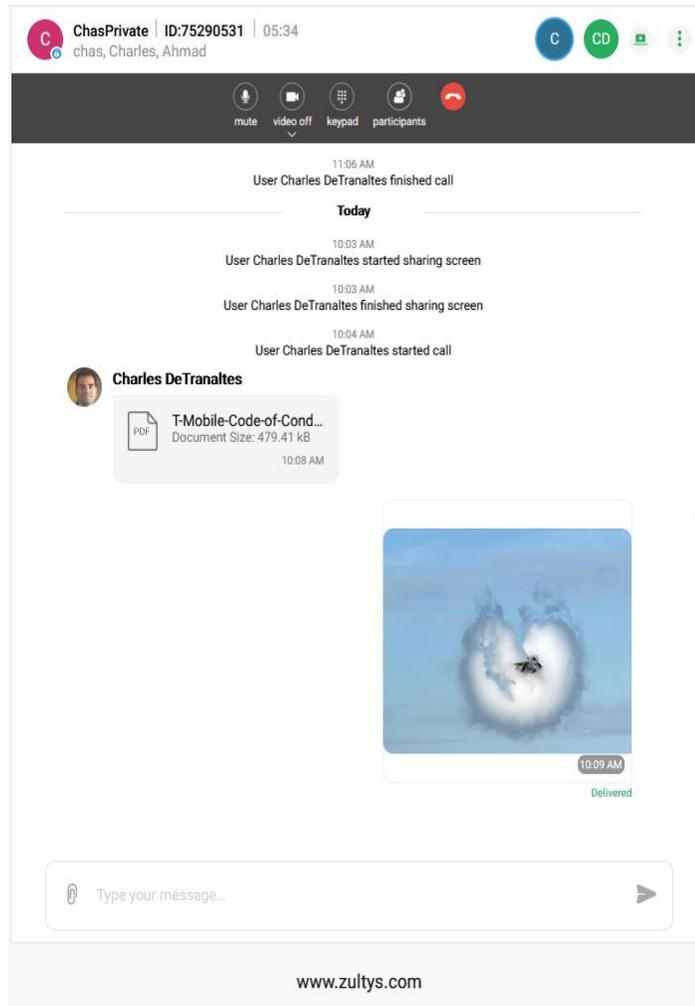


3.1.7 Screen Sharing

You may share your screen with other group members in a Chat session (internal and external) or when you call a user.

NOTE: You must be in expanded screen mode to utilize this feature.

3.1.8 Chat session

- While in the Chat group or user chat, click the share screen icon. Participants' are notified that you started your screen share and will be viewing your screen.

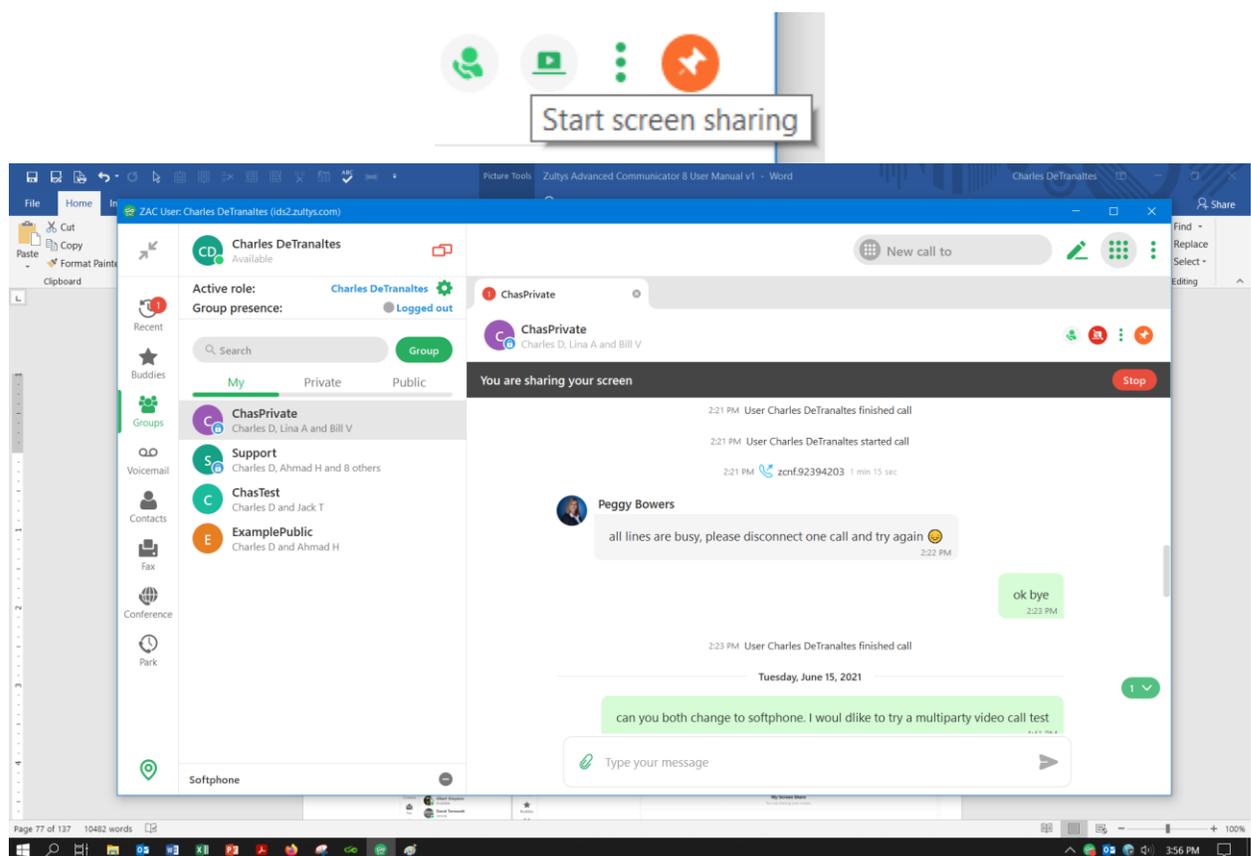


- Users in the Chat select the Join screen sharing session to view the presenter's screen:
- When you are finished sharing your screen, click the Stop button. Participants' are notified that you stopped your screen share.


Not that the screen share supports from one presenter to other members in the chat only.

- Presenters cannot be changed
- Screen sharing is a manual process, it may not be setup in advance or scheduled.

Ext user share

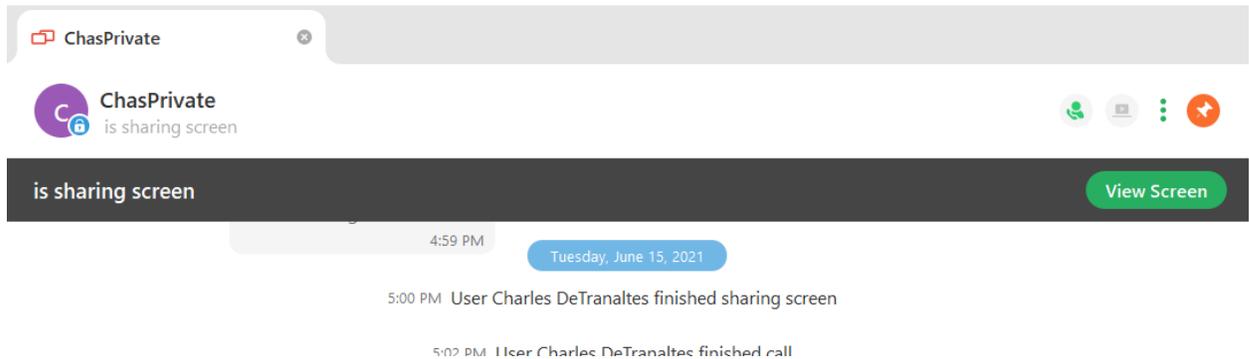


Viewing ext user screen:


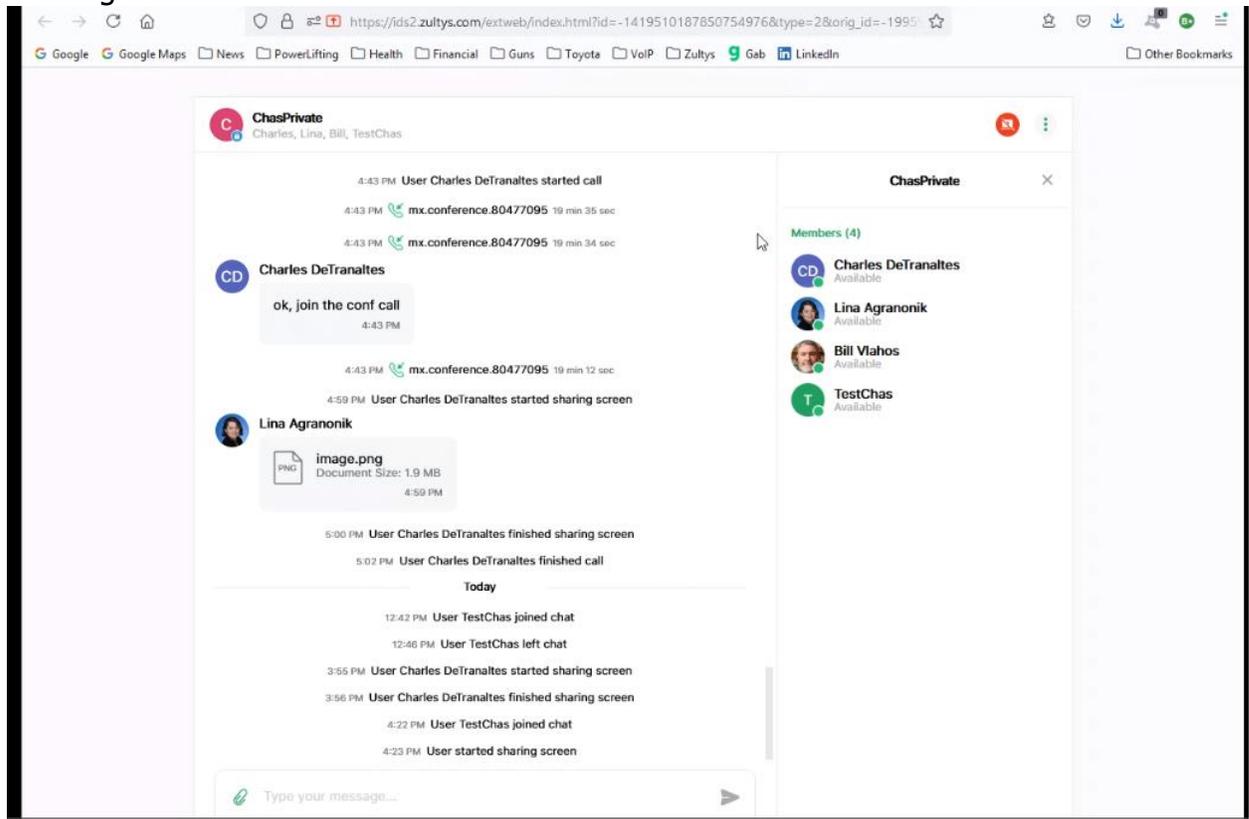


3.1.9 Spell check

You may utilize a spell check while in user or group chat.

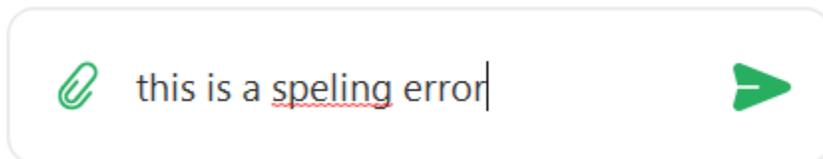


Right click on the mis-spelled word and select a replacement:

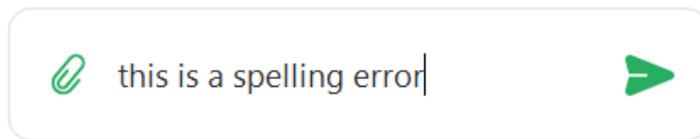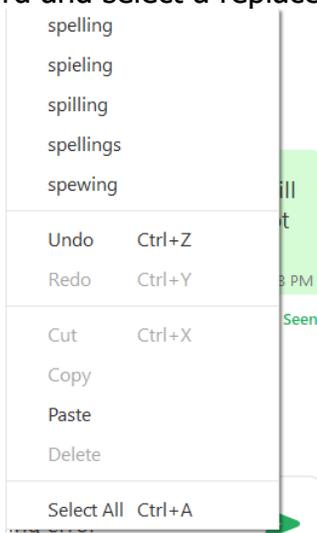


3.1.10 Call session

While on a call, click the Start screen sharing:

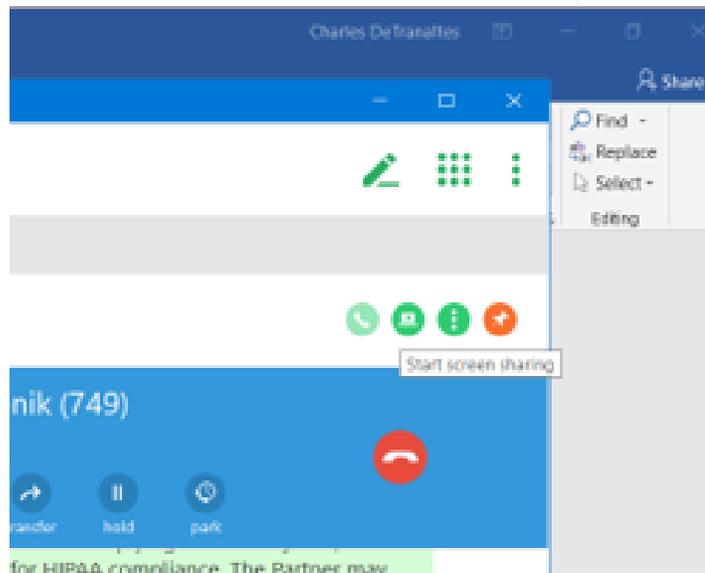

The user will be viewing your screen.

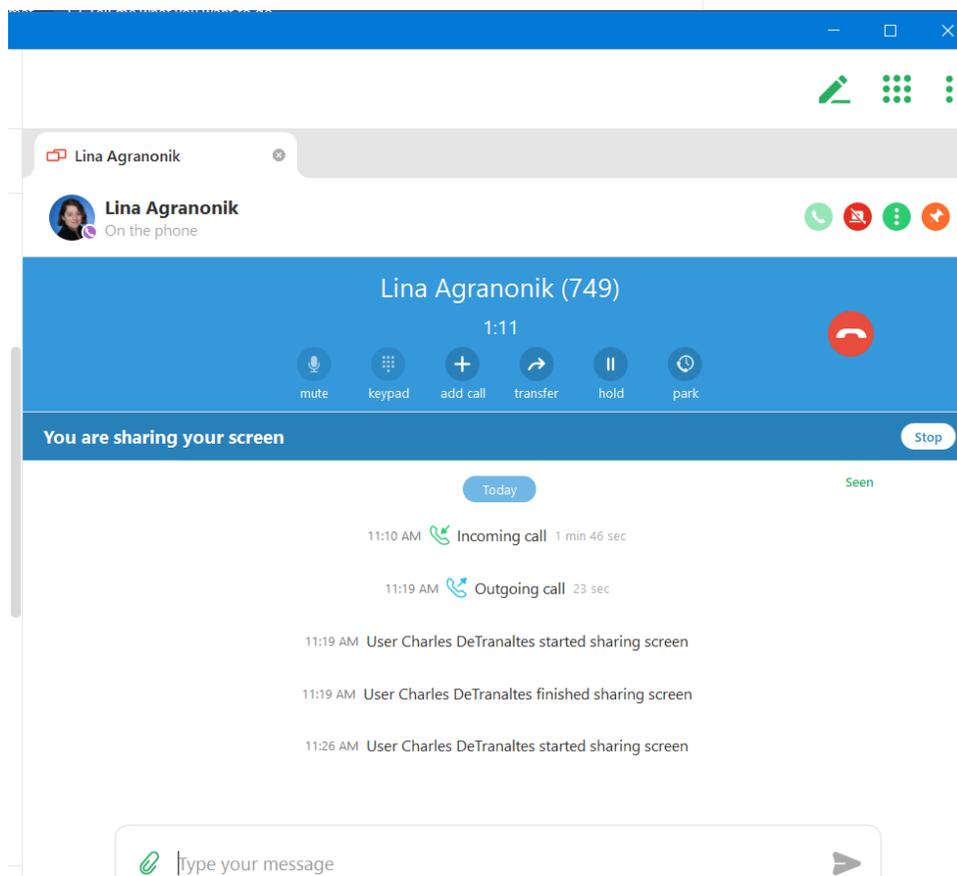


When you are finished, click the Stop icon to stop the screen sharing.


4 File Transfer

File transfer can be used in private (user to user) and group chat sessions. File transfer allows you to send a file to another user/group members. Users can download or view the file after they accept the file from you.


While in a Chat session with another user, select the Attach file icon in the text box window.

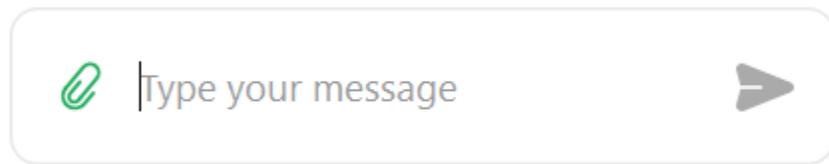


A file explorer window will open. Navigate to the desired file.

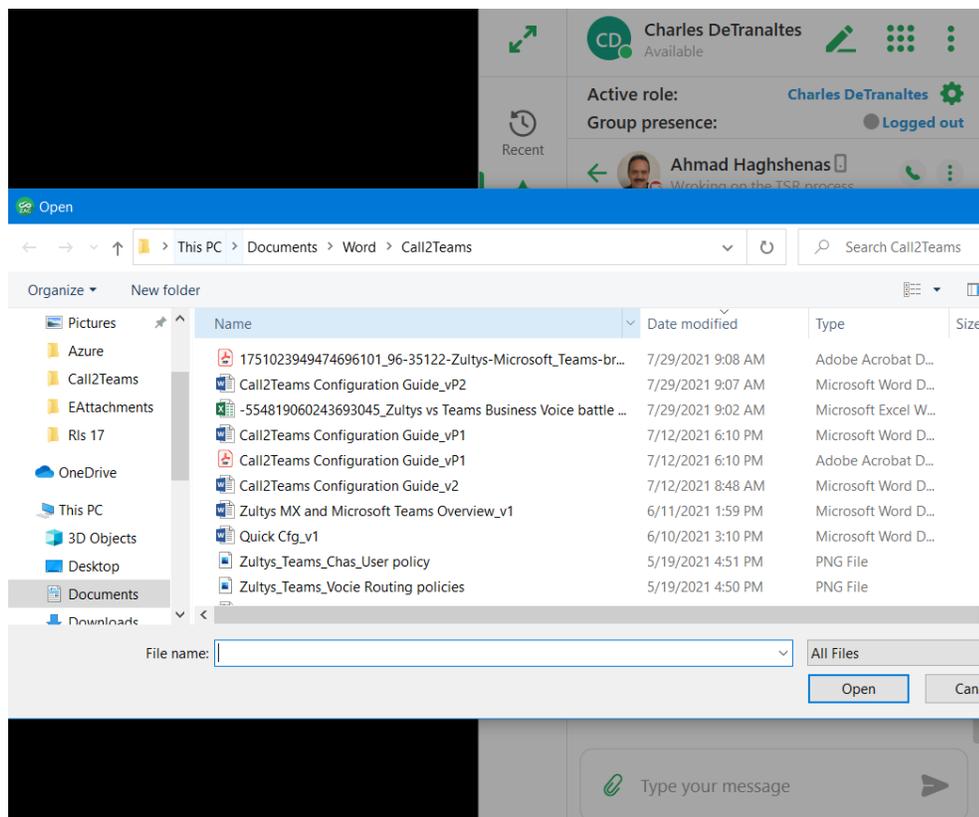

You may drag and drop the file to the chat window to send the file.

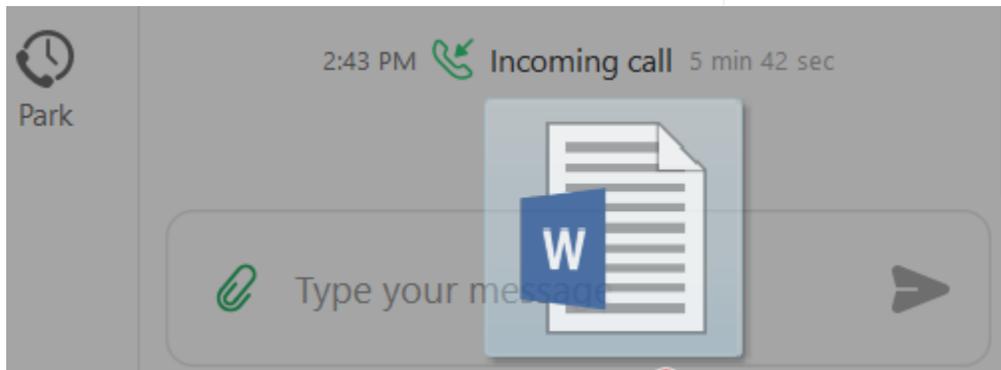

The user will receive the file.

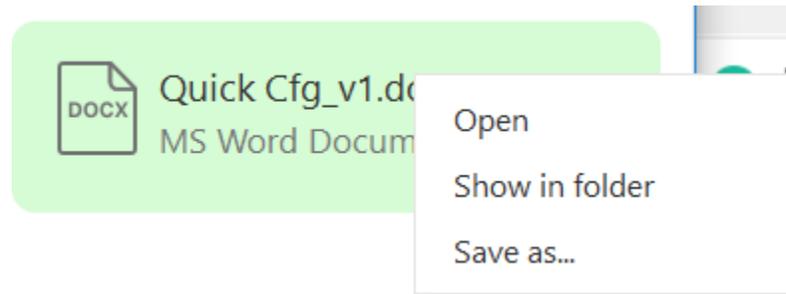

Right mouse click will display the option menu:

Open – Opens the file in the native program.

Show in folder – Displays the file in the Windows file explorer screen.

Save as – Saves the file to the storage location the user chooses.

4.1.1 Screenshot

You may paste screenshots you captured to the clipboard into a user chat. After you capture the desired screenshot and while in a user chat, press CTRL-V (Windows) CMD-V (Macintosh) or right mouse click to display the context menu and select Paste.

Note: File Transfer limits:

System	Limit
MX-SE, MX-E, MX-E+, MX-E++	10Mb
MXvirtual	50Mb


Note: File transfer in ZAC 8.0 is NOT compatible with previous versions of ZAC (7 and below) as well as MX systems running 16.04 (and below).

4.1.2 Recent Images/Files

When you view a Buddy or Contact, you may display images/files you have shared with that contact.


Right click on the buddy/contact

Click Files and Links

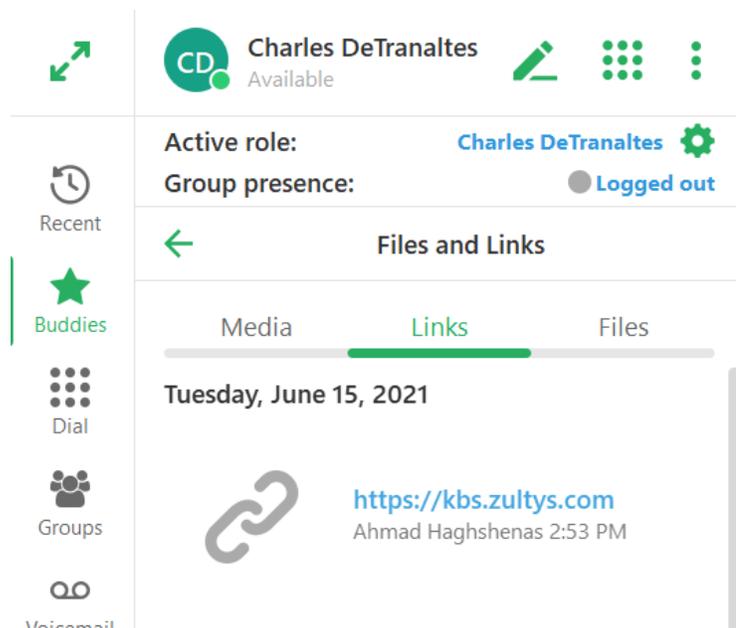


A list of all shared files will appear. You may select to view either media, Links, or Files.

You may open the Link in a browser or preview the link in this screen if the link is capable of providing a preview.

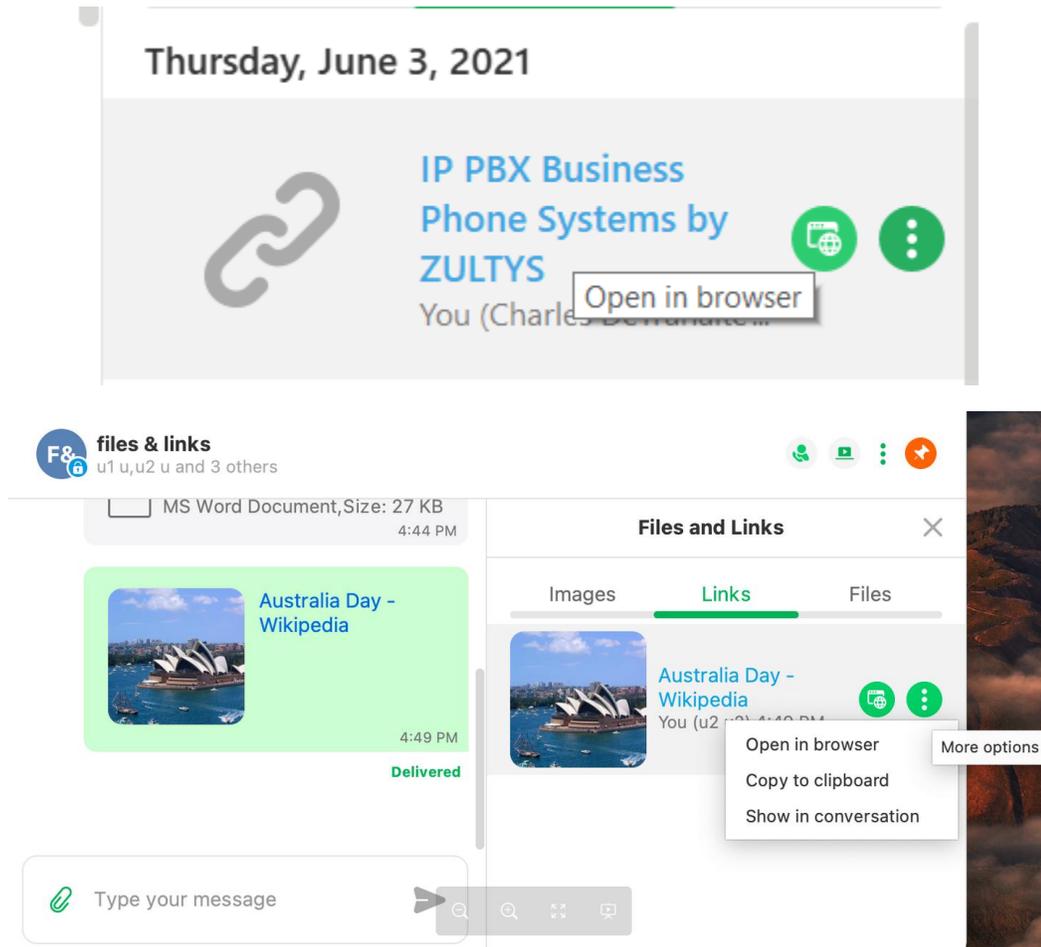

Click the more options icon to display additional options.

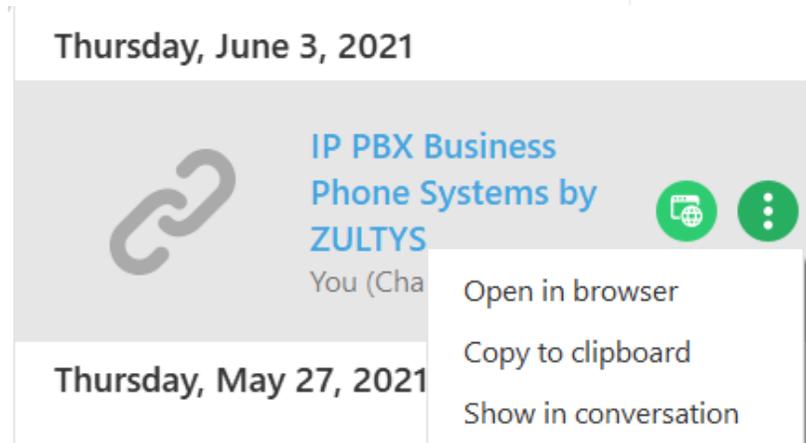

Open in browser – Opens the link in a web browser.

Copy to clipboard – Copies the link to the clipboard.

Show in conversation – Places the link in the conversation thread associated with the user.


4.1.3 File/Link storage display

You may view the amount of storage space in use and remaining for files and links for each user in the system. This may be done from compact or expanded mode.

Compact mode:

Right click the user and select files and links.

Click the storage icon next to the Files and Links title. The storage space will be displayed.

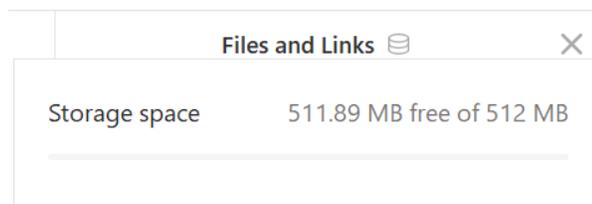


5 Fax

This area allows you to view, send and manage the faxes you have.

5.1.1 View:

You may view faxes in your inbox, sent, and Deleted tabs.

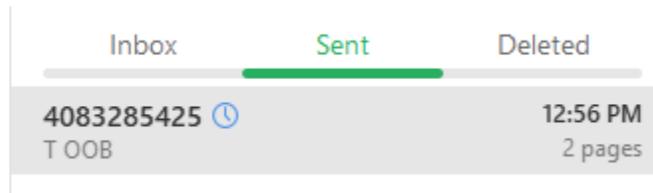


5.1.2 Delete


Delete – Deletes the fax from the current box. If you are deleting from the delete box, you will be asked for a confirmation.

Delete multiple or all faxes – You may delete multiple or all faxes at one time. To do this, perform the following:


Click the Delete icon:

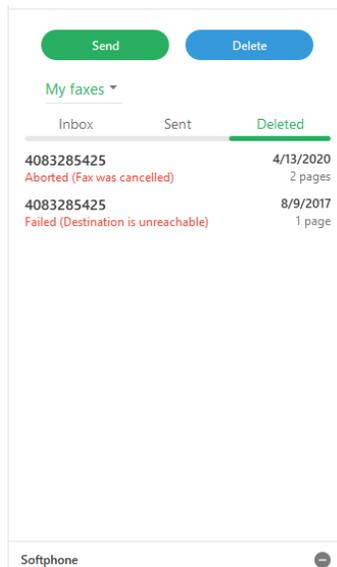

Select the faxes to be deleted or select Delete All.

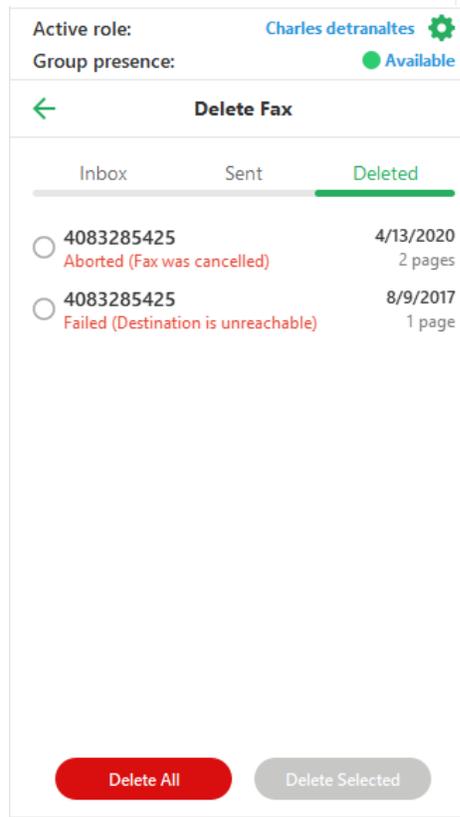


Click Yes at the confirmation:

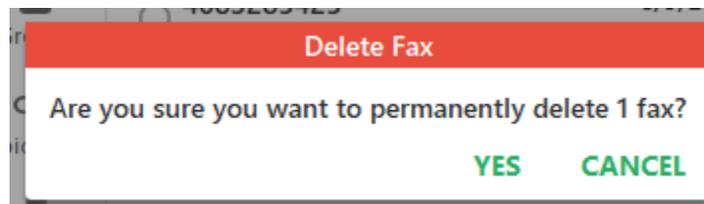


5.1.3 Send

Click Send to create a new fax.

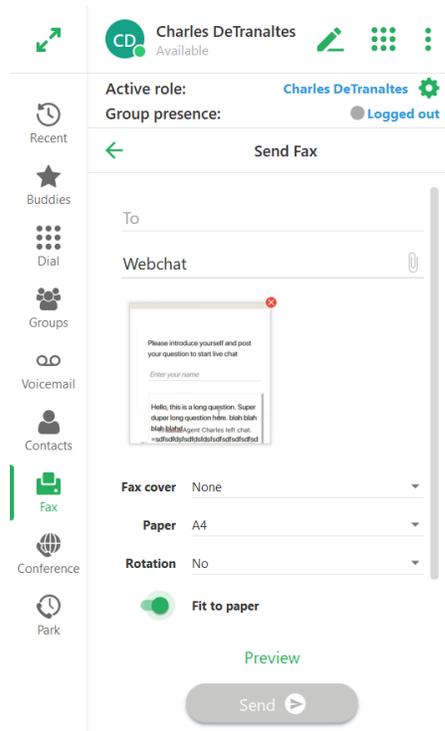

Enter the fax number to send to and press ENTER.

Attach the desired file.

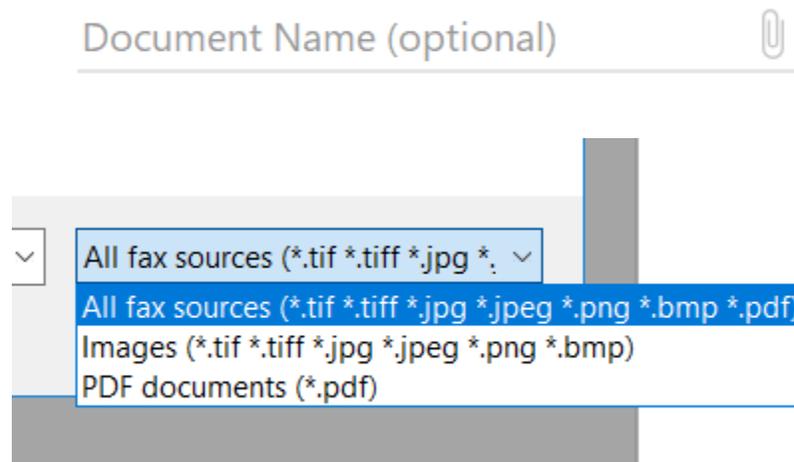

Note that only (.jpg, .jpeg, .png, .bmp, .tif, .tiff, and .PDF file types are supported).

Select a fax cover page if desired from the list.




Click Send

You may also schedule a fax to be sent at a predetermined date/time.

Click the Schedule checkbox.



Enter the desired date/time and desired parameters.

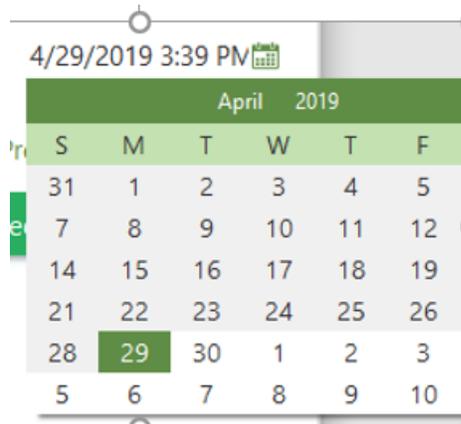


Click Schedule.

5.1.4 Fax receipt

You may view a fax receipt after sending a fax that displays sender information, date, type, number of pages, and the fax result.

Right click on a fax item

Select Show Fax Receipt

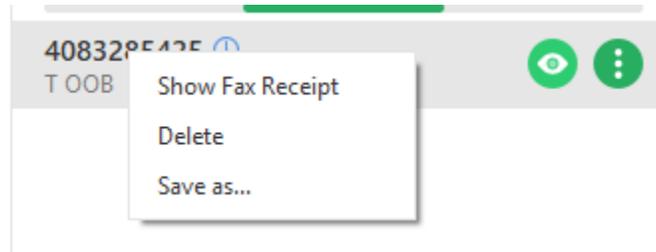


The receipt information is presented in a separate window

Zultys Fax Printer				Chas 100 4/13/2020 12:57 PM	
Data	Time	Type	Identification	Pages	Result
4/13/2020	12:56 PM	Sent	4083285425	2	


5.1.5 Print to Fax (Windows only)

The Zultys Fax Driver will be used to install a printer on your Windows PC. The Zultys Fax Driver will install a printer named Zultys Fax to your PC. This printer will be available from your applications to be used to send the document to ZAC as a properly formatted fax file. Before installing the Zultys Fax Driver, you must download the software from the MX system through the MX browser interface.


- Close ZAC completely prior to install the FAX driver in Windows.
- Open a browser on your PC (such as Firefox or Internet Explorer) and enter the IP address/domain name of your MX system. This accesses the MX landing page of the system (unless that access has been disabled by the system administrator).
- Select the correct fax driver as shown below(32 or 64 bit). The browser downloads the Zultys Fax Driver software. You may then install the driver on your computer. Press the Next buttons until application is installed. At the end of the installation press the OK button to complete the installation of the Zultys Fax Driver.

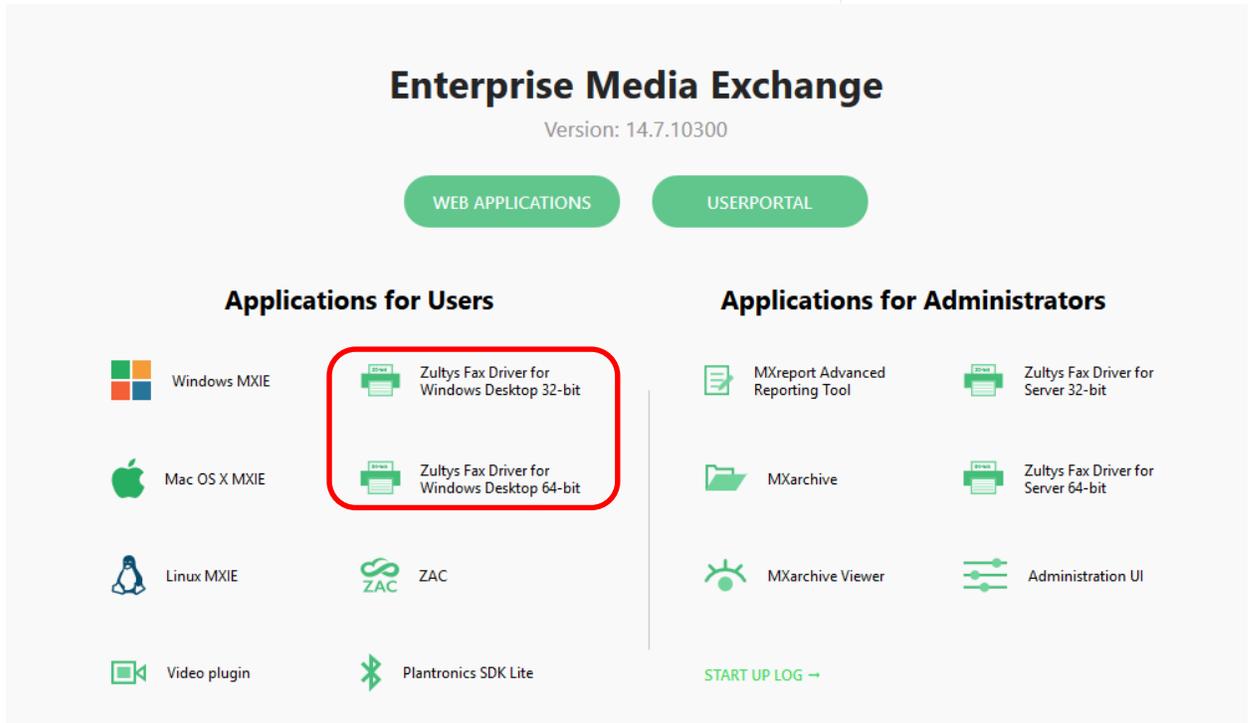


After selecting the appropriate driver, in this example we will use the Windows 64bit driver, double click on the downloaded file:

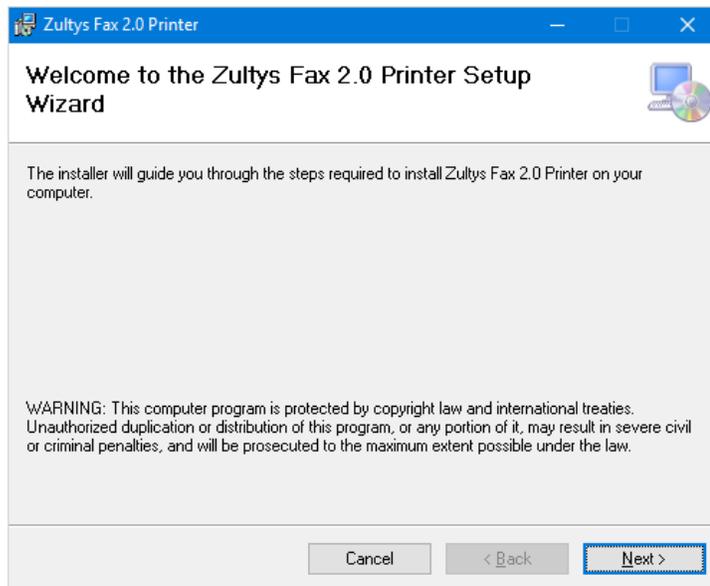


Click Next

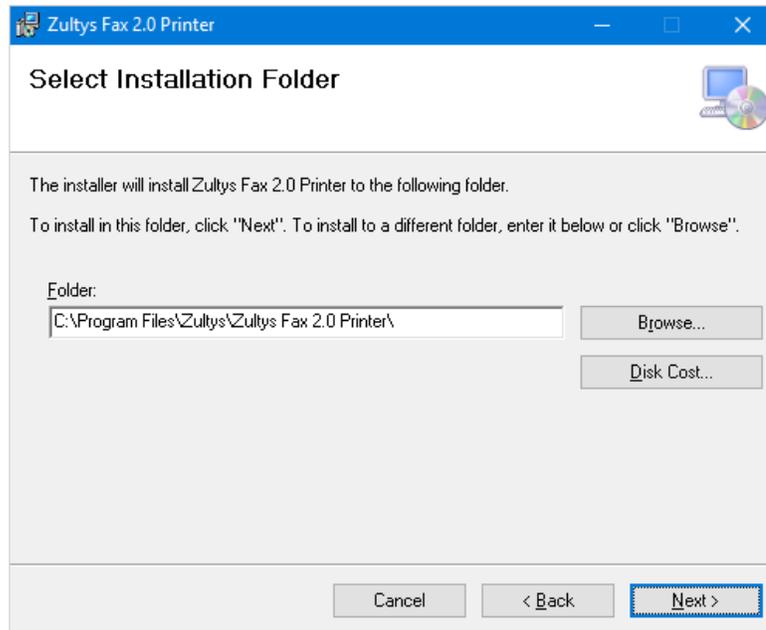


Choose a location, the default location is suggested, click Next

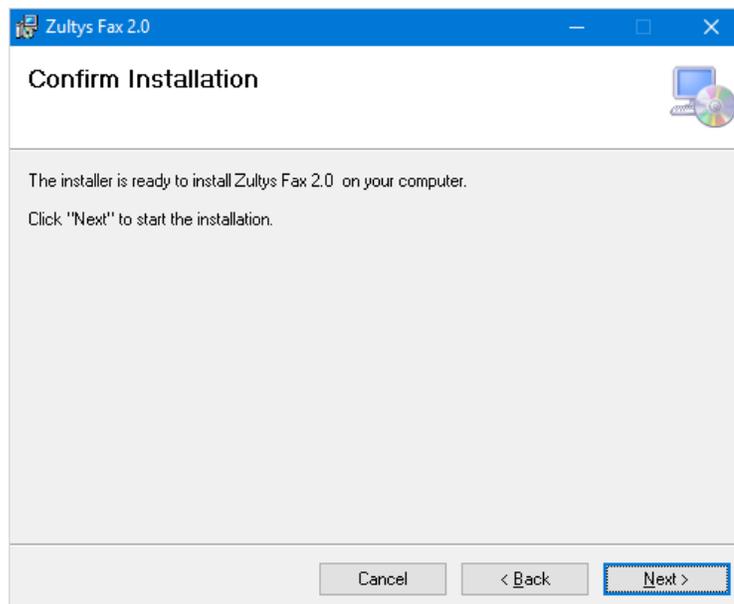


Click Next to confirm installation

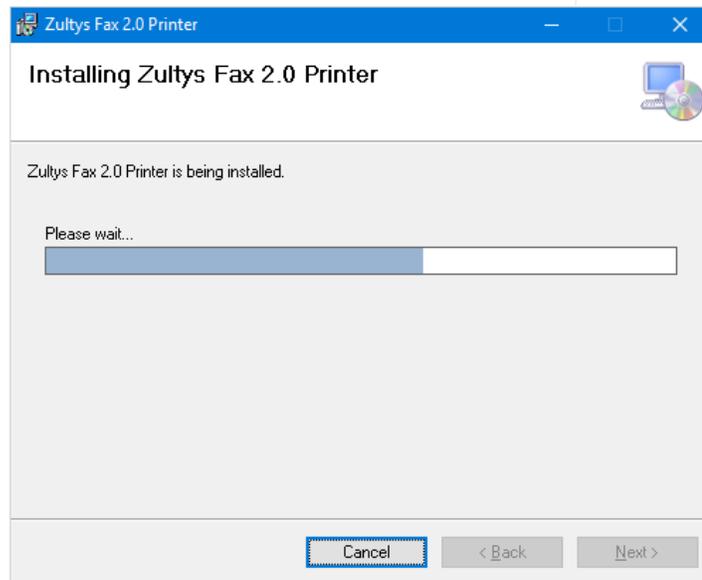

After installation a confirmation screen is presented.

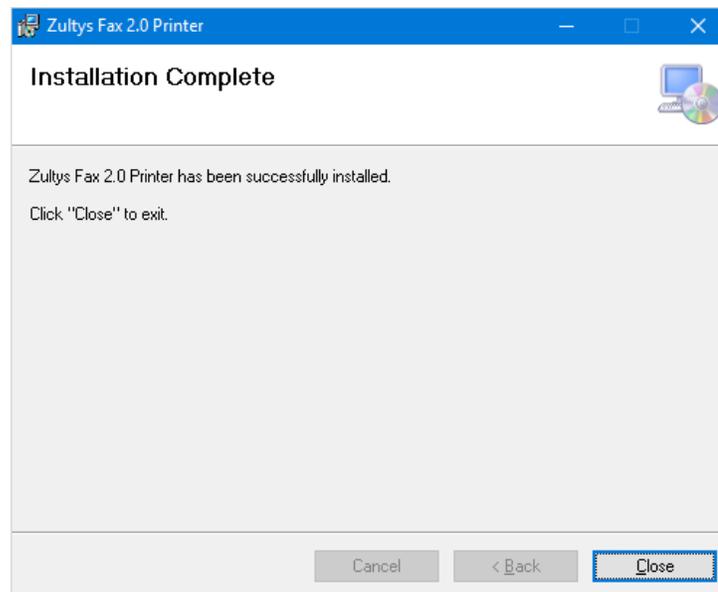


- After installation of the fax driver, you must re-open ZAC.
- To send a fax ZAC must be running.
- After the installation is completed, the **Zultys Fax** printer will be added to your system printer as shown in below.

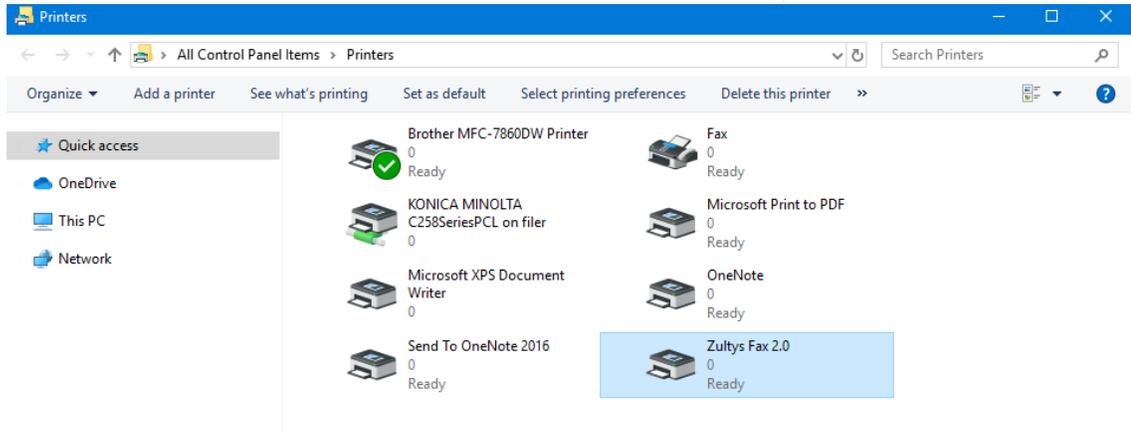

5.1.6 Sending a fax from the Fax Driver:

Ensure you have configured a MX interface to use the MX fax server to originate and terminate faxes.


- The **Zultys Fax** will be available to all applications that support printing.
- To fax a document, select the **Zultys Fax** as shown using Microsoft Word to fax a word document.

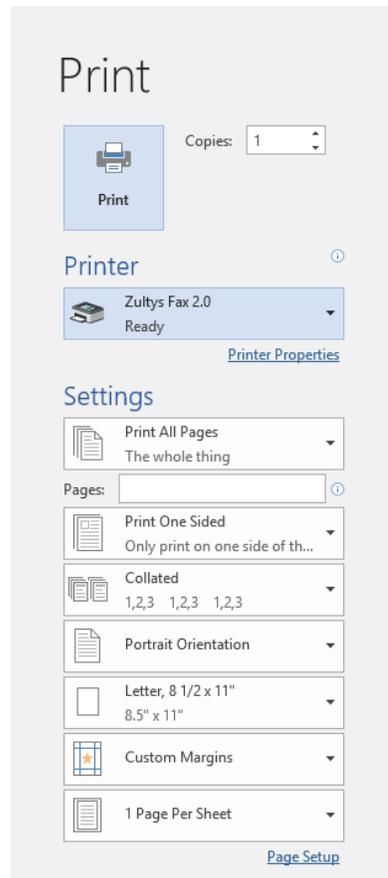

- After the document has been processed ZAC will notify you of additional steps required to send the fax as shown below.
- The fax recipient, schedule, format, and confirmation steps to send the fax are shown below. These steps are performed in sequence and are required to send the fax.
 - Enter in the Fax number. You may type to locate contacts in the address book.


6 Conference

This area allows you to schedule an MXconference as well as utilize an MX external guest link for external guests to join. In addition, you may utilize the MXmeeting application as well.

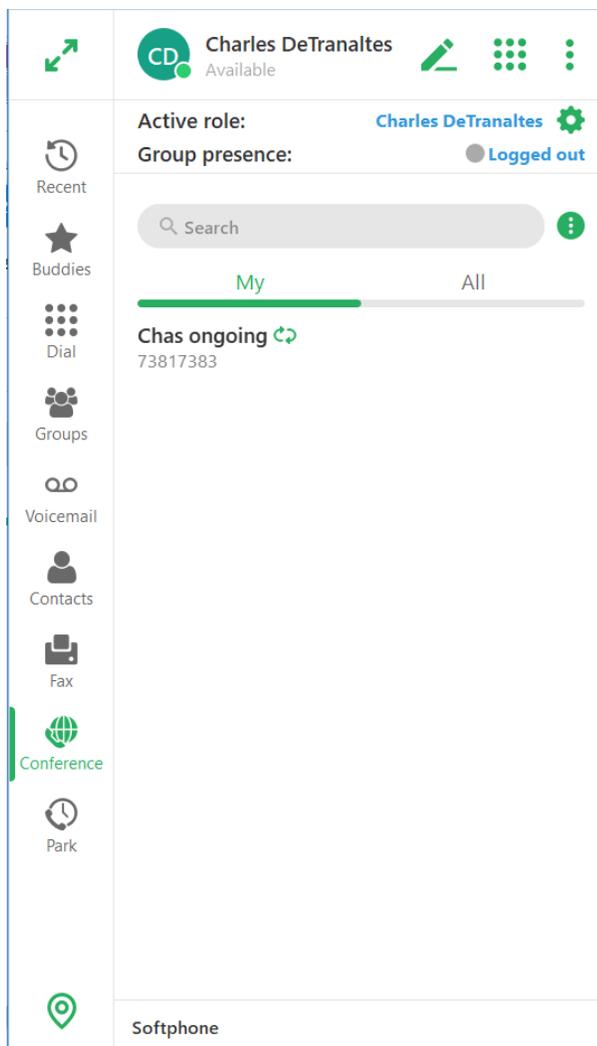

6.1.1 Create an audio conference:

1. Click the conference icon.
2. Click the options icon and select Schedule.

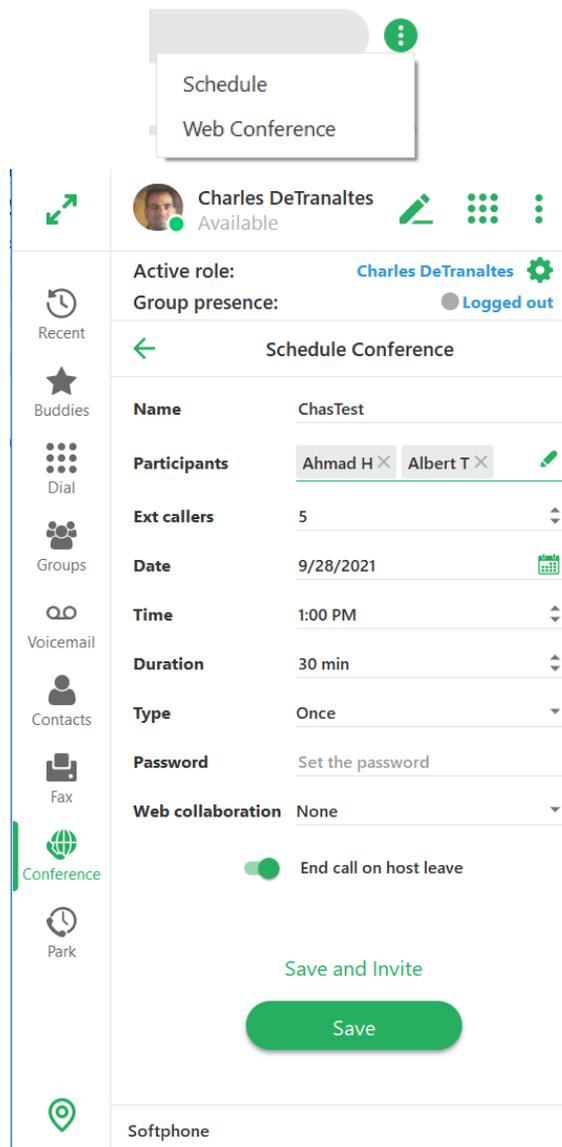

- Enter the following information about the conference:
 - Name** – The name of the conference participants will see.
 - Participants** – You may select other MX users directly by clicking on the + icon. Check all conference participants and click Save.

Note: Participants will be notified via ZAC of the conference. The conference will also be placed in their Outlook calendar. They click the Join option to enter the conference when it starts. There is no need to e-mail internal users the conference information.



Ext callers – You may select the total amount of external users (guests) that may participate in the conference. Any guests above this number will not be allowed to join the conference.

Date – The date the conference will commence.

Time – The time the conference will commence.

Duration – The duration the conference will last.

Type – Select one time or recurring.

Password – Enter a password for the conference. The default (empty) entry is no password required.

Web Collaboration – Select this option if MXmeeting will be utilized for collaboration.


Leave None if MX collaboration (external Guests) is to be utilized for collaboration.

4. Check if the conference is to end when the host leaves. The conference is ended and all parties are disconnected.
5. Click **Save and invite** to save the conference and generate an Outlook e-mail invite.
6. Click **Save**. This will save the conference. The conference should appear in the conference list:


The screenshot shows a user interface for managing conferences. At the top, there is a user profile for Charles DeTranltes, who is available. Below this, there are options for 'Active role' (Charles DeTranltes) and 'Group presence' (Logged out). A search bar is present with a magnifying glass icon and a menu icon. Below the search bar, there are two tabs: 'My' (selected) and 'All'. The main list shows two entries: 'Chas ongoing' with a green progress bar and a refresh icon, and 'ChasTest' with a play button and a menu icon. On the left side, there are navigation icons for 'Recent', 'Buddies', 'Dial', and 'Groups'.

6.1.2 Creating a conference with MXmeeting collaboration


1. Click the conference icon.
2. Click the options icon and select Schedule.

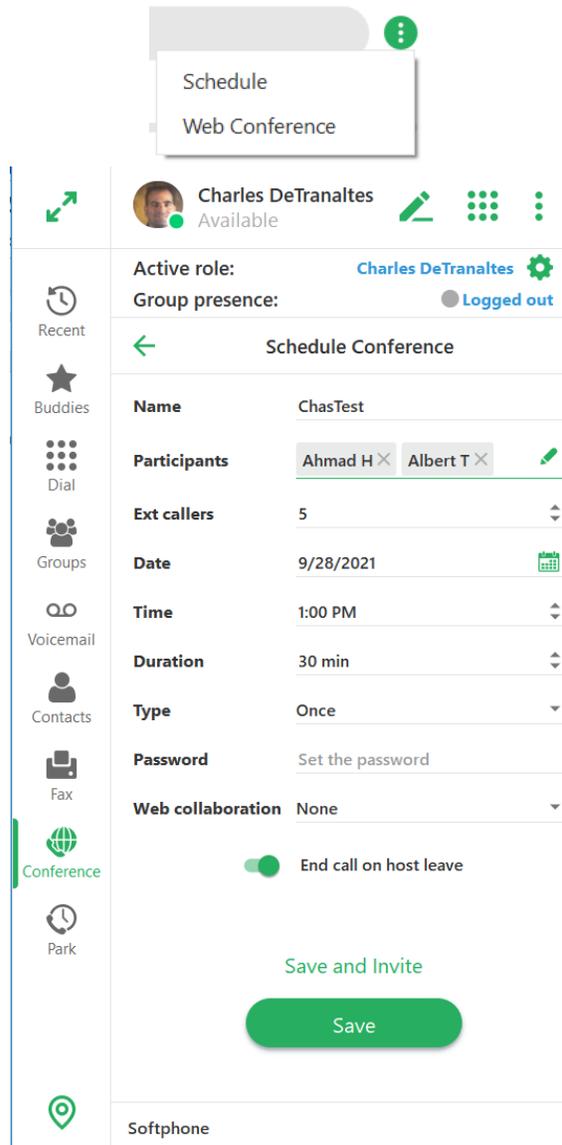

3. Enter the basic information as in the audio conference procedure. To add the MXmeeting collaboration functionality you will edit:
Web Collaboration – Select the interactive or seminar options if MXmeeting will be utilized for collaboration.

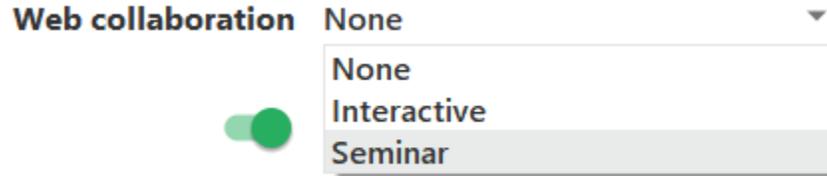


E-mail invitations sent with MXmeeting collaboration set will include the link to join the MXmeeting in the e-mail body:

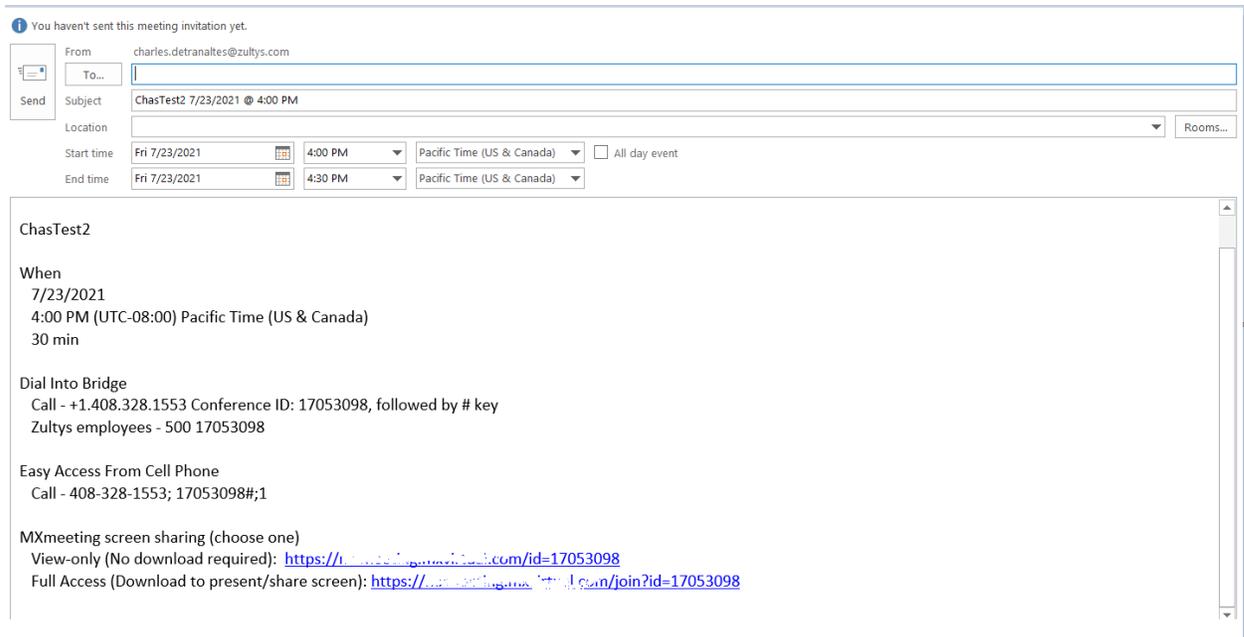

6.1.3 Creating a conference with MX Guest user collaboration

4. Click the conference icon.
5. Click the options icon and select Schedule.

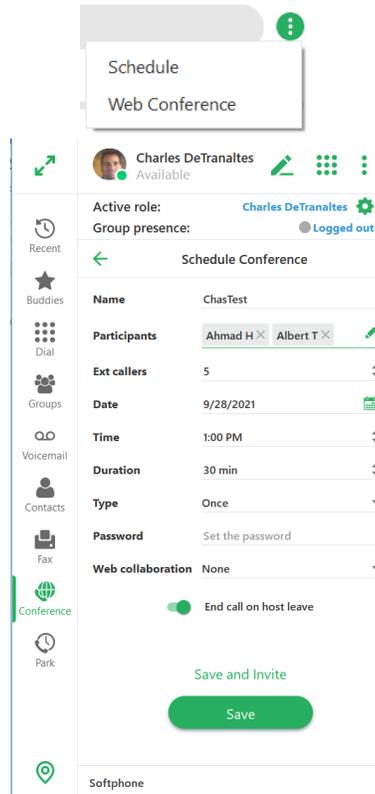


Enter the basic information as in the audio conference procedure. Make sure Web Collaboration is set to None.


Click Save.

- **Generating and Adding guest link to conference invitation**


1. Click the desired conference from the list and select the more options icon.

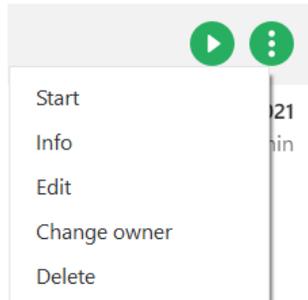

2. Select Info from the options menu.

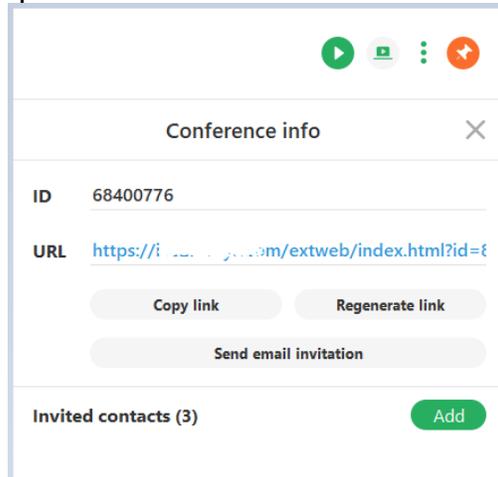

3. If configured, click the Send email invitation button. An invitation will be created and the link associated with the conference is automatically inserted into the body of the e-mail.
If this option is not configured (check with your administrator) you can manually insert the link as follows:
4. Click Copy link. Enter the expiration time and optional password. Click OK.

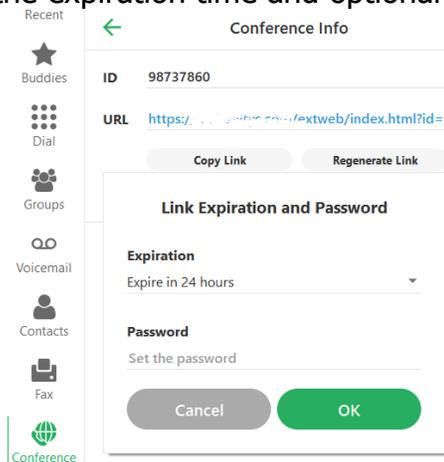

5. Click Copy link. The link is copied to your clipboard.
6. Click Send e-mail invitation. An e-mail invitation is created and displayed.

You haven't sent this meeting invitation yet.

From: charles.detrana@zultys.com

To: []

Subject: ChasTest 7/23/2021 @ 12:30 PM

Location: [] Rooms...

Start time: Fri 7/23/2021 12:30 PM Pacific Time (US & Canada) All day event

End time: Fri 7/23/2021 1:00 PM Pacific Time (US & Canada)

Please join my conference call

ChasTest

When
7/23/2021
12:30 PM (UTC-08:00) Pacific Time (US & Canada)
30 min

Dial Into Bridge
Call - +1.408.328.1553 Conference ID: 68400776, followed by # key
Zultys employees - 500 68400776

Easy Access From Cell Phone
Call - 408-328-1553; 68400776#;1

- If an external Guest link is to be included Paste the link into the e-mail invitation. Send to all participants.
Note: There is no need to include internal participants in the e-mail. Internal participants are notified and can join the conference without the need for access codes.



You haven't sent this meeting invitation yet.

From: charles.detrana@zultys.com

To: []

Subject: ChasTest 7/23/2021 @ 12:30 PM

Location: [] Rooms...

Start time: Fri 7/23/2021 12:30 PM Pacific Time (US & Canada) All day event

End time: Fri 7/23/2021 1:00 PM Pacific Time (US & Canada)

Please join my conference call

ChasTest

When
7/23/2021
12:30 PM (UTC-08:00) Pacific Time (US & Canada)
30 min


Dial Into Bridge
Call - +1.408.328.1553 Conference ID: 68400776, followed by # key
Zultys employees - 500 68400776

Easy Access From Cell Phone
Call - 408-328-1553; 68400776#;1

https://zultys.com/extweb/index.html?id=886332820370864681&type=2&orig_id=3192175830621567450


6.1.4 Starting and conference options

1. Click the start button or the options menu and select start to start the conference.

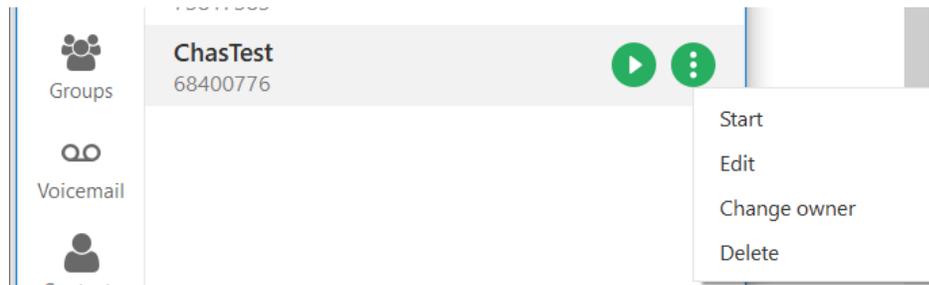


Start – Starts the conference call by accessing MXconference, enable Guest users to join, start MXmeeting if configured.

Edit – It is recommended to be in Expanded mode when choosing the Edit option.

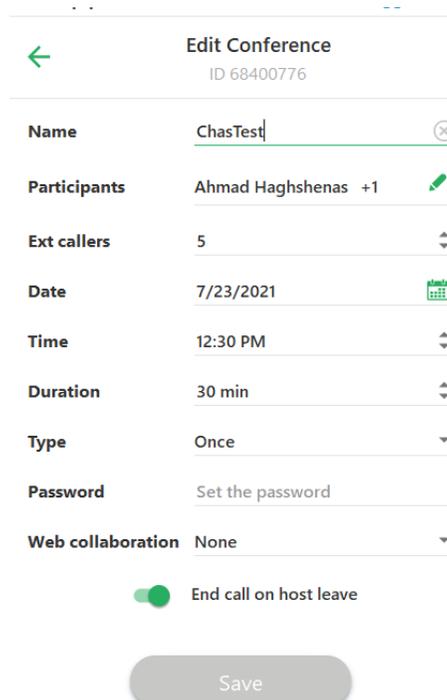


Change owner – Allows designation of another participant to be the owner of the conference. Check the desired participant from the list and click Save.

Delete – Remove the conference from the list and the MX system. MX will prompt for confirmation.

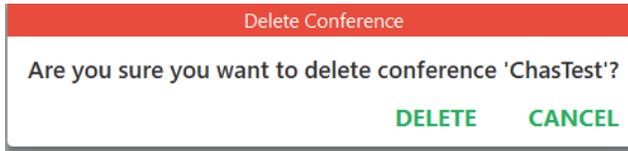


6.1.5 Host options

Show participants:

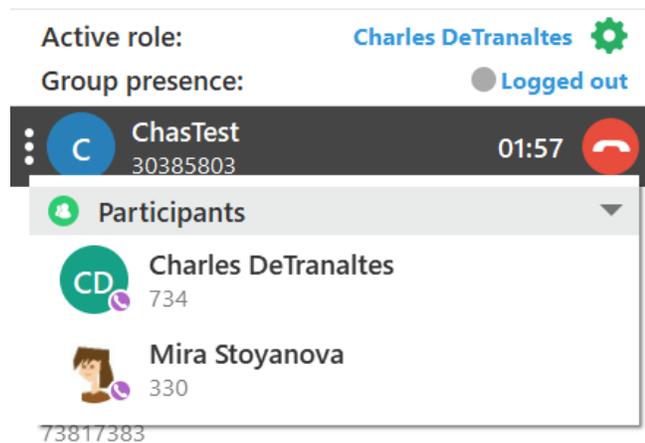


Mute or disconnect participants as the conference owner once the conference is started.

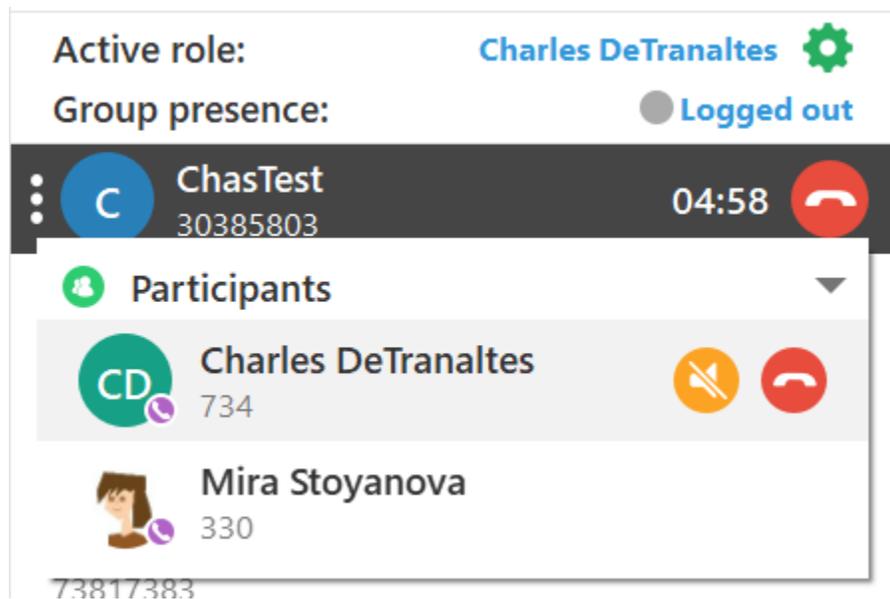

6.1.6 Web Conference


This feature allows you to start the MXmeeting application if it is configured.

Select the options menu

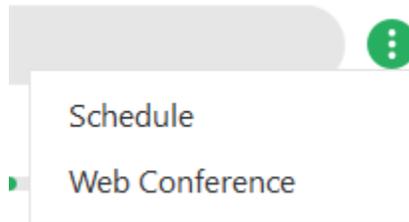

Click Web Conference.


The MXmeeting application will launch:

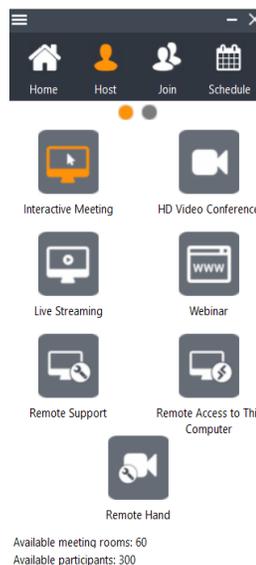


Refer to the MXmeeting user guide for MXmeeting operating instructions.

6.1.7 Conference description

When a conference is started, a description form will be displayed that provides conference information

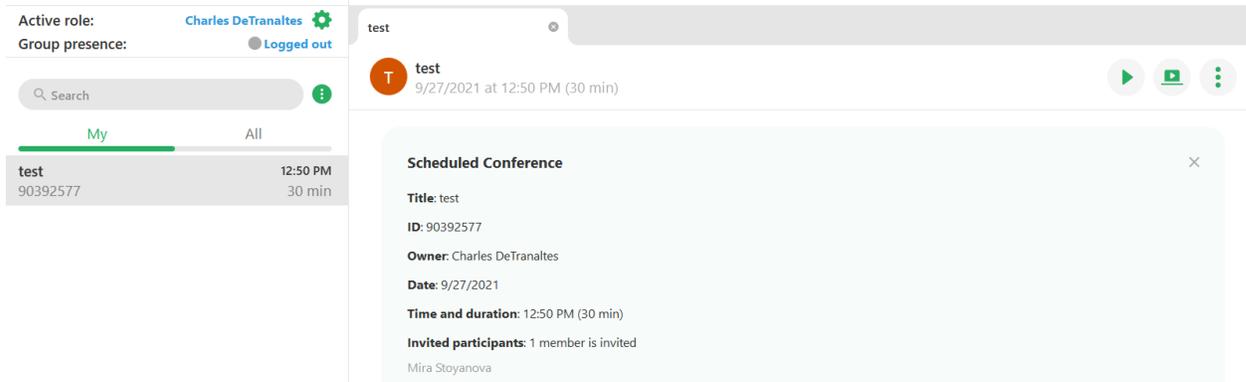

The screen will remain until the X icon is selected.

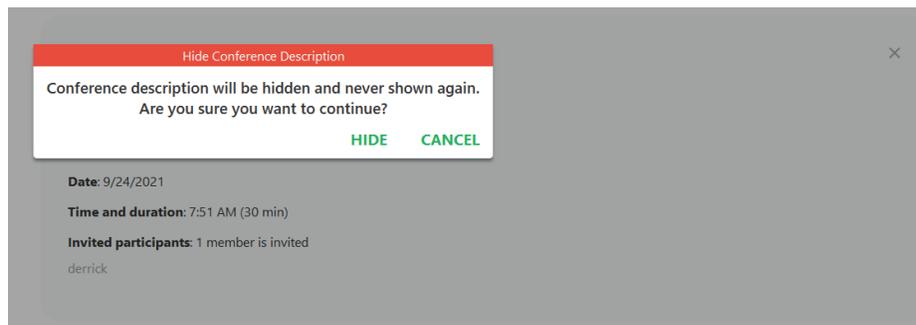


7 Notifications

The notification area indicates new/current/missed activity in the specific areas of the program. This provides an indication to the user that that area has had activity. If a specific area has activity, a notification will be presented indicating the total amount of activity for that area. Clicking on that area will reset the activity notification.

Activity notifications apply to the following areas in the program:

- Recents
- Dial
- Voicemail
- Groups
- Park
- Fax
- Conference

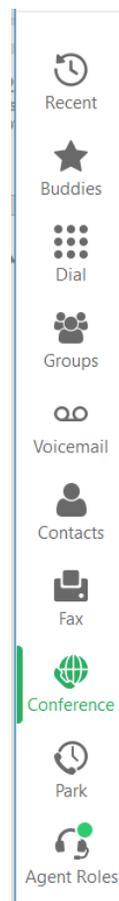

Notifications are displayed by the filter selected within an area. For example, in Recents you can filter by All, Calls, Messages. If you have the Messages filter selected, the notification screen will display notifications for messages. If the Calls filter is selected, notification will display notifications for calls only. This functionality applies to all areas where filters are provided.

Notifications may also appear when in expanded mode. If there is activity, the tab associated with that activity will display a notification if it is not in focus at the time of the notification event.




7.1 System Tray and Taskbar Options:


A user may access certain features of the program directly from the System Tray or taskbar. Features that can be accessed from the taskbar are:

- Presence state
- Presence note(**System Tray only**)
- Log out
- Open
- Exit

Right click on the ZAC icon in the system tray:

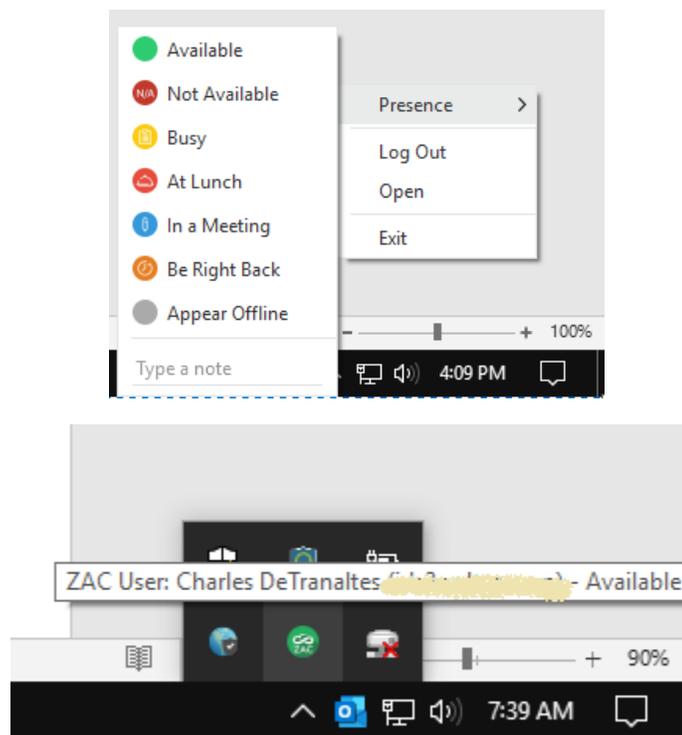


You may mouse over the icon to display user name, MX system, and presence state

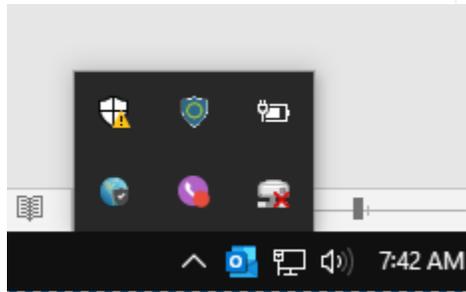

The icon will change to reflect the current presence status (on the phone shown)

Windows

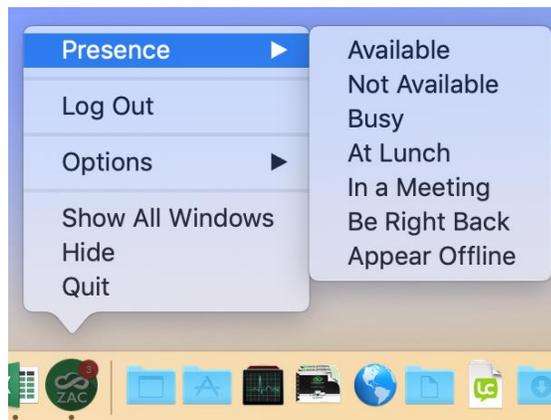

Macintosh

8 Guest Users


The Guest user feature allows MX users and MX group hosts to send a link to an external party so they may collaborate with MX users/groups. Guest users may chat, participate in audio/video conferences, file share and screen share with group members. Guests may also call hosts directly and vice versa.

Note: The Guest user feature requires configuration on the MX system. Users will not have access to the invite by external link feature if the MX is not properly configured. Check with your Administrator.

8.1 Guest users (invite external party)


You may invite an external party to a user Chat session. To do this:

Click your name to present the My Info screen:

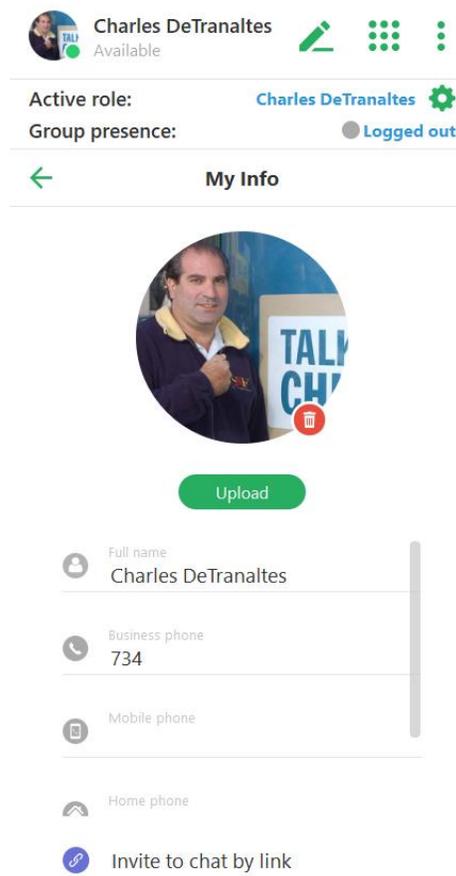

Click the Invite to chat by link option. A link URL will be copied to the clipboard. The external user will click the link, enter their name/password, select audio options and join the chat session.

When they enter the session you will receive a popup notification:

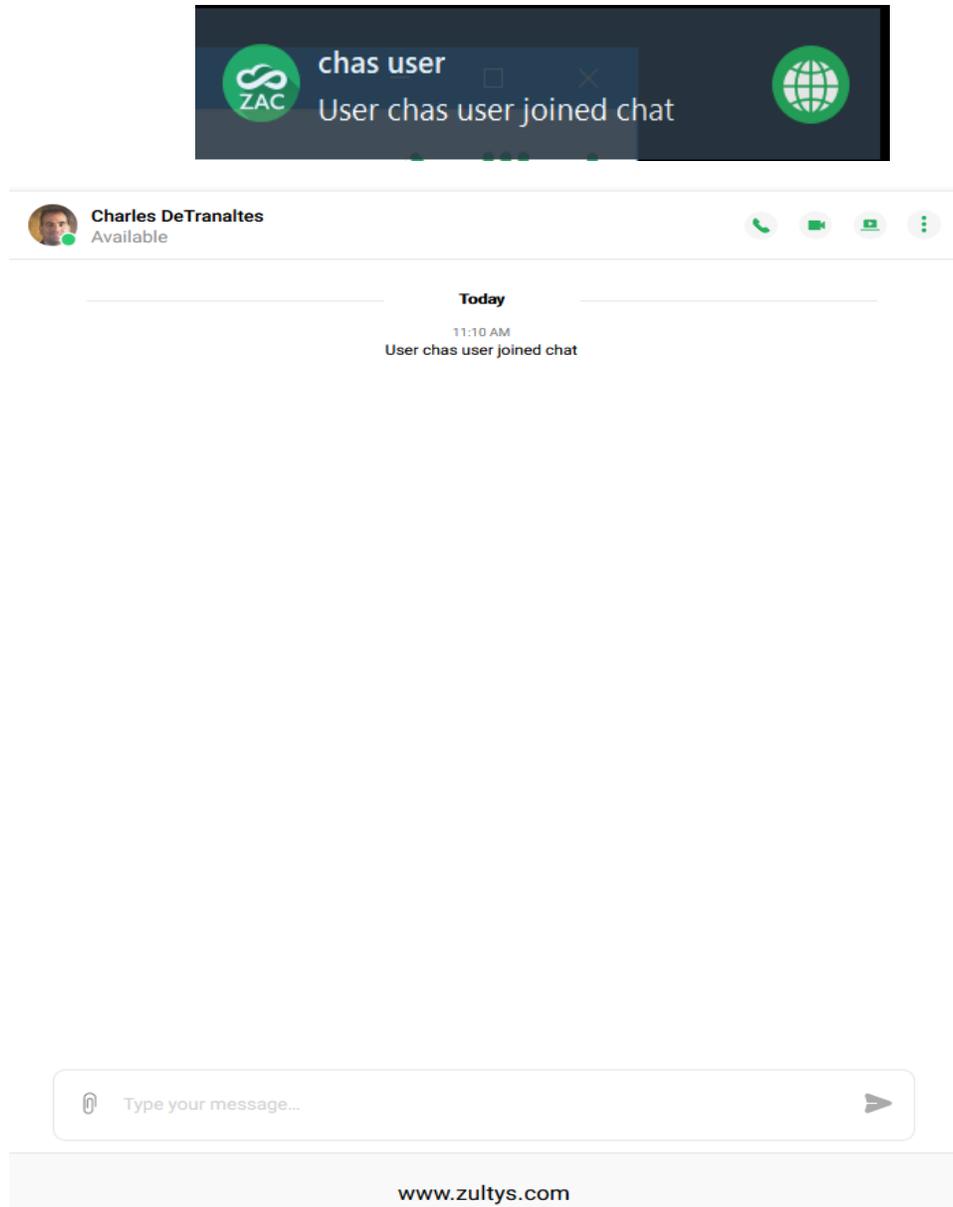



Guest user view

You may converse in the chat area with the external user:

8.1.1 Guest calling host

The guest may click the handset icon to place a call to the MX user.


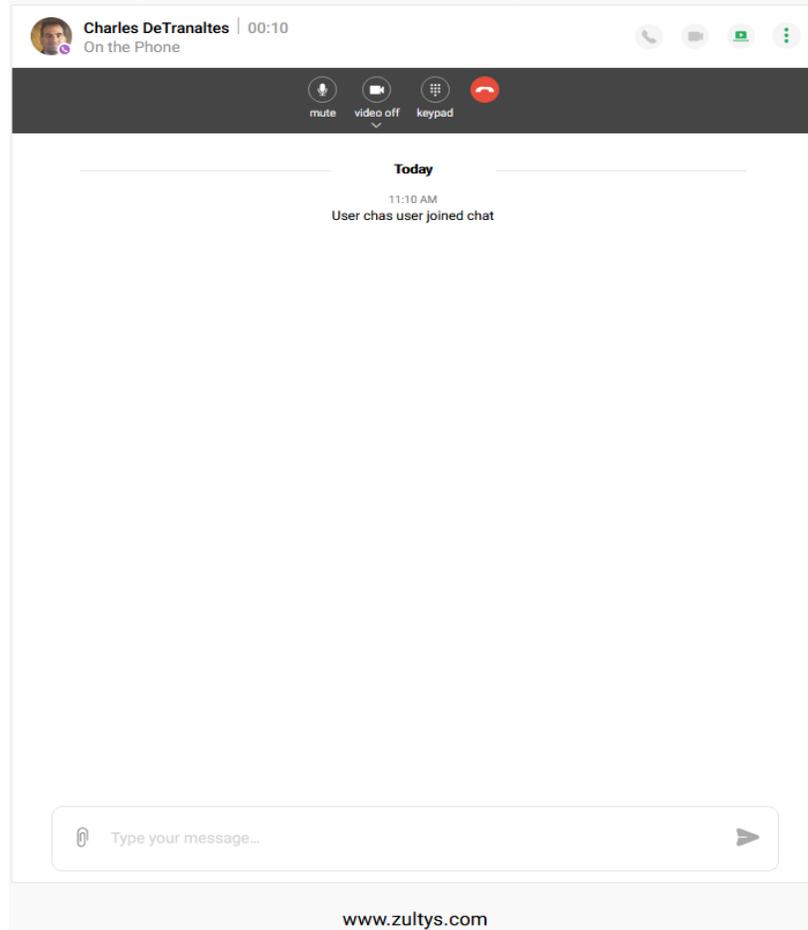


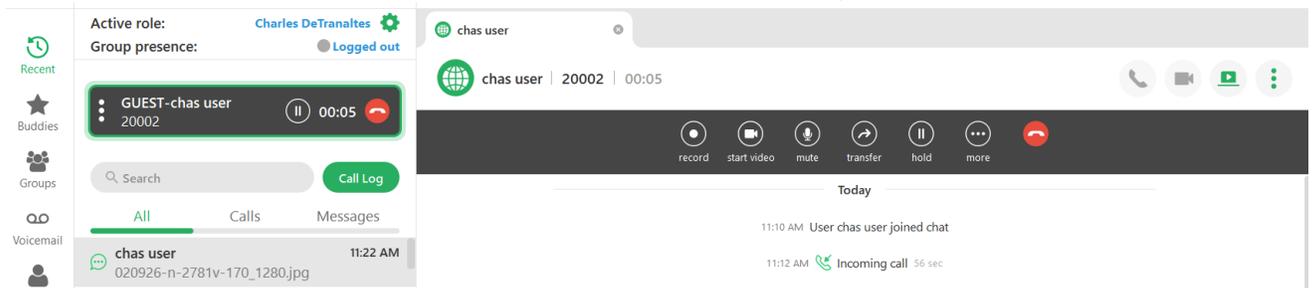

ZAC view of guest call in progress


8.1.2 Host calling Guest

The MX user may click the handset icon or dial the extension number assigned to the guest to place a call to the guest.

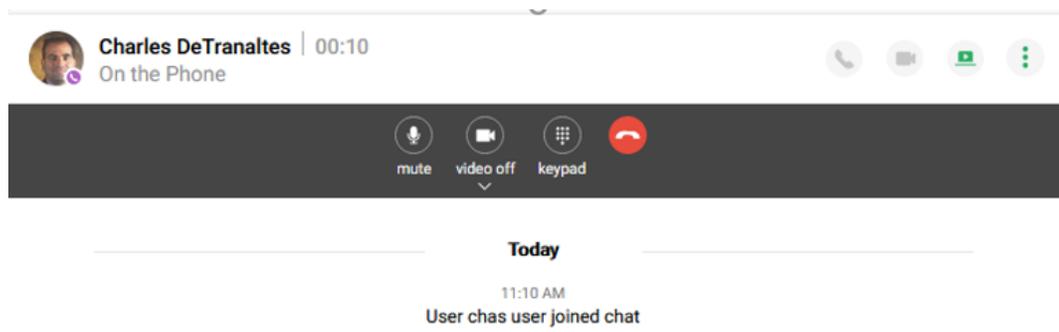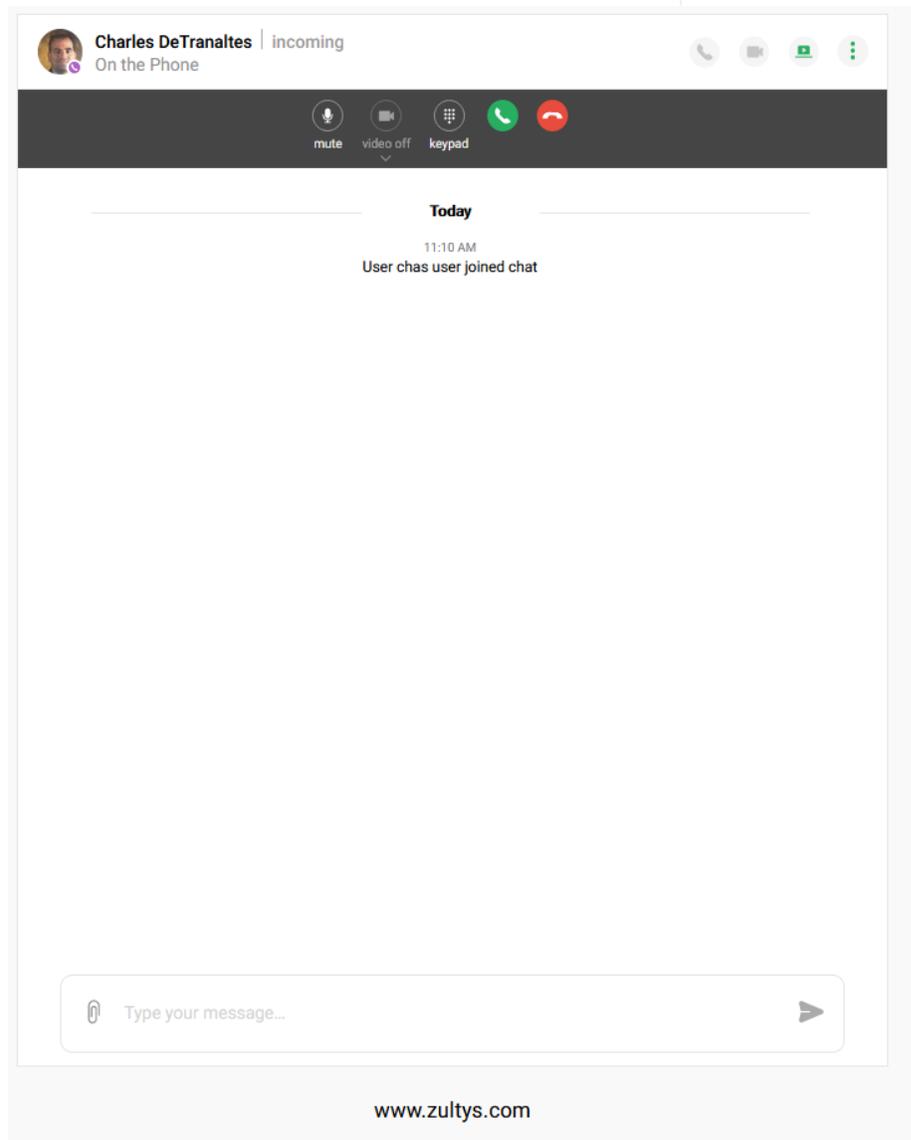

8.1.3 Guest receiving file from MX user


Files may be exchanged between MX users and guests.

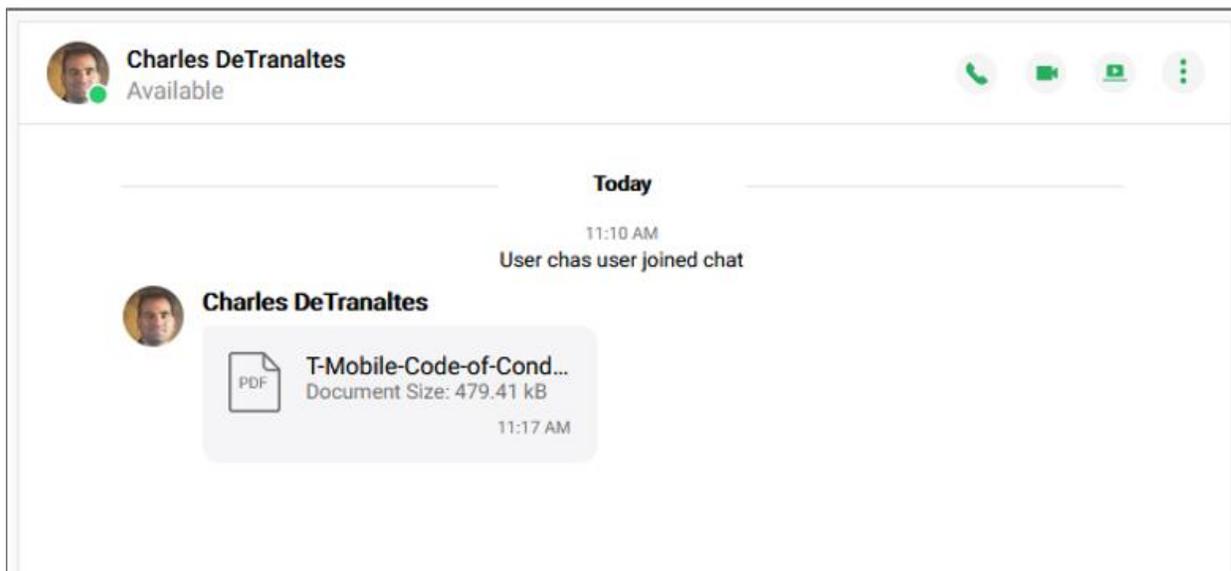


8.1.4 Guest sending a file to the MX user

The guest can send files and images to the MX user.


Click the paperclip icon in the chat area.

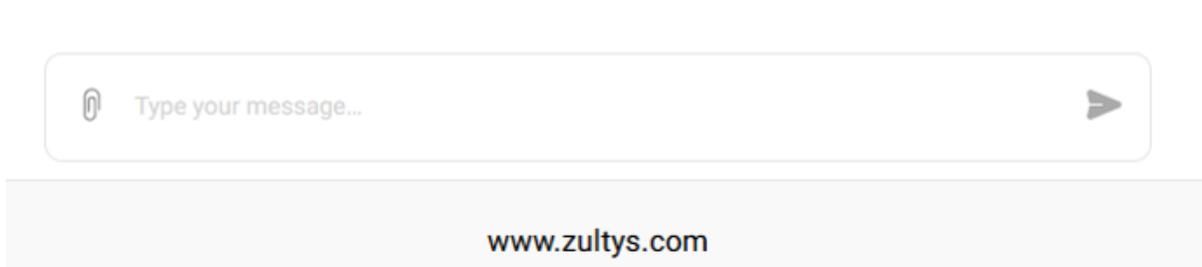

Navigate to the desired file and click Open.


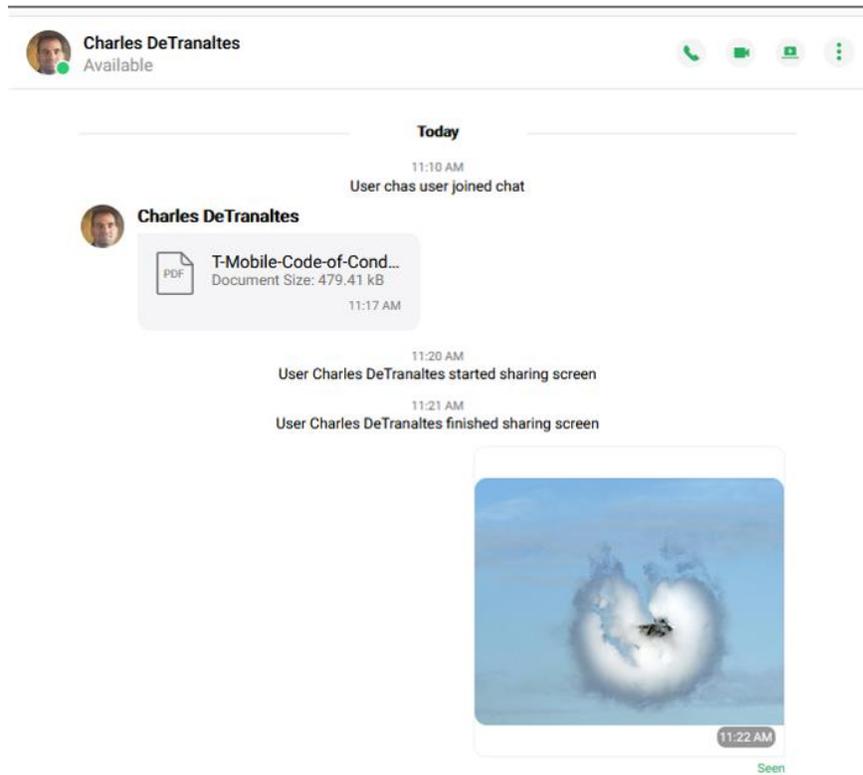


8.1.5 Guest video

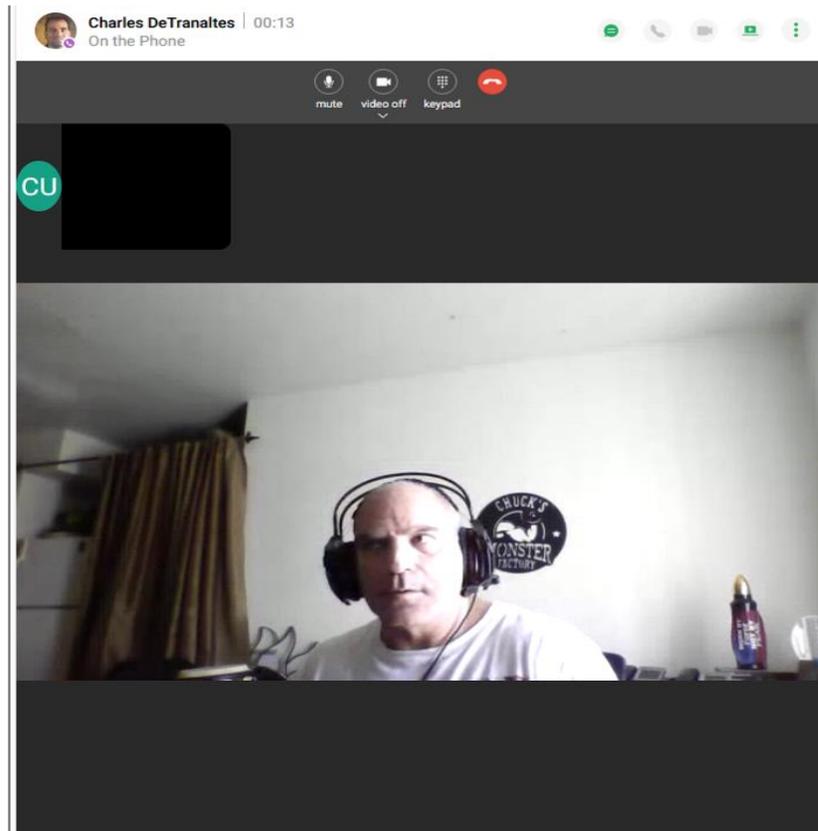

8.1.6 MX user screen share with guest

Click the View button to start viewing the MX user screen that has been shared.

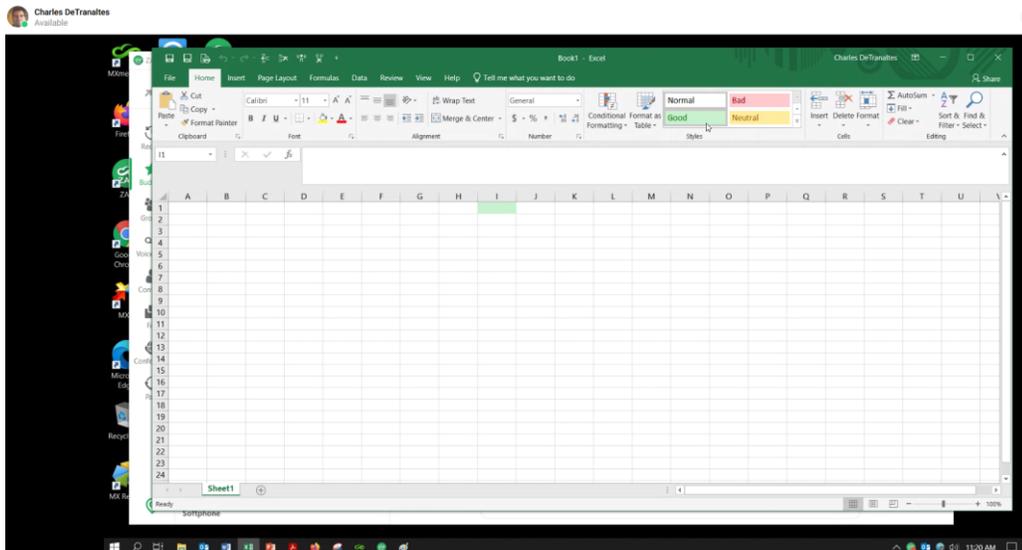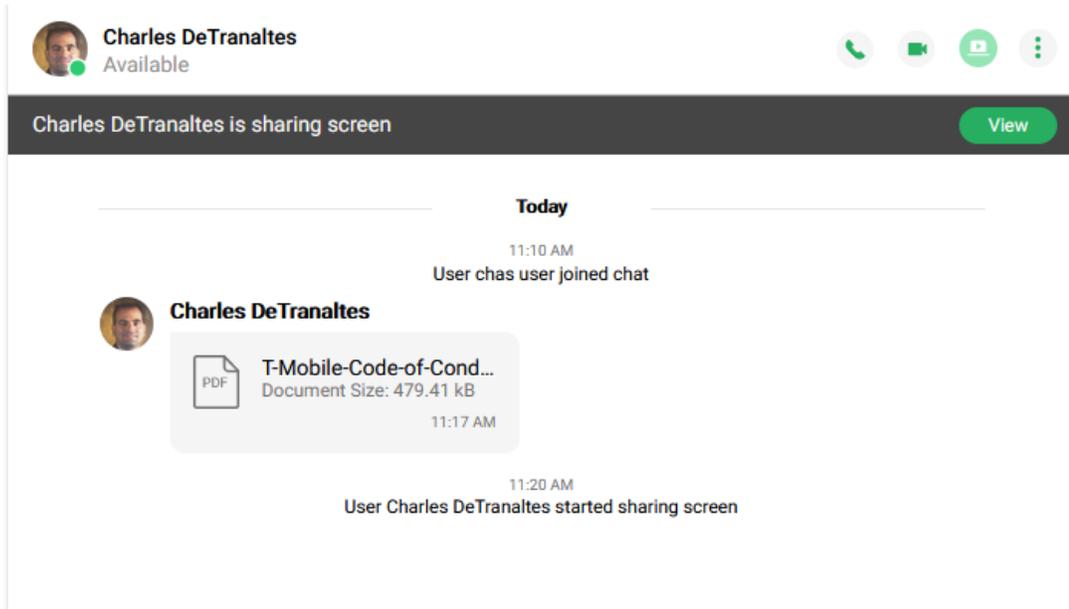

Click the stop viewing screenshare icon to stop the sharing.





Charles DeTranltes
Available



Today

11:10 AM

User chas user joined chat



Charles DeTranltes



T-Mobile-Code-of-Cond...
Document Size: 479.41 kB

11:17 AM

11:20 AM

User Charles DeTranltes started sharing screen

11:21 AM

User Charles DeTranltes finished sharing screen



Recent



Buddies



Dial



Groups

Group presence:

Logged out



Files and Links

Media

Links


Files

Today




T-Mobile-Code-of-Conduct_V ... 11:17 AM
Adobe Document, Size: 479 KB

9 Full Screen Mode

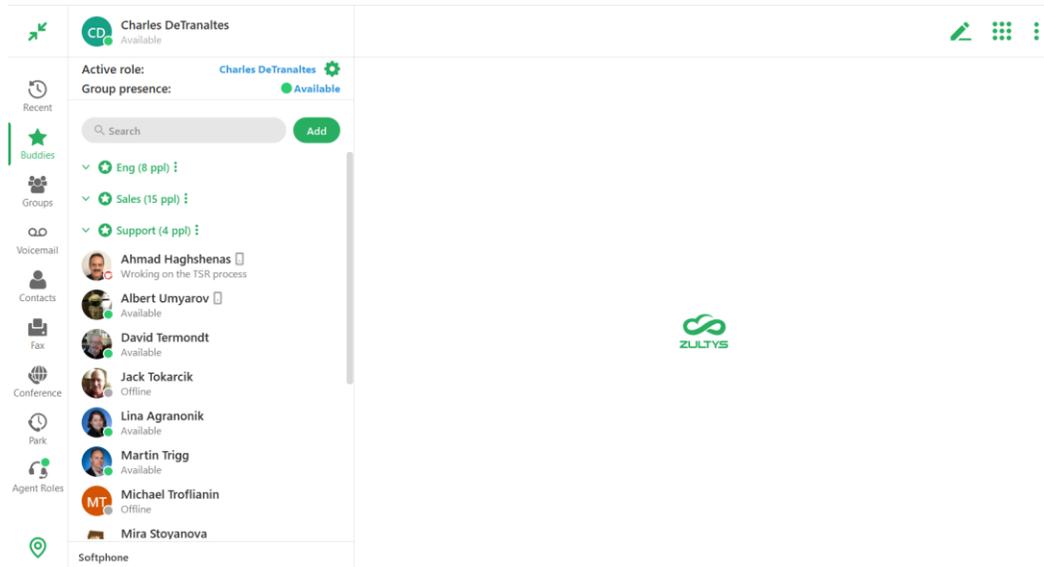

When you click on a buddy/contact, the activity screen for that contact will display in a tab in the work area.

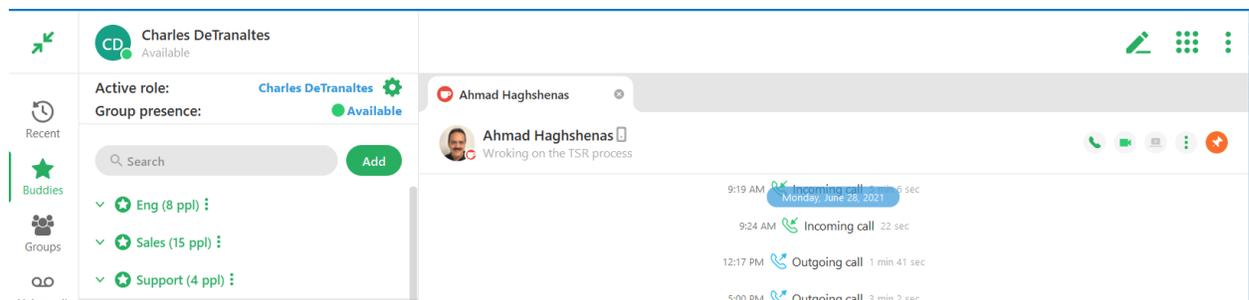

Clicking another contact/buddy will display the activity screen for the selected contact. The previous contact/buddy is replaced.

You may pin the activity screen so that it remains on the screen. To do this, click the pin icon.

If you close the activity screen after pinning it, you will need to re-pin the screen.

The pinned tab will remain on the screen and you may select the tab by clicking on it.


When the activity tab is open, you have the following actions available:



- Call the contact 
- Display the recent images/files shared with the contact 
- Display the recent activity for this contact 
You may e-mail from this screen, enable presence alert, call, as well as view the recent history for that user.

Note: There may be other options based on what information the contact has made available.

The recent activity screen will expand and display the recent history for the selected contact. This will include calls as well as instant message activity.

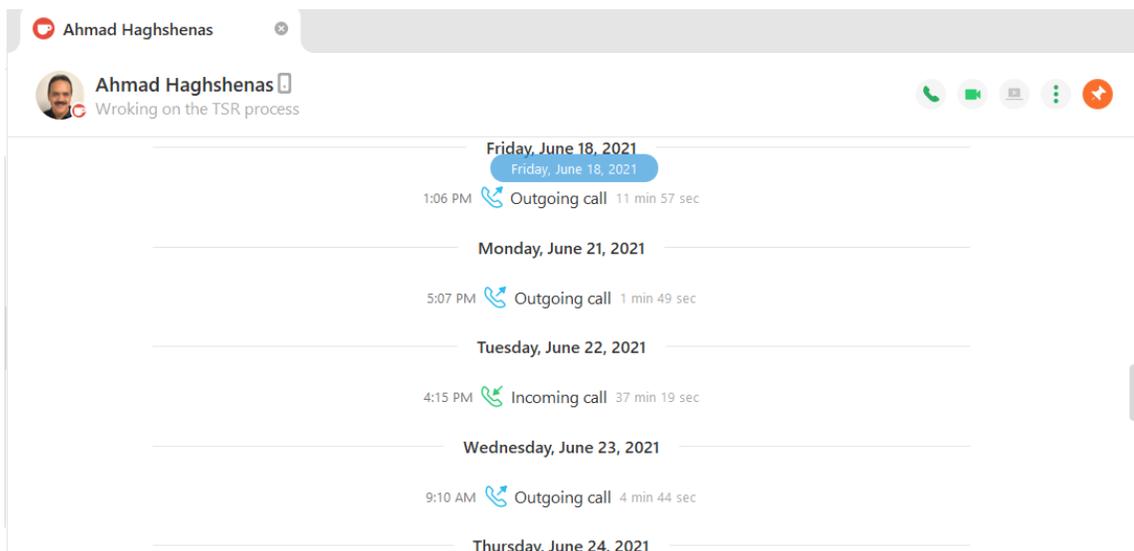

You may close the recent activity screen by clicking the X next to the contact name in the tab area.

10 Agent Roles/Call Group Operation

In addition to logging into ZAC through your user role, you can also log into any of the ACD, ICC or Operator Groups to which you belong. ZAC opens a role partition for each group to which you are a member of, and are logged into. ZAC provides features for ACD, ICC agents and Operators that based on the call group functionality, and may differ from those features that are available to users. Call group operation operates in expanded mode.

10.1 Presence for Operators

The following conditions may trigger transitions between operator presence states based on the user's defined preferences:

- **Available to On the Phone** triggers when an ACD agent or operator initiates or accepts a call. This rule cannot be removed or changed.
- **On the Phone to Available** triggers when an operator terminates a call.
- **Available to Not Available** triggers when the user changes to a state specified by the ACD and Operator User Preferences window.


10.2 Presence for ACD Agents

The following conditions may trigger transitions between Agent presence states based on the user's defined preferences:


- **Available to Active** triggers when an ACD agent initiates or accepts a call. This rule cannot be removed or changed.
- **Active to Wrap up** triggers when an agent terminates a call.
- **Wrap up to Available** triggers after remaining in the wrap up state for a period specified by the ACD and Operator User Preferences window.
- **Available to Not Available** triggers when the user changes to a state specified by the ACD and Operator User Preferences window.

You may select a Role(s) when logging into ZAC.

Click the "Apply to future login" to have role selection performed automatically at each login.

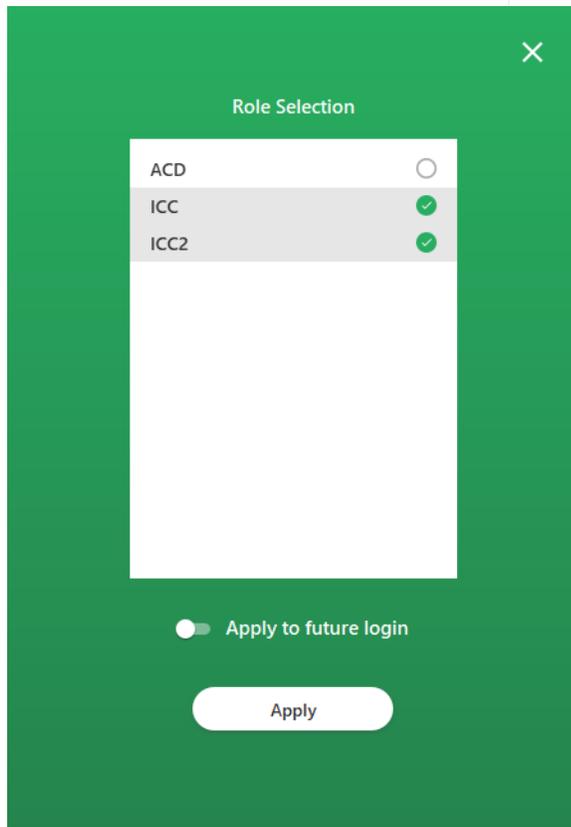

You may also select a role after you are already logged in in the Agent Active Role/Role Selection area.

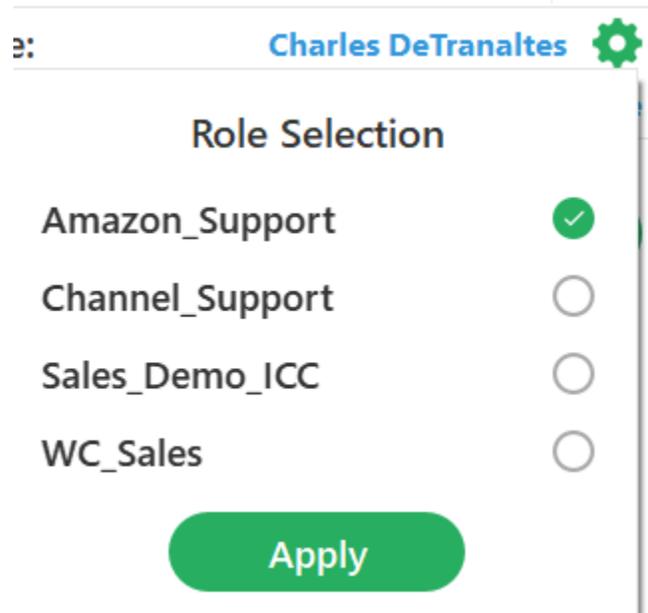


You may also select an Active role prior to placing an outbound group call.

Click on the displayed Active Role

Check the desired role to make it active

Place the outbound call.


You can change your Group presence by selecting the desired presence state from the list.

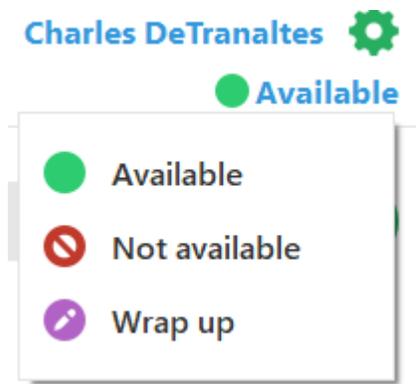


The presence state will change after selecting a presence.

10.2.1 Agent Roles

You may display the presence state of other Agents in the Call group. After selecting all desired Roles, each group you selected for a Role will display. You may expand or collapse each group to view the agent status of each by selecting the Agent Roles area:

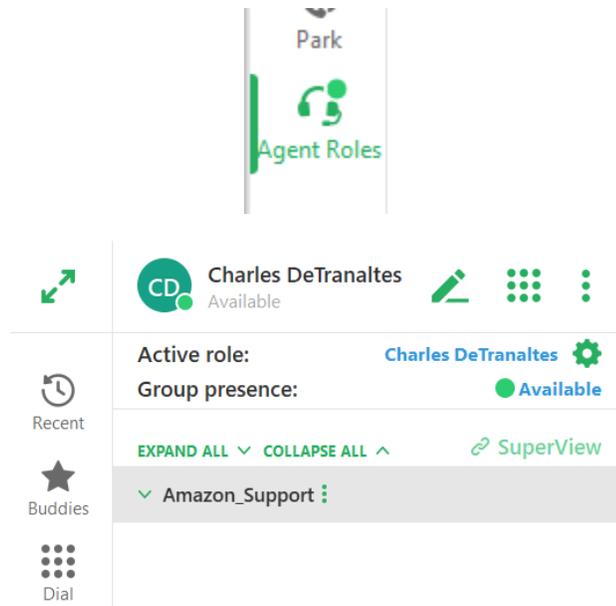


You may use Expand or Collapse all to view all agents for all groups.

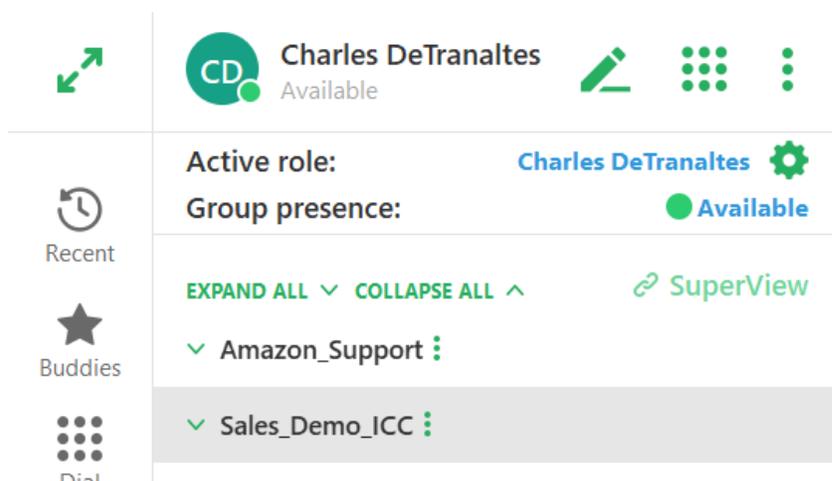

Please note blue stars indicate that member is a supervisor of that ICC call group. The star will indicate dark blue when the supervisor is logged in and light blue when the supervisor is logged out.


- **Incoming group call notification:**

Incomings calls to a group agent will contain the incoming callerID and the call group name that was called.

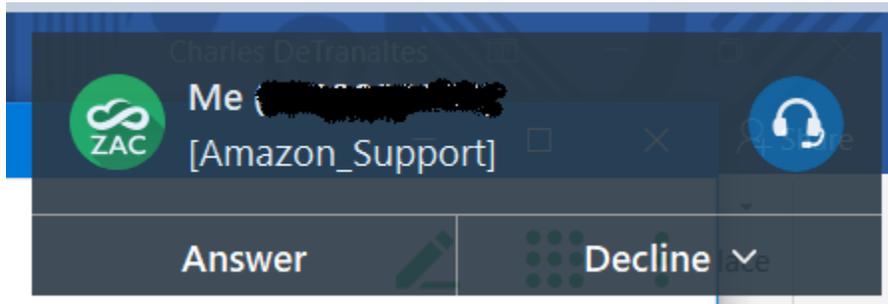


- **Call group session**

When an agent answers a group call, the call session will display.

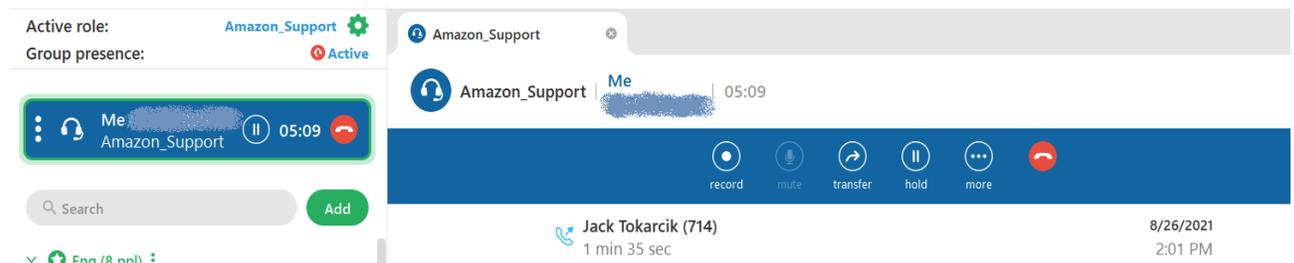

- **Transfer call**


To transfer the call to another user click the transfer icon in the call session.

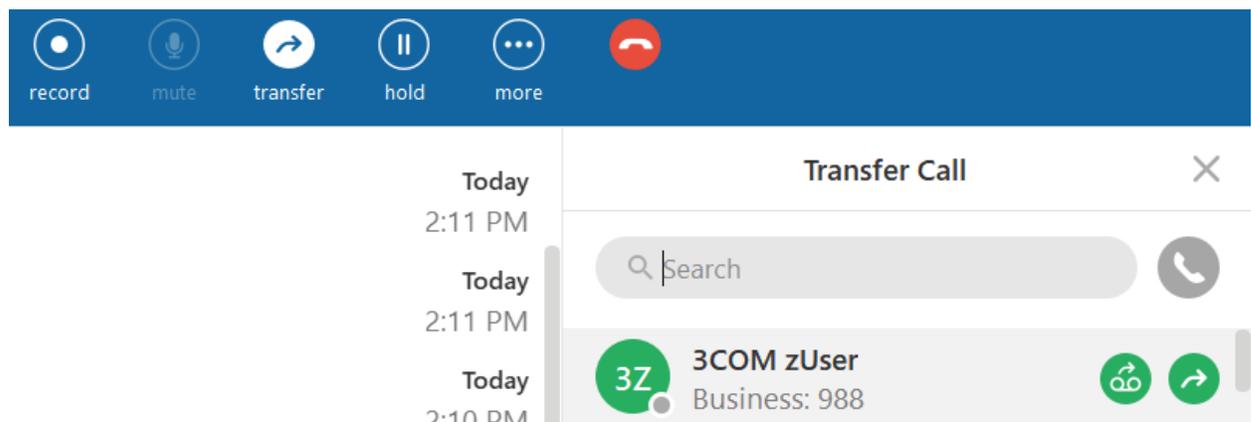

Select the desired contact and click the call icon.

- **Record a call**

If call recording is configured, you will have capability to record the call. During the recording, you will also have capability to pause/resume the recording. No call recording audio is present during this pause period.

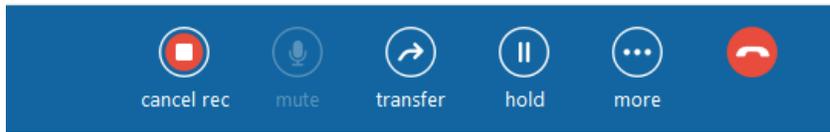


- **Hold**

This will placed the call on hold. Only the agent may retrieve the call from hold.




Click retrieve to resume the call.

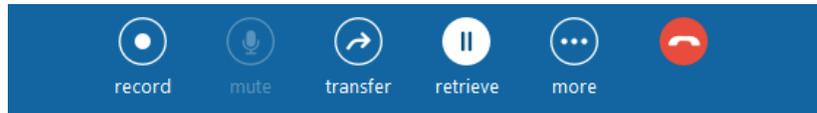


- **More options on active call group session**

Click more to present additional call options.

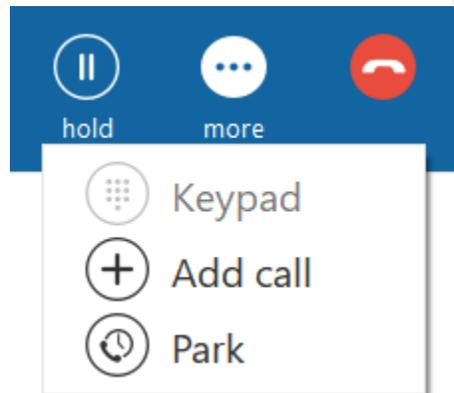

- **Add call**

Select the desired contact to add.

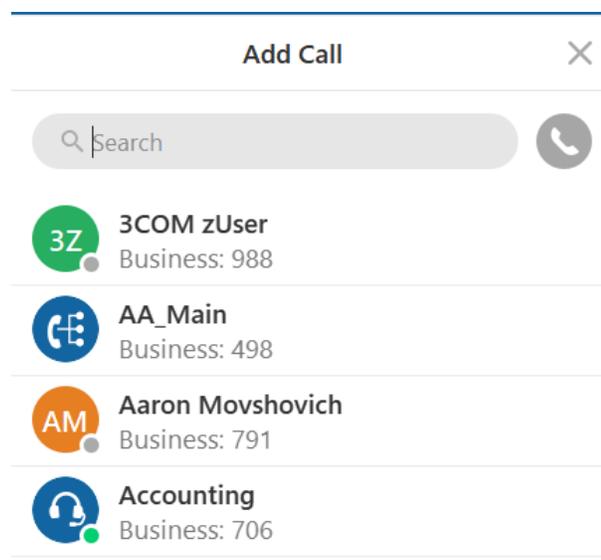


Click the contact and complete the call. Click conference in the session bar. Add the other party to the conference.



- **Retrieve**

In case a transfer or conference does not complete, you may retrieve the original call from hold.


Click the retrieve icon.

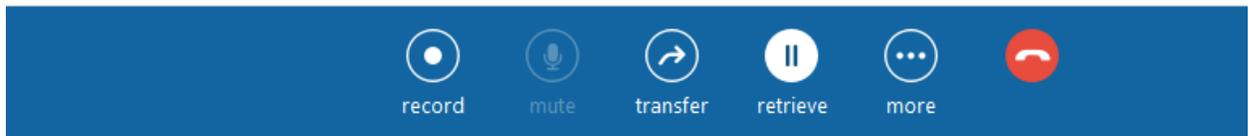

- **Park**

You may place the group call in system park. The call will be placed in a hold state and is available for all MX users to retrieve.

Select Park from the More menu.

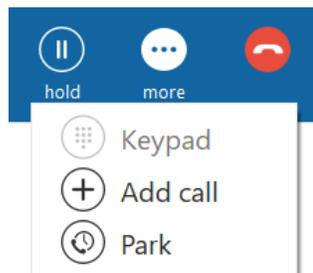

MX users receive a notification that a call is in Park.



The parked call will display the following




Mouse over and click Pick up to resume the call.


- **Conference**

You may create an ad hoc conference call to include other MX user in the conference call.

Click the options icon in the left call session and select Conference.

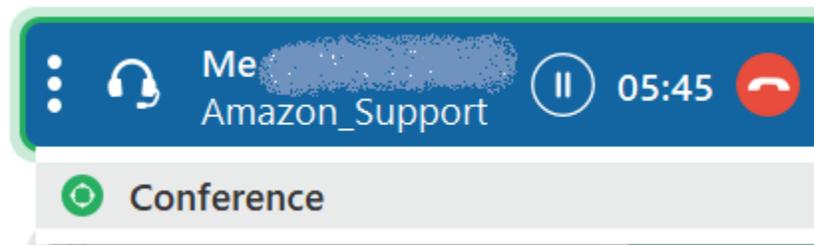

MXconference will begin between you and the caller. You may add additional parties to the conference after it has started.

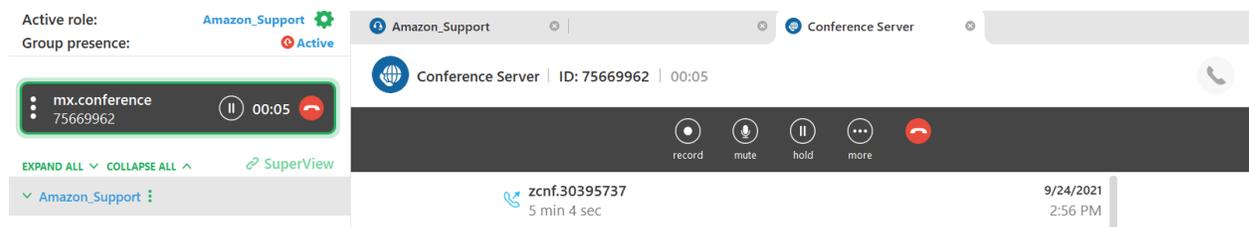

- **Placing outbound in group role**

You may place a call as an agent by clicking the call button associate with the desired call entry.

75669962
 51 sec




Amazon_Support | Me | Calling...

Me
 Amazon_Support

EXPAND ALL COLLAPSE ALL SuperView

Amazon_Support

Charles DeTranlates
 Active

mute transfer hold more

11 sec Today 1:50 PM

75669962 51 sec Today 1:49 PM

- Call log**

A group call log of all calls the group placed/received are included in the log.

Active role: Amazon_Support
 Group presence: Wrap up

Search Call Log

All Calls Messages

Amazon_Support CSTA_Test (893) 2:13 PM 12 sec


Direction	CAD	Date	Name	Number	Duration	Call Group
Outgoing call		Today 2:13 PM	CSTA_Test	893	0:12	Amazon_Support
Outgoing call		Today 2:12 PM	Kevin Demo	941		Amazon_Support

10.2.2 ZAC 8 Queue Monitor

This screen is available to agents of a hunt, ACD, Operator or ICC call group type. This call monitor allows a group member to view information about the calls that are in queue for the group.

While in the Agent Role screen, click the options icon next to the call group name.

Select the Queue Monitor item.

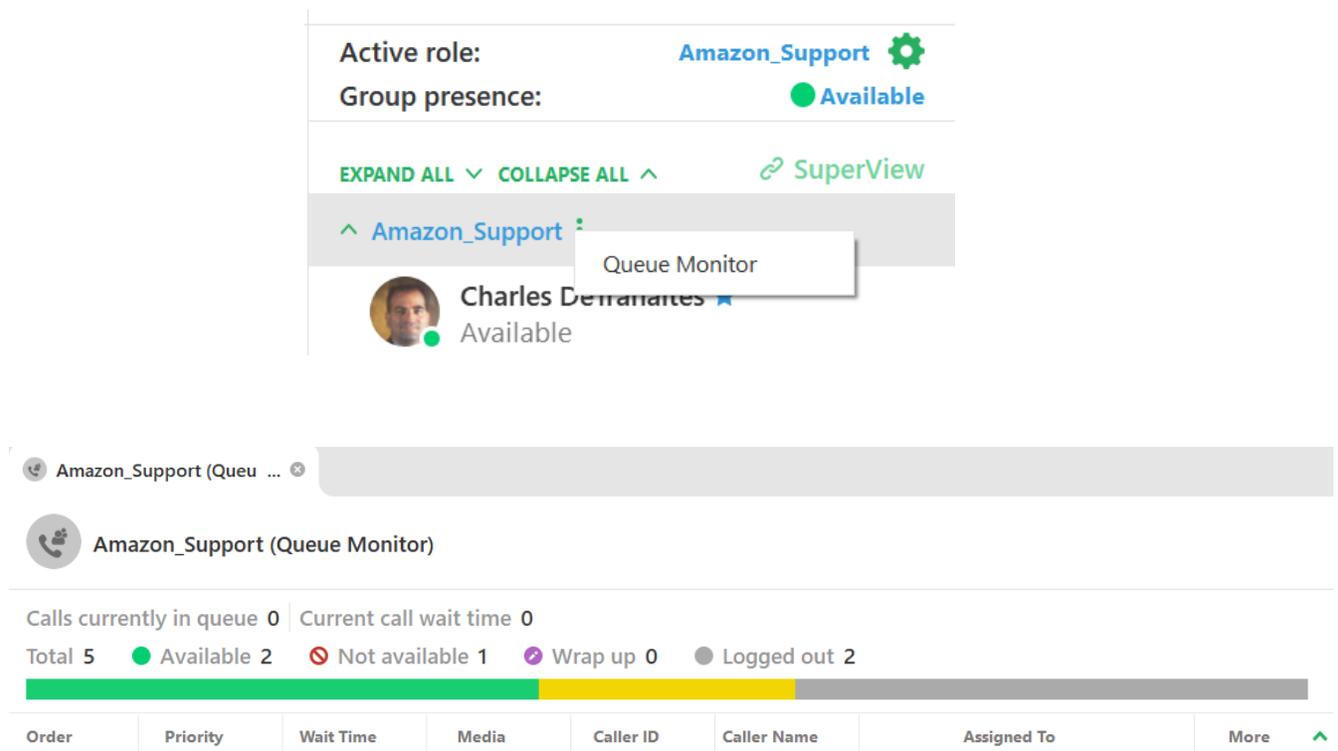

Active role: Amazon_Support

Group presence: ● Available

EXPAND ALL COLLAPSE ALL SuperView

Amazon_Support

Queue Monitor

Charles Demarantes
Available

Amazon_Support (Queue Monitor)

Amazon_Support (Queue Monitor)

Calls currently in queue 0 | Current call wait time 0

Total 5 ● Available 2 ● Not available 1 ● Wrap up 0 ● Logged out 2

Order	Priority	Wait Time	Media	Caller ID	Caller Name	Assigned To	More
-------	----------	-----------	-------	-----------	-------------	-------------	------

The screen is defined from top to bottom as:

- Name of the call group
- Number of calls currently in queue and the current call wait time
- The fields in the Queue monitor are defined as:

Priority – The priority associated with the queued call.

Wait Time – The amount of time the caller has been waiting in the queue.

Media – The specific media type of that call in queue, call, automatic callback, webchat

CallerID – The callerID associated with the inbound caller.

Caller name – The caller name associated with the inbound caller.


Assigned to – The agent that will handle the call.

More – Presents CAD fields.


10.2.3 Supervisor functions

A Supervisor of a an ICC group may access the Web Based SuperView program directly from ZAC.


Click the SuperView icon:

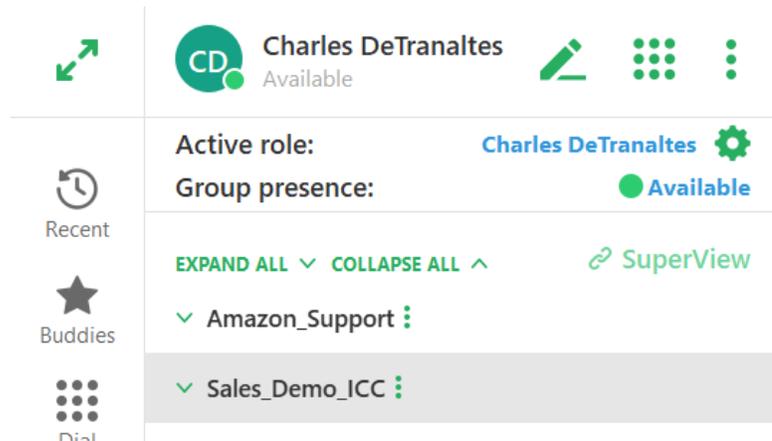


The screenshot shows a user profile card for Charles DeTranates, who is available. It includes a navigation menu on the left with icons for Recent, Buddies, and Dial. The main content area displays the user's active role (Charles DeTranates) and group presence (Available). Below this, there are expand/collapse controls and a SuperView link. A list of groups is shown, including Amazon_Support and Sales_Demo_ICC.

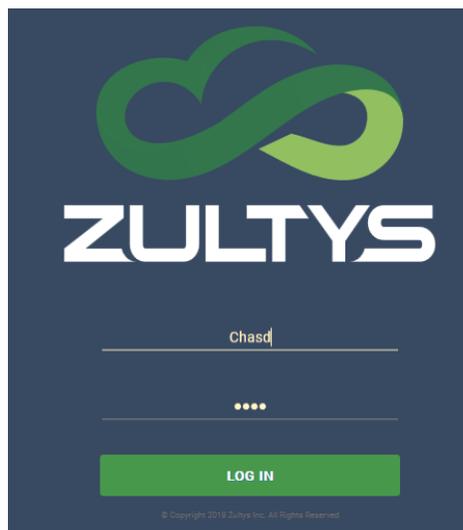


Enter your username and password at the web application page and click login:

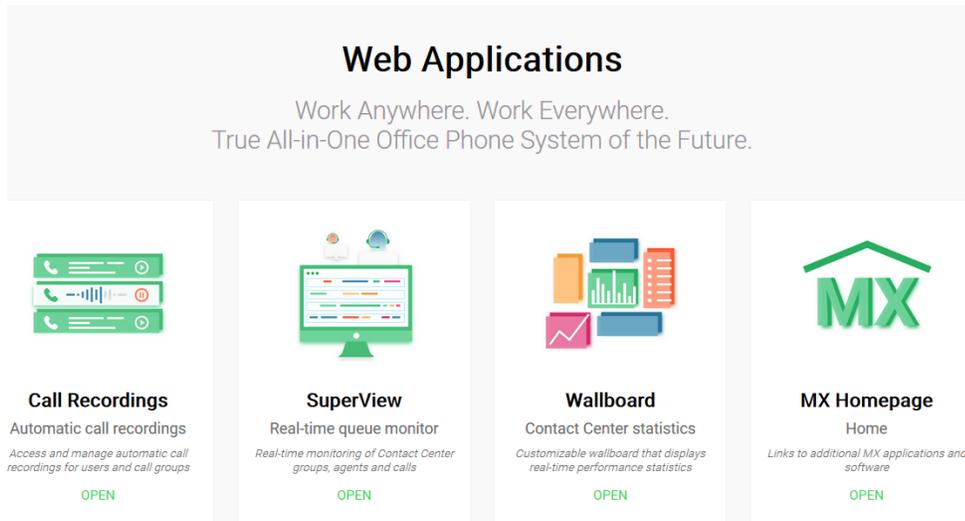

Click OPEN on the SuperView icon

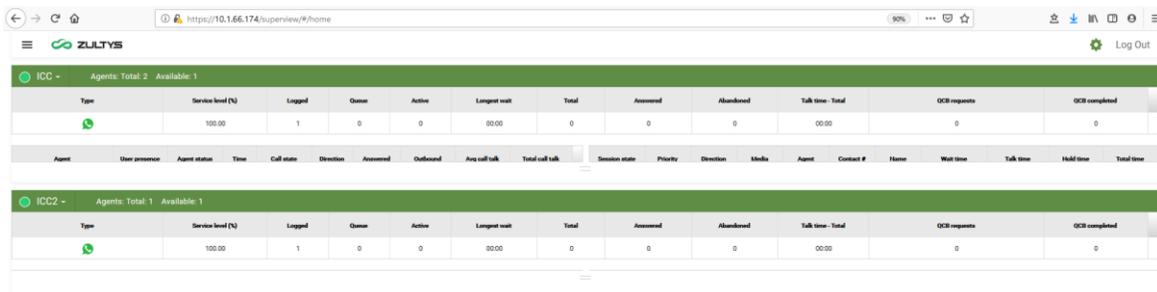

Incoming group calls are identified in the call session area next to the callerID.

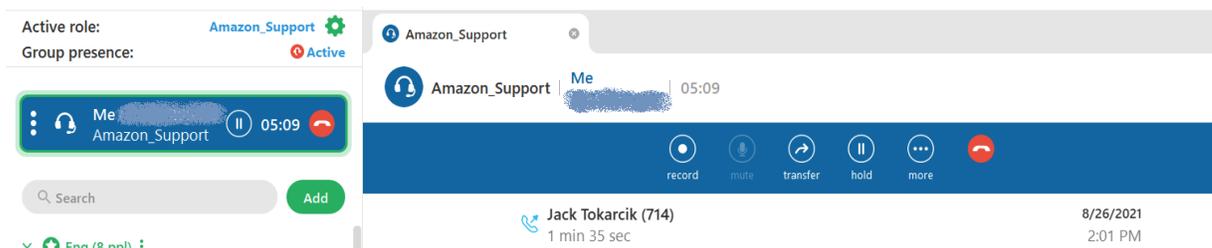

A history of the group calls is presented below the call session area.

11SMS 2.0 Service

11.1 Description

Zultys SMS 2.0 option allows customers to initiate and receive SMS messages using ZAC. The ZAC interfaces has been designed to streamline and make sending SMS messages easier and intuitive.

11.1.1 Requirements

- **ZAC Version** – Must be 5.0.0.37 (or greater)
- **MX Version** – Must be 15.0.3 (or greater)
- **Voice DID** – User must have a SMS enabled voice DID assigned. The DID number format assigned in MX Administrator **MUST BE** 11 digits. The 11 digits must be formatted as 1+10 digits. For example, a voice DID number of 602-555-1212 would be configured as 16025551212 in MX Administrator.
- If the user cell phone number is configured in the user area, users will not receive a text if they attempt to text themselves.


11.1.2 Overview Process

- SMS is an optional service that Zultys Cloud Service customers may order using part number 91-19301-V. This part number includes 1000 inbound/outbound SMS messages per month.
- All backend configuration is performed by Zultys personnel.
- Zultys Cloud Service customers who manage their customers system must enter the DID numbers for each user as described above (11 digit entry) In MX Administrator.
Backend configuration work in this scenario is still performed by Zultys personnel.
- ***SMS short codes are not supported in ZAC.***


11.2 Operation

11.2.1 Sending SMS Messages


1. From the minimized or expanded mode click the New message to icon.

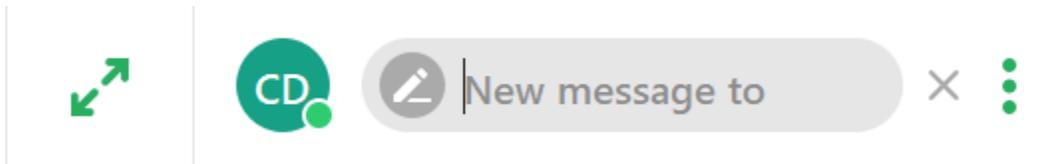

You may also start an SMS session from your buddy/contact history by select the via icon:

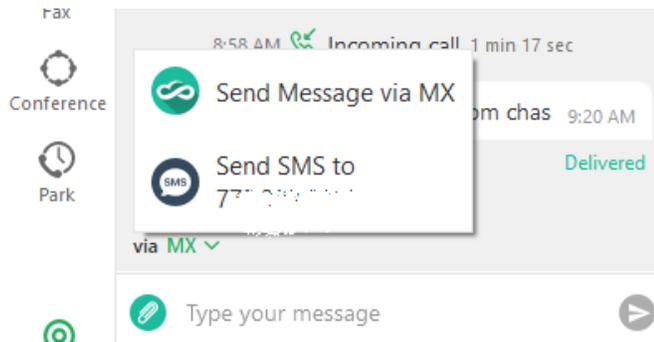


2. Enter the desired SMS number in the "New message to" field. You may click the X to cancel the operation.

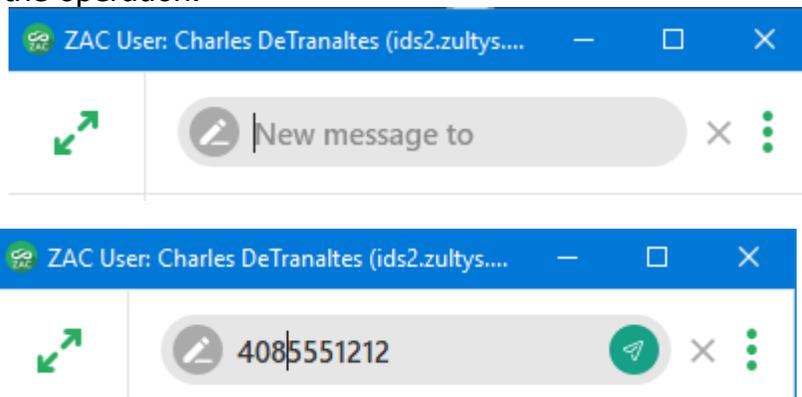


3. Click the  icon.


4. At the chat screen, enter your message and press .

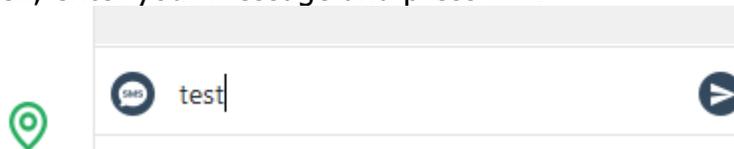


5. You will see the response in the Chat area. Continue to enter/receive responses in this area.

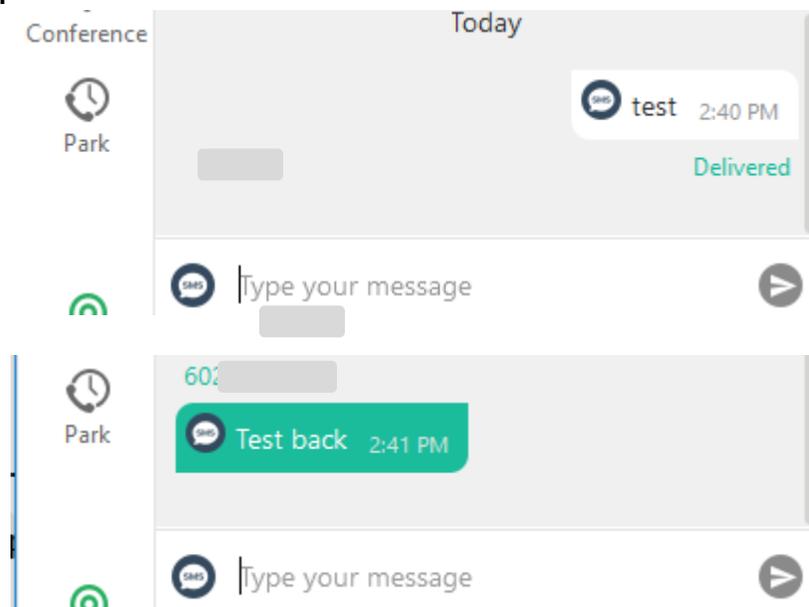

You may also start an SMS message with other MX users that have a mobile phone configured in the system. When you select a user and bring their history screen up, you will see an icon in the lower left corner. If you mouse over the highlighted portion you will see:

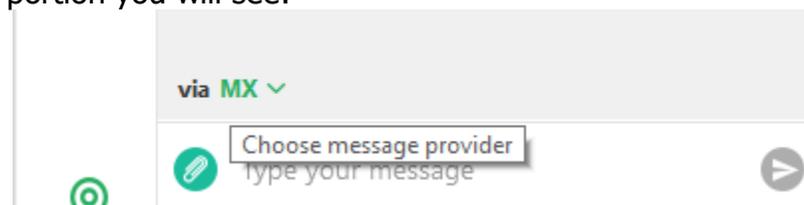

Click the highlighted MX to select the desired message provider.

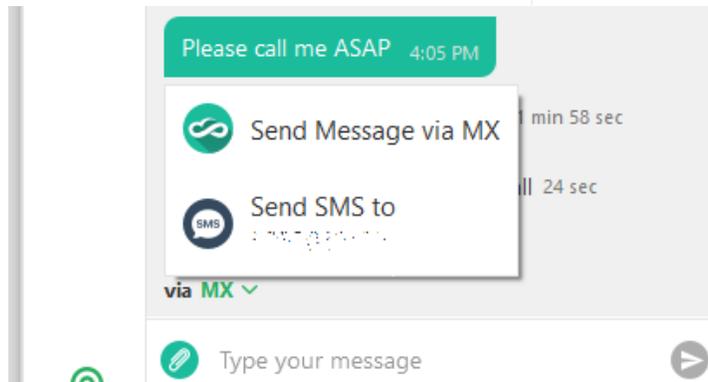


Select either the MX(internal) message or the SMS option to send to the users' mobile phone.


11.2.2 Receiving SMS Messages

A user may send and SMS message directly to your MX DID number.

1. When you receive an incoming SMS message, a popup will appear and the Recent area will display a notification (if you are not in the Chat screen).

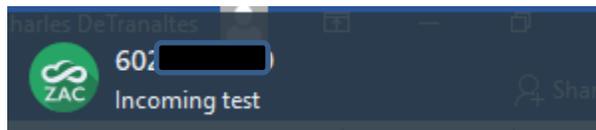


2. Click the popup window to present the chat area.

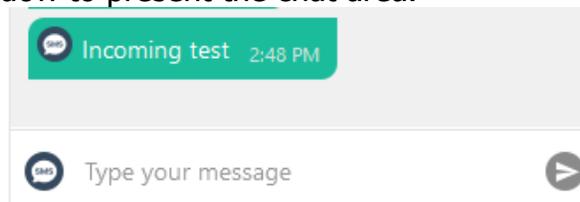


3. Click the recent area to display the SMS message in the list of activities.

4. Click the  icon to enter the Chat area.

5. View responses and type your responses in the Chat area.

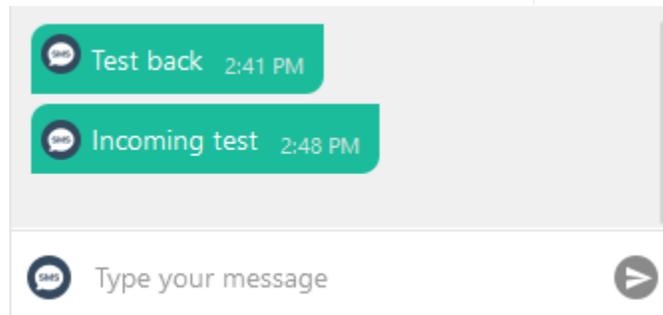

SMS service may also be started when the system

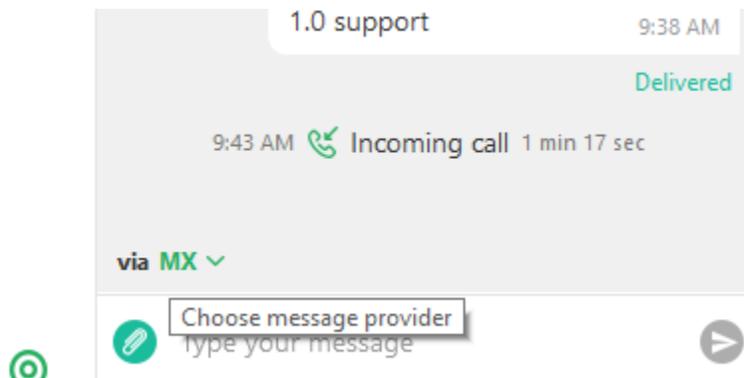


11.3 Call Group SMS


Release 16.0.4 (and greater) now includes capability to direct SMS enabled DID numbers to the main DID number of an ACD or ICC call group. This allows agents to engage in SMS chat sessions with external users.

11.3.1 Operation

- Notification of an incoming SMS to an agent:

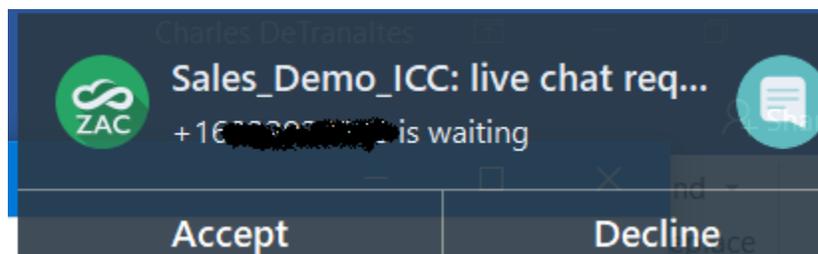


- Text session after clicking Accept”

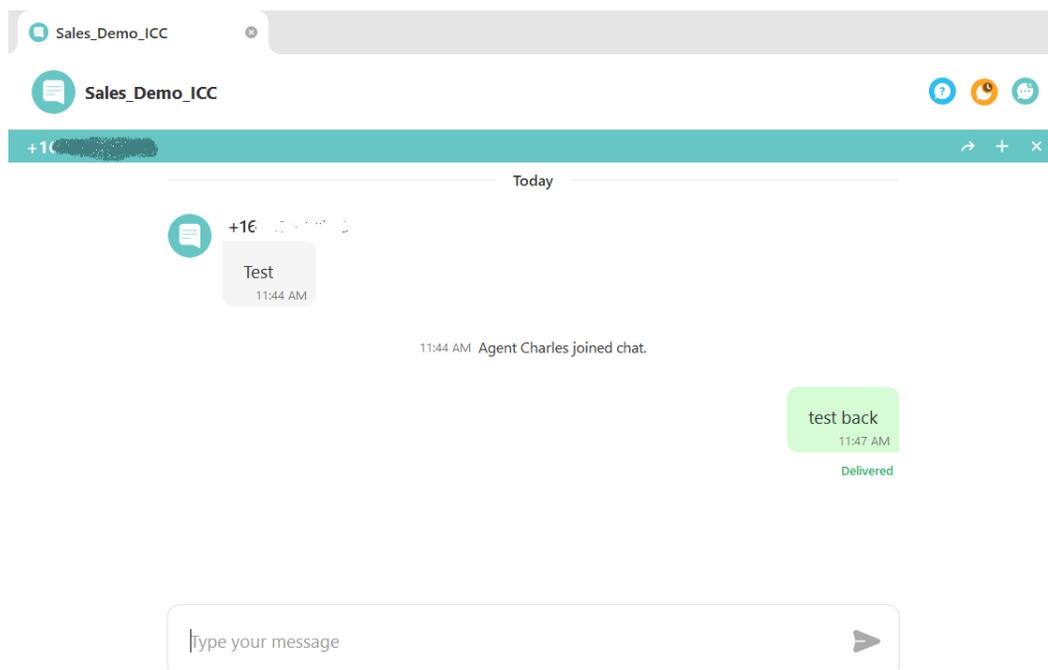


You may converse with the external user in the chat text entry area.

- Disconnecting the session:

When you are finished, click the disconnect icon . A confirmation will appear:

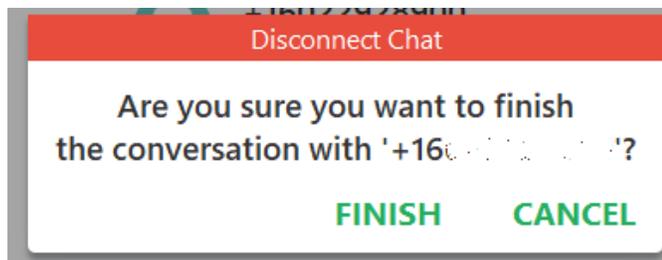


Click FINISH to end the session.

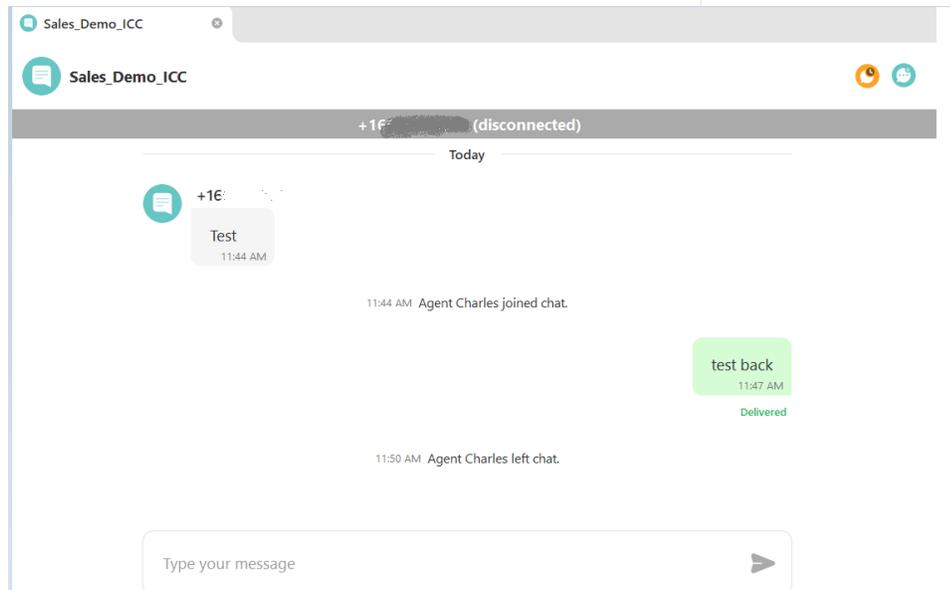

- Mobile user screens

This is what the SMS sender would see on their mobile device during a chat session with an MX agent via SMS.

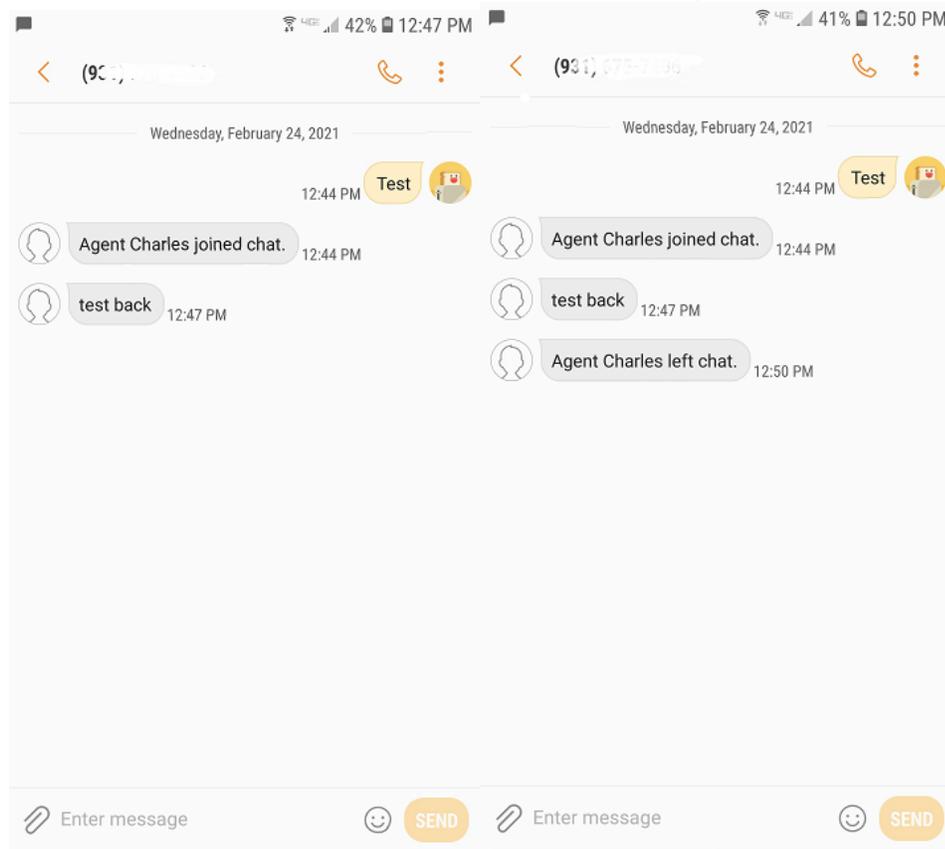

11.4 Conditions

- SMS to a call group utilizes WebChat as the infrastructure to deliver SMS messages to agents. The WebChat feature must be enabled and configured in the MX system.
- Only the Main DID entry in a call group may be assigned an SMS enabled DID number. SMS is not applicable to Number Associations in the call group.
- Incoming messages are distributed to agents based on the Call distribution setting in the General tab of Operator and Call Groups in MX Administrator. In the case of a ring all type, all agents will receive the notification. Once an agent answers, notification is removed from other agents that did not answer the call.
- There is no outbound SMS group operation at this time.
- If an agent declines the SMS message, the message is routed to the next available agent in the group.


12 Microsoft Office Unified Communications

12.1 Description


This feature allows Windows based ZAC presence information to be shared with Microsoft Outlook 2010+ versions. ZAC users' presence status can be viewed within the Outlook application without the need to view the ZAC application itself. In addition, actions such as call, Instant Message can be initiated from Outlook as well.

12.2 Operation

Once the feature is enabled in ZAC Settings, operation is inherent. Presence status is shown for all e-mail recipients in Outlook:

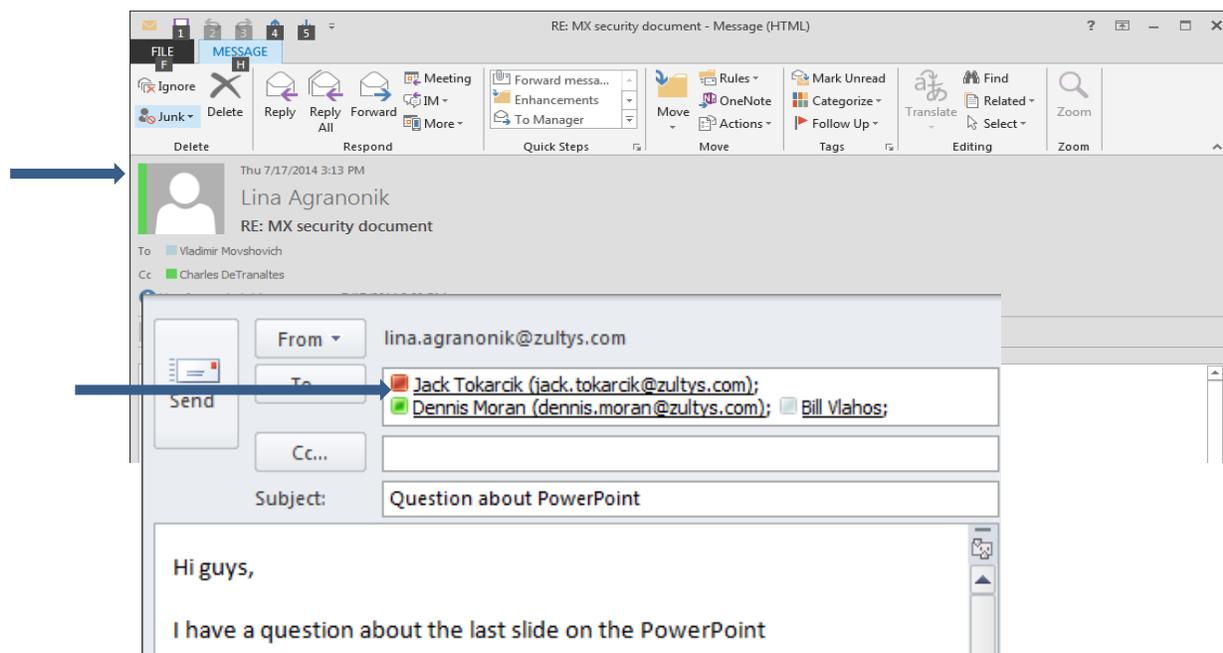


Presence Status is also shown in the People Pane of Outlook.

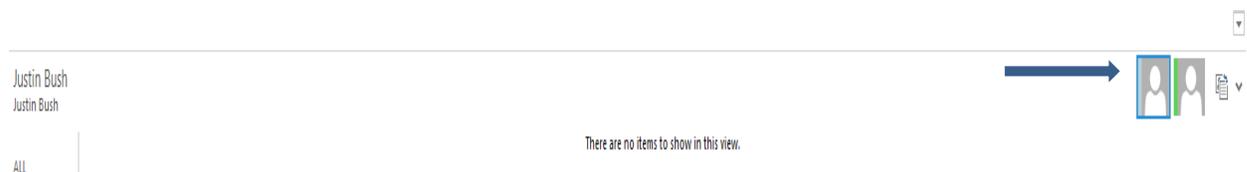

Moving your mouse over the presence area of a user will present the quick action menu:

From the quick action menu you can:


- Initiate an IM session. ZAC IM window will appear. Depending on your ZAC settings, ZAC may appear.
- Place a call to the user. ZAC will be invoked. Depending on your ZAC settings, ZAC may appear.
- Send an e-mail using Outlook

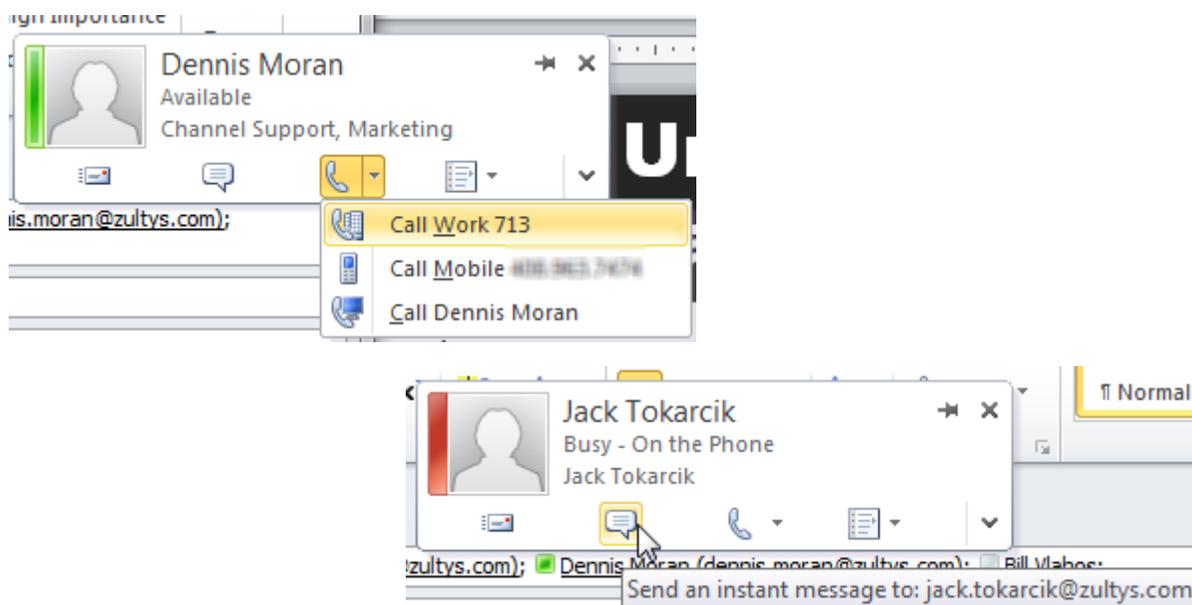

MXIE Presence Status

Outlook Presence Status


Available	 Available
Not Available	 Do Not Disturb - Not Available
Busy	 Busy
At Lunch	 Away – At Lunch
In a Meeting	 Busy – In a Meeting
Be Right Back	 Away – Be Right Back

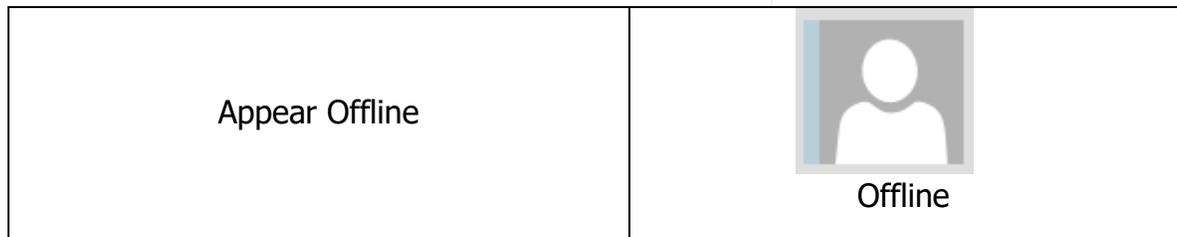

12.3 Conditions

- Outlook 2010+ must be installed on the users' PC.
- This feature operates independently of Zultys Outlook Communicator or Microsoft Exchange Communicator (MSEC). Neither application is required for this feature to be utilized.
- This feature does not require an Exchange Server to be present.
- This feature does not require any additional license to operate. The only requirement is a valid user license and MXIE must be installed and running on the MX system.
- The Microsoft Web based application SharePoint must be run in Internet Explorer to view presence status. Firefox, Chrome, Safari web browsers will not support the Unified Communications integration.
- Outlook supports one direct connection presence application from external programs. If the user already has an external presence sharing associated with Outlook, Skype for example, enabling the Zultys feature will disable the Skype presence
- The e-mail address in Configure\Users in MX Administrator must be programmed.

ZAC/Settings/Application

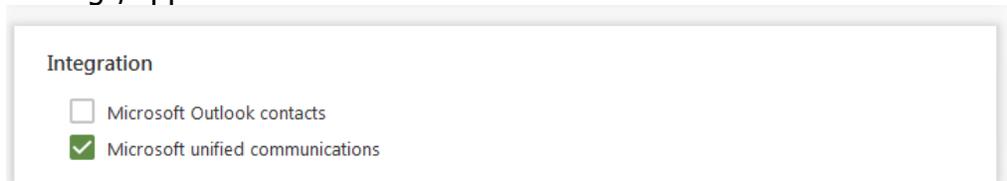

- Enable the checkbox and click Apply.
- Microsoft .NET Framework 4 (or greater) must be installed/active on the users' PC in order for this feature to operate properly.
 - This feature is only supported on Windows based Zultys Advanced Communicator.

13 Video Calling – User to User

13.1 Description


Zultys Advanced Communicator (ZAC) users can now place video calls to other ZAC users. This feature now allows video between the users in addition to voice and chat capabilities.

13.1.1 Video Calling Requirements:


- ZAC 7.2.16 (or greater) required
- ZAC MUST be bound to the Softphone
- ZAC MUST be in full screen mode

13.2 Operation

While in a user tab, click the Start video icon:

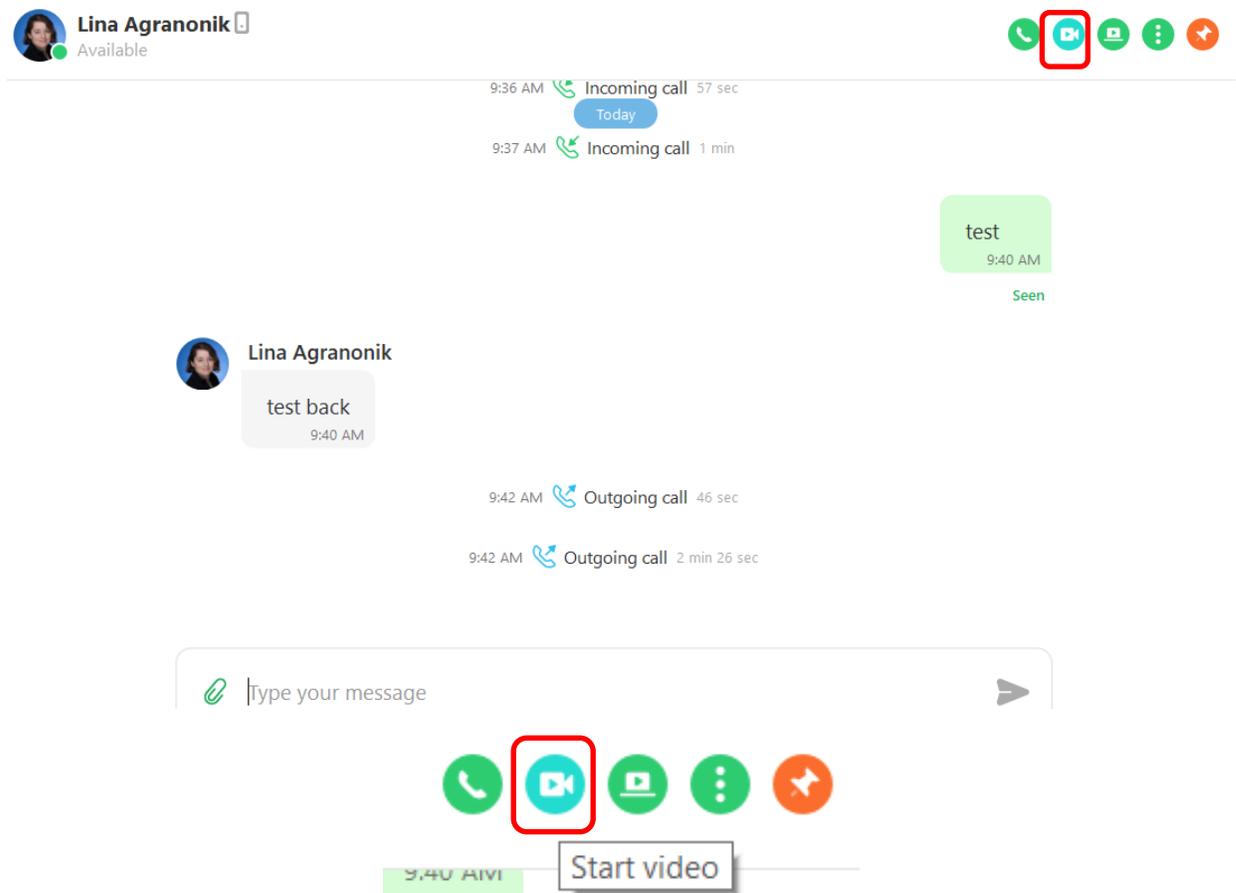


A call will be placed to the user.

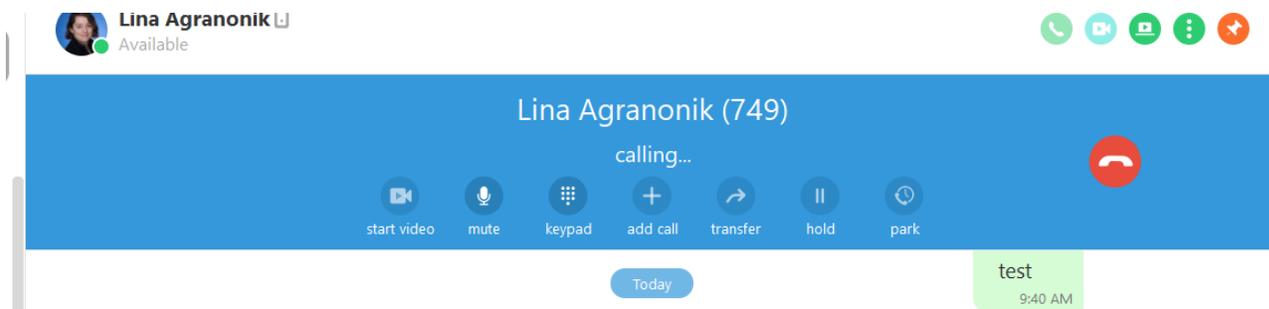


When the user answers, your video is displayed to that user.

The called user clicks the Start video icon in the session bar to start their video.


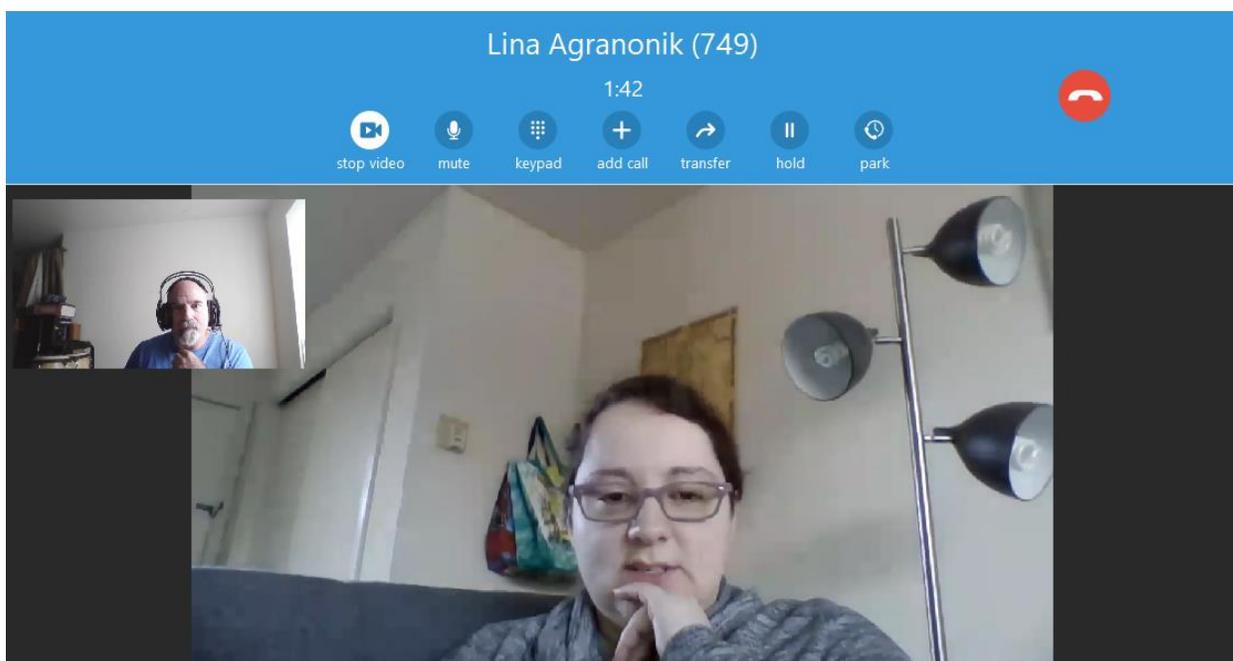


Either party may start/stop their video portion of the call using the start/stop icon, This icon toggles the start and stop states.




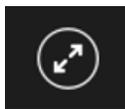


To maximize the video window, click the icon:

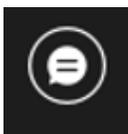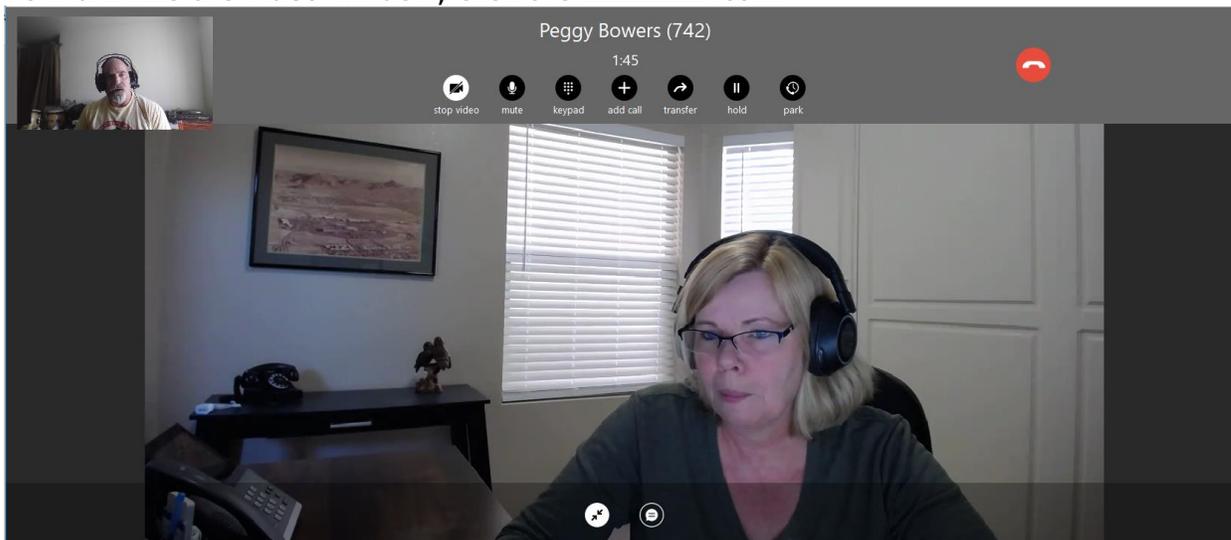

To open a chat window, click the icon:

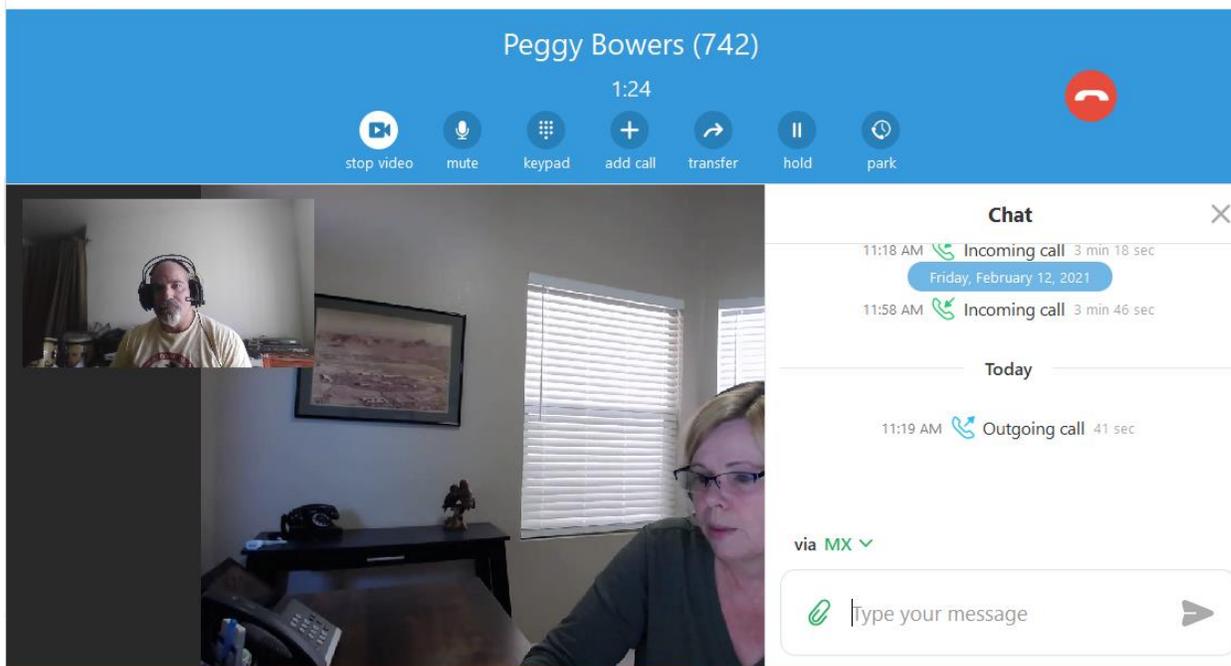

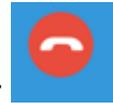

To end the call, click the end call icon in the session bar


13.3 Camera selection

13.3.1 Description

This setting allows you to select the desired camera on the host PC to utilize for video calls.

13.3.2 Operation

Settings>Application>Audio and Video Devices

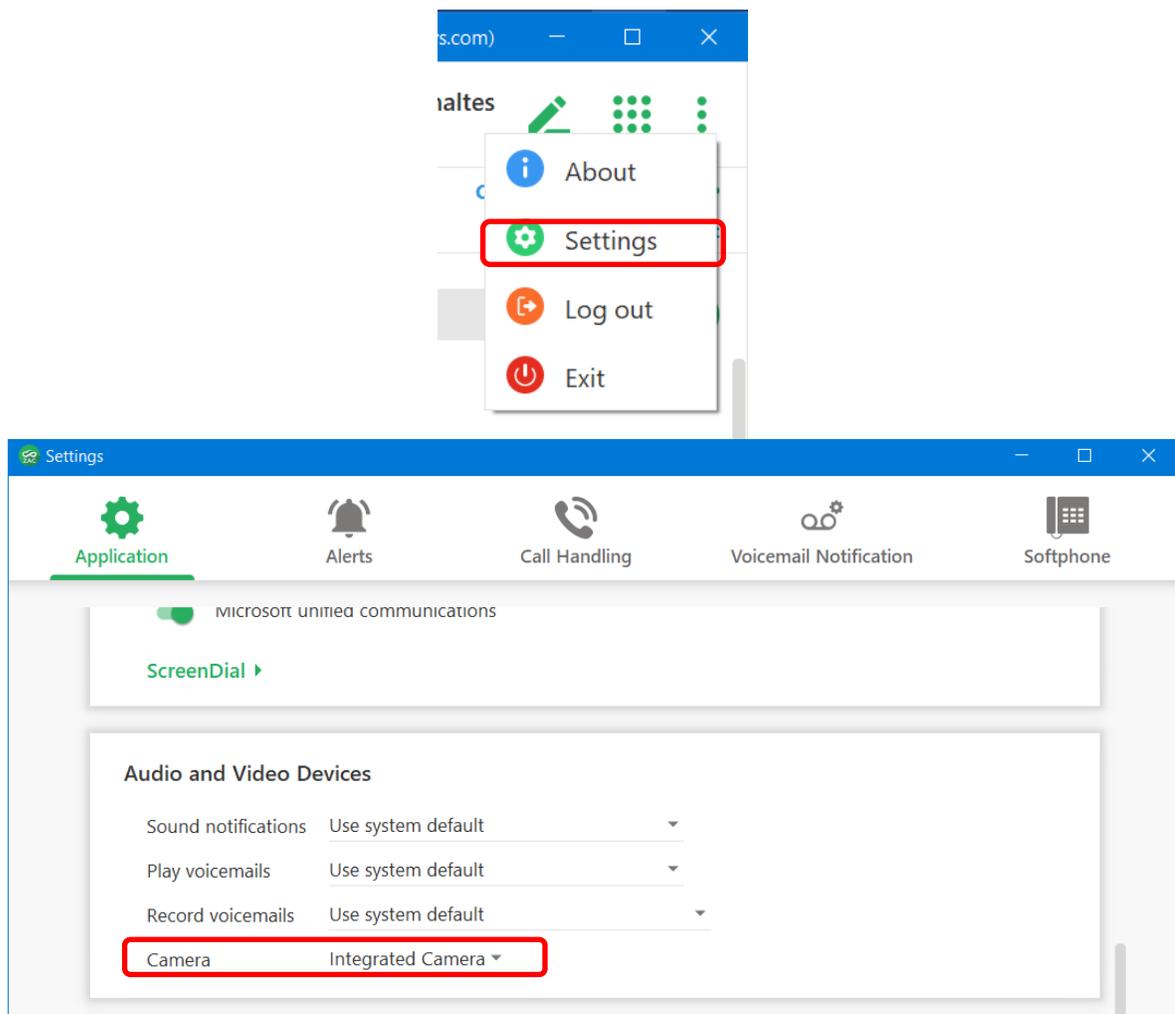


Use the camera drop down menu item to select the desired camera to use.

14 Video Calling – Multi-Party


Zultys Advanced Communicator (ZAC) users can now place video calls to multiple ZAC users as well as external parties. This feature now allows video, screen share, and file transfer between the users/external parties in addition to voice and chat capabilities.

14.1.1 Starting a video conference


- While in a Chat group, start an audio conference call using either start option:

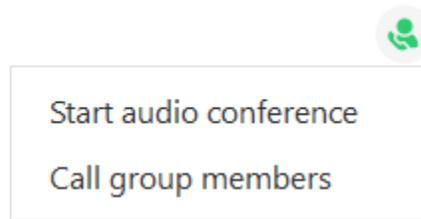



- Participant will click on join call.

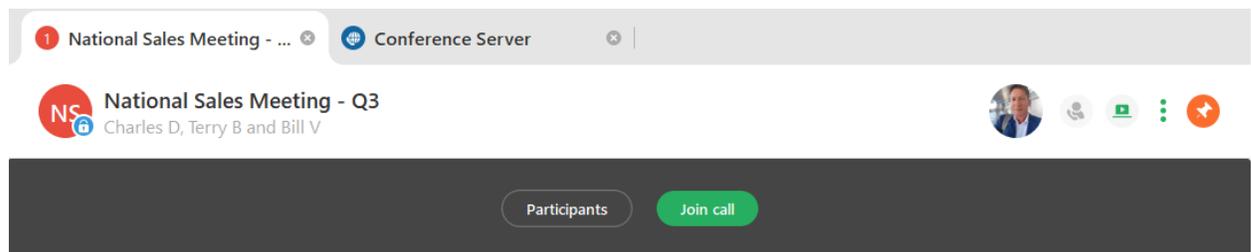


- Participant will see main screen with call controls:

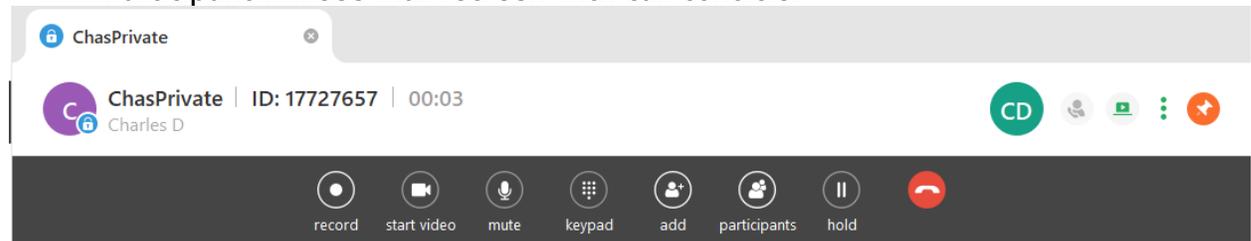

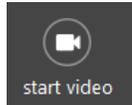


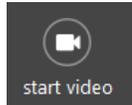
- Participants will click the  icon to start their video stream:
- The collopsed mode video screen is displayed:

14.1.2 Host view:

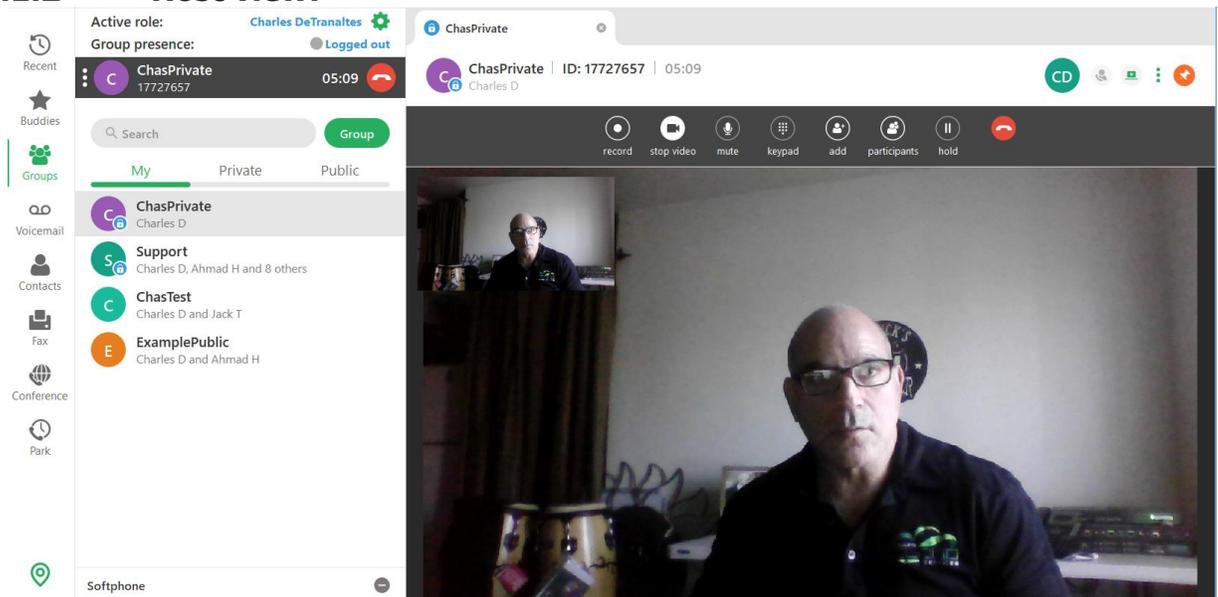

The default setting for a multi-party video conference is Speaker mode. This mode will always present the currently speaking participant as the main video screen for other participants.

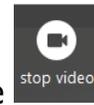

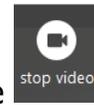
- Participants may stop their video by clicking the  icon in the upper toolbar.

14.1.3 Collapsed - Expanded mode


Participants may choose between collapsed and expanded modes.



- To choose expanded mode, click the  icon in the bottom toolbar.
- Participant speaking in collapsed/speaker mode:

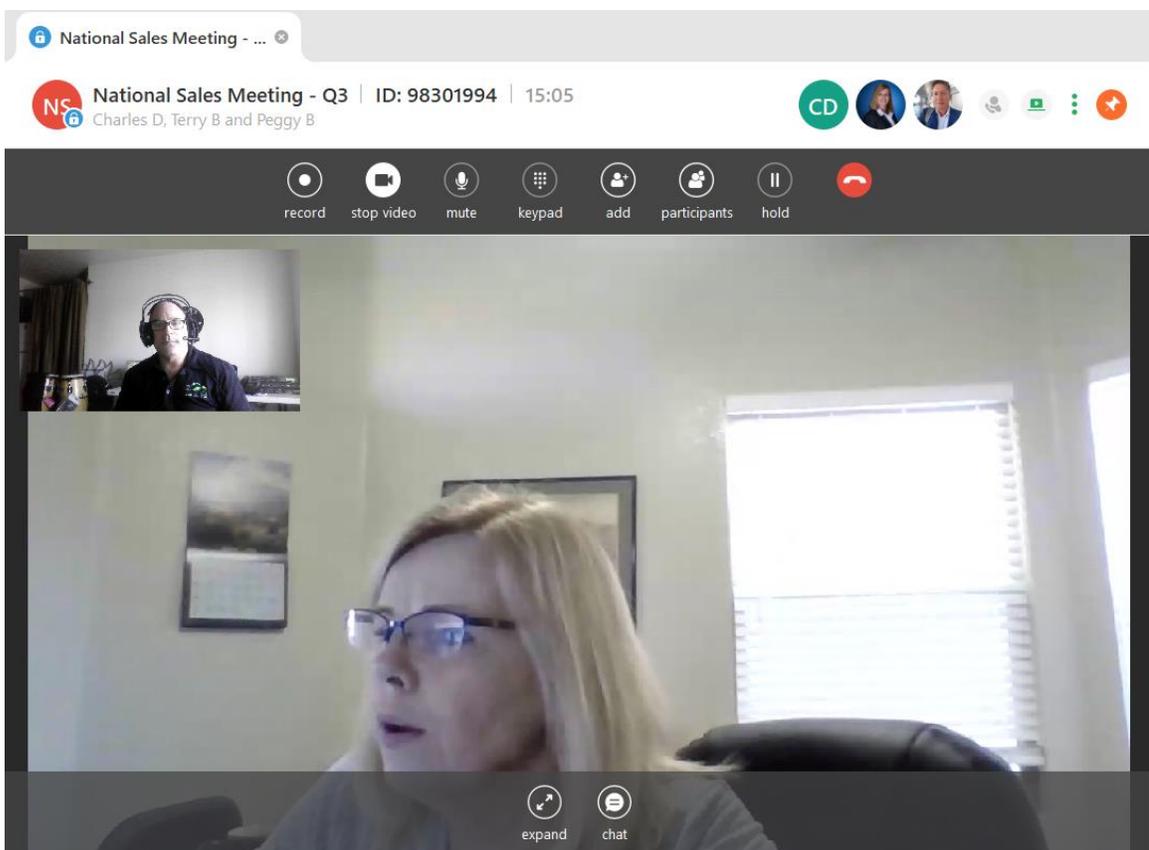


- Participant speaking in expanded mode/Speaker mode:

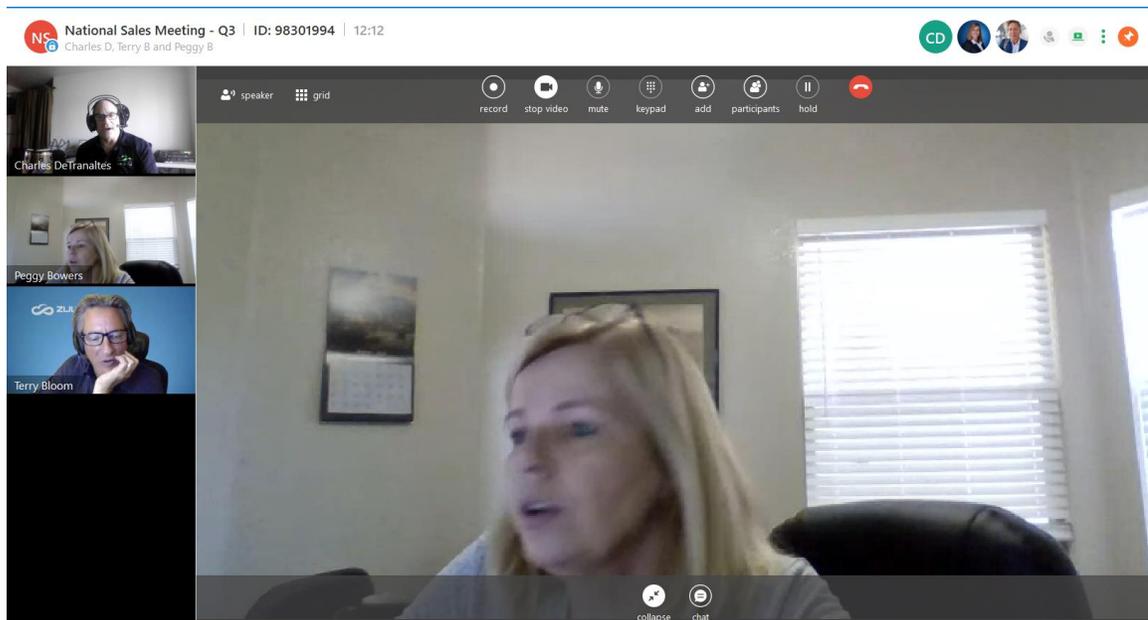

14.1.4 Speaker – Grid mode

Participants may choose between speaker and grid modes. Please note that Grid mode is only available when in the expanded mode.

- To choose the grid mode, click the  icon in the top toolbar.

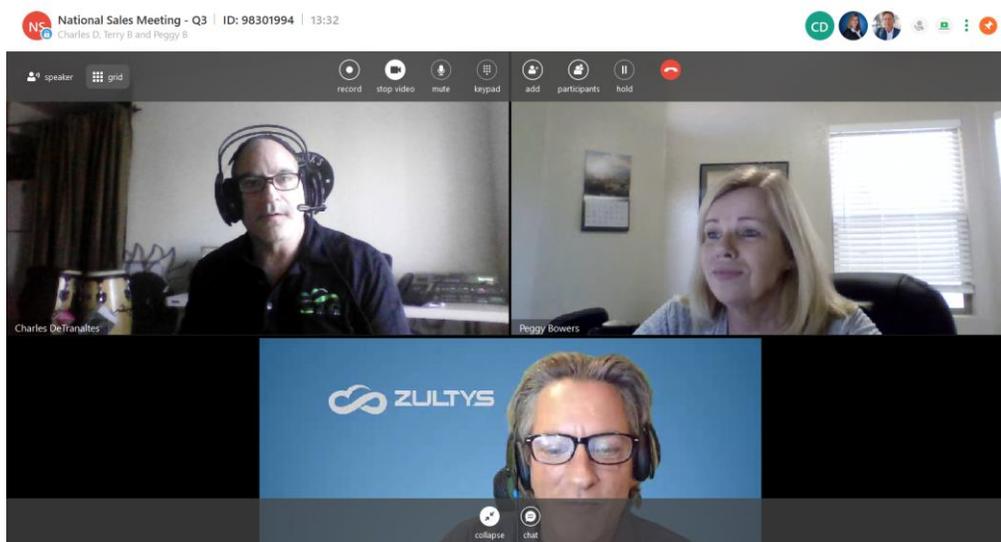


14.1.5 Chat session

Participants may also have a group chat session in the conference. Please note that Chatd mode is only available when in the expanded mode.




- To open the chat session window, click the  icon in the bottom toolbar. A chat window will open and you may send group chats to all participants. Click the X in the Chat window to remove the chat window from the screen

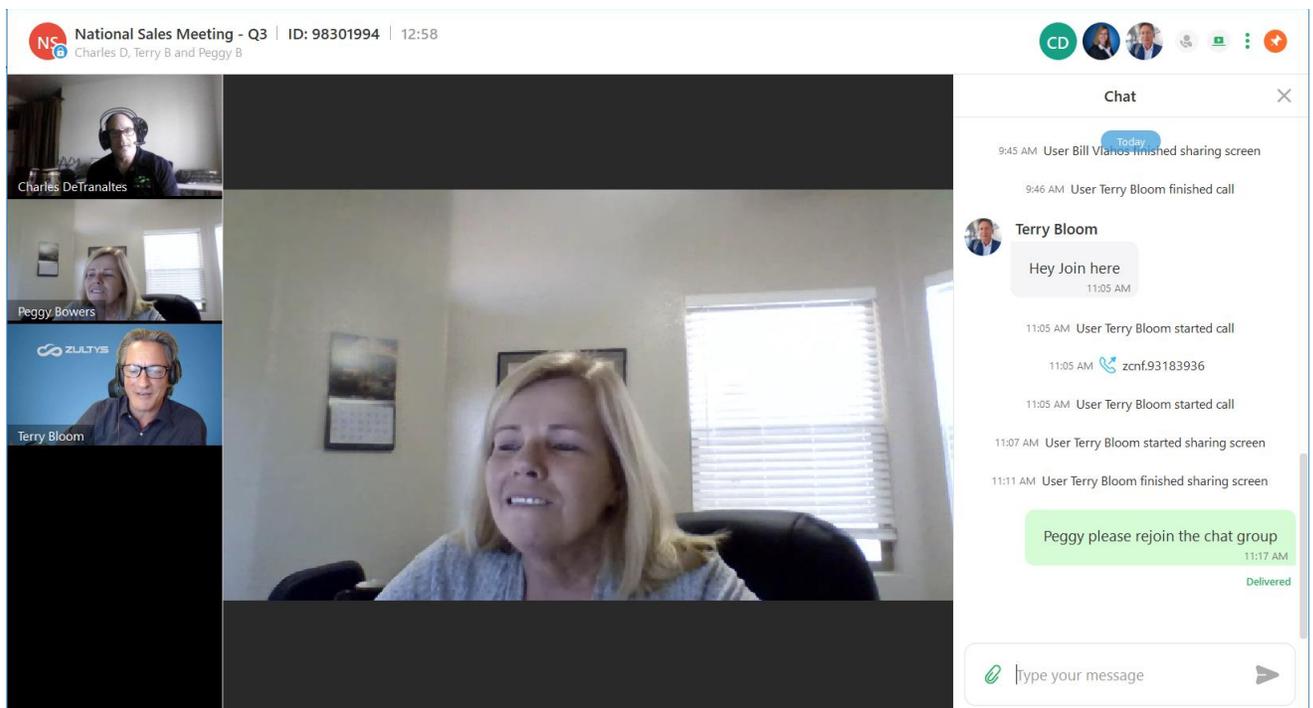


14.1.6 Screen share

Participants may also share their screen with other participants. Please note there may only be one participant sharing their screen at a time.


- Participant clicks on the Start screen sharing icon:

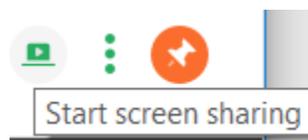


- Participant who started screen share will see:

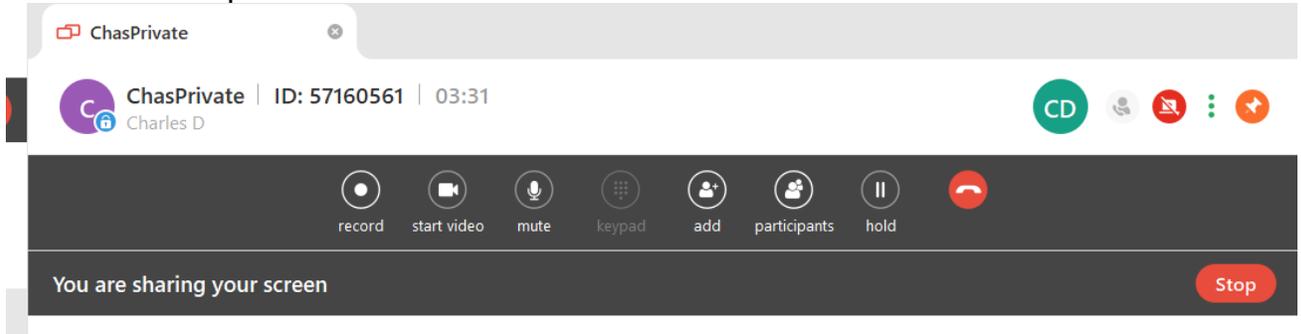

- Participants will see the screen of the sharing party:

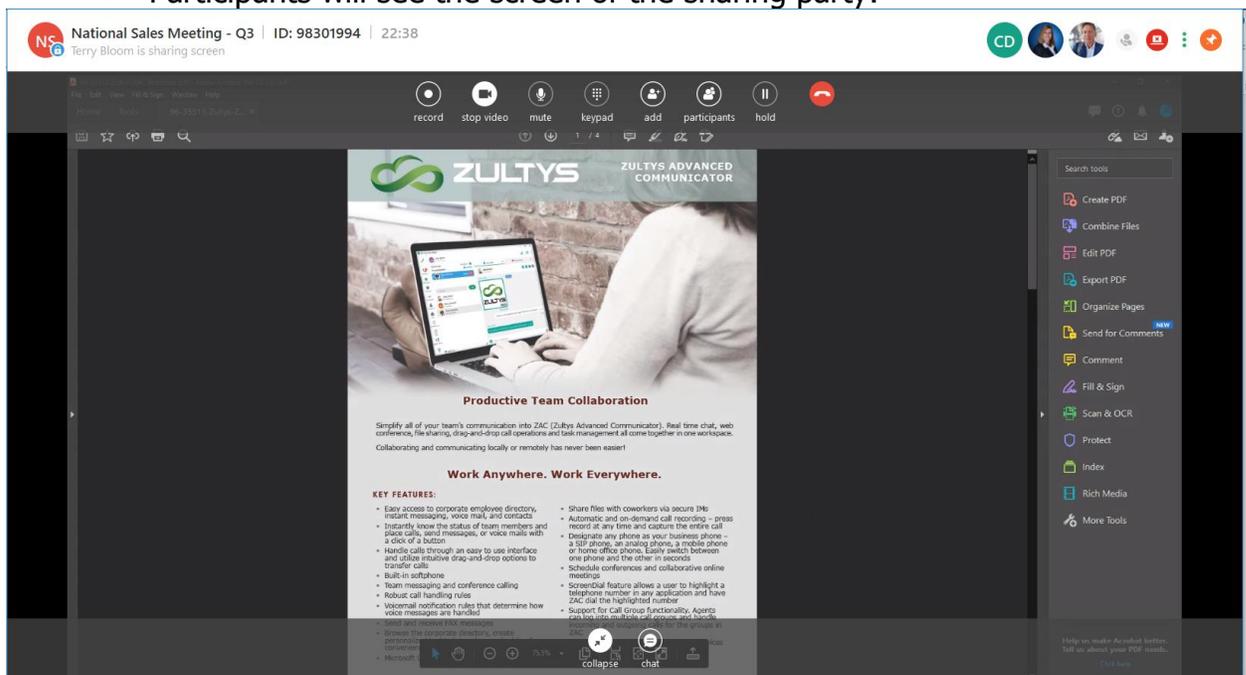



- Click Stop to end the screen sharing session.
- Participants viewing a screen share session may exit the screen share by clicking the Stop/Exit session icon:

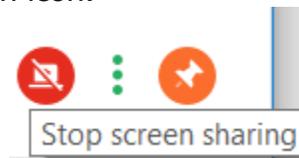


14.1.7 Participants

A user may view all the Participants of the video conference

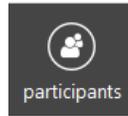

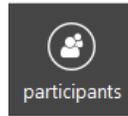
- Participant clicks on the  icon in the upper toolbar:

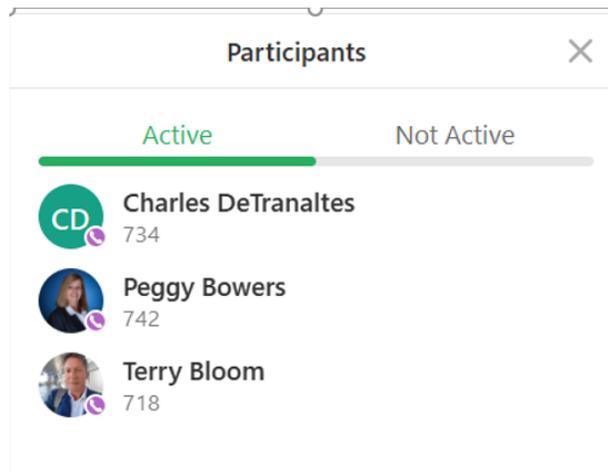



- Click X to close the Participant window.

14.1.8 Add party

You may add a party to an existing video conference.

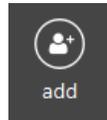

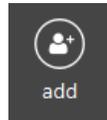- Participant clicks on the  icon in the upper toolbar:

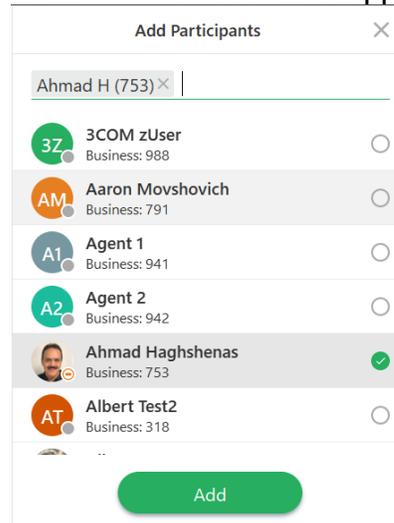

Technical Publications



ZULTYS

April 23
ZAC 8.4 User Manual
Revision 5

- Select the desired users to add to the conference.
- Click add or X to cancel

15 Command line parameters


15.1 Description

ZAC supports a number of command line parameters.

Upon installation of ZAC a default shortcut is automatically placed on the Windows Desktop, as well as in the 'Start Menu | Zultys folder. The simplest way to apply command line parameters is to create a copy of the default ZAC Shortcut and edit the target properties.

15.1.1 Steps to copy and edit shortcut:


- 1) Select Start | All Programs | Zultys – Right click on ZAC and select copy.
- 2) Paste the copied shortcut to the desired location and rename as required.
- 3) Right click new shortcut and select Properties, ensure that Shortcut tab is selected

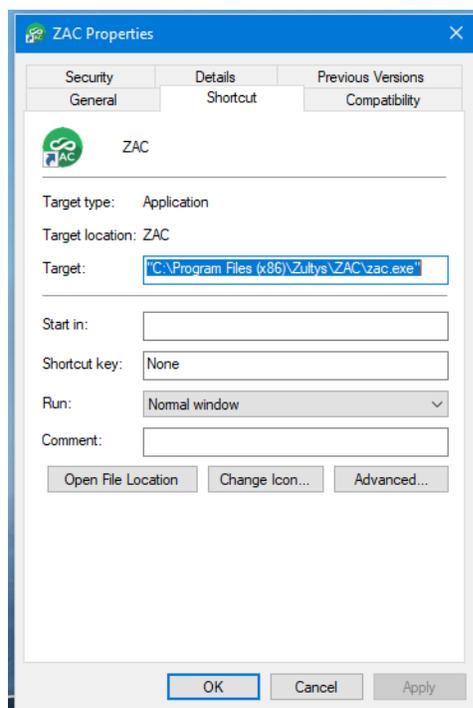

Type the required command line parameters at the end of the target field. For example:

"C:\Program Files\Zultys\ZAC\Bin\zac.exe" new

Will start a new instance of ZAC

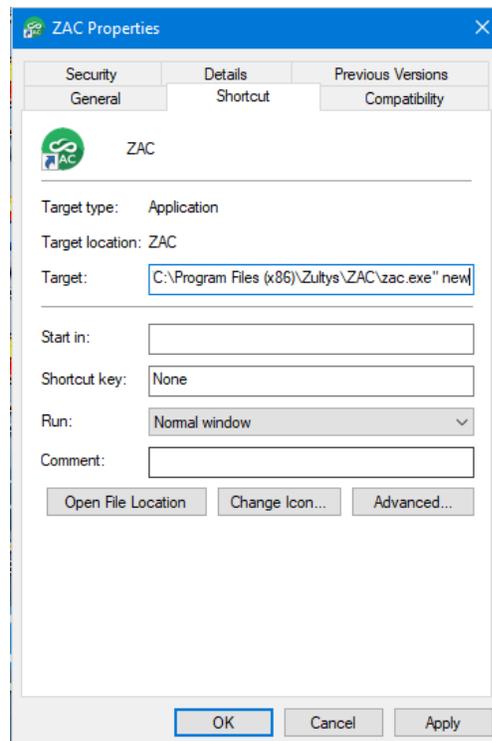

15.1.2 Macintosh

You can use AppleScript (which comes with all versions of the Mac OS) to run command line parameters.

You will need to create a new AppleScript and with the following single line statement.
do shell script "open -n -a /Applications/zac.app --args new"

You may then save it as an Application.

15.1.3 Available parameters:

Function	Syntax	Example
Login Screen Parameters		
Login Name	n=[User Name]	n=john.doe - Login as the user "john.doe".
Password	p=[Password]	p=1234 - Login with the password "1234".
MX IP Address/URL	u=[MX Address]	u=192.168.1.100 - Connect to the MX at 192.168.1.100.
Exit	exit	Exits ZAC
New Instance	new	Starts a new instance of ZAC
Logout	logout	Logs out the current user and presents the login screen
Force Agent Role	forceActiveRole=<agentGroupProperty>	If set will force all outgoing calls through agent group, provided in <agentGroupProperty> which is the value by extension or name. If cmd line set, active role change should is disabled in ZAC UI.
Roles	roles=[role_list]	<ul style="list-style-type: none"> • roles=[all] - Logs user into all their roles. • roles=[Main_Operator,Sales] - Logs user into call groups named "Main_Operator" and "Sales". Separate each call group with a "," (comma) and no spaces. <p>Note: that the Role screen cannot be bypassed if multiple locations are defined on the MX. Specified roles will be checked, but the user must click <i>OK</i> to continue. Call Groups cannot be named "all" if there is a call group</p>

Function	Syntax	Example
		with this name the roles=all will not function properly, as a workaround use "all_roles" instead of "roles=all" or rename the call group.
Call	(call=<number>)	Start ZAC and place call to specified number
Location	location=[location name]	Start ZAC and use the location specified in the command line
Bind to Device	b=[device_id]	For example: b=000BEA801234 - Binds to Device ID 000BEA801234

16ZAC 8.2 Features/Functionality

This section describes the new features added starting in version 8.2.

16.1 Speed Dial

16.1.1 Description

System Speed entries are now available directly from the ZAC interface. ZAC users may initiate a call to a pre-configured number using this feature.


16.1.2 Operation

Click the Speed Dial icon in the left menu bar:




Note: If you have Agent Roles enabled, the Speed Dial icon is below the Agent Role icon. You may use the scroll arrow to display the Speed Dial icon.

Select the desired contact/number and click the call icon:

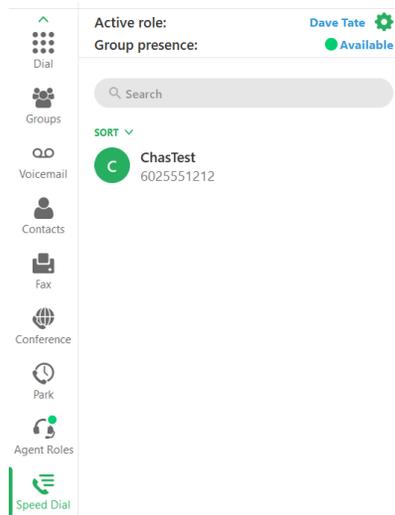

Conditions

- System Speed dial numbers are configured in the MX Administrator program.
MX Administrator>Configure>System Speed Dials

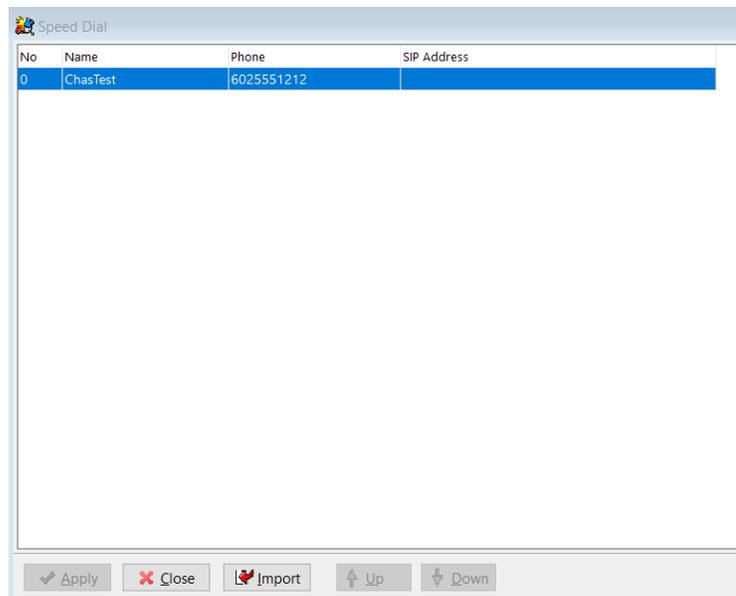


16.2 Change another user's presence

16.2.1 Description

This feature provides a method for a user to change another user's presence and their presence note.


16.2.2 Operation

Click the desired contact/buddy and select Info from the more menu:

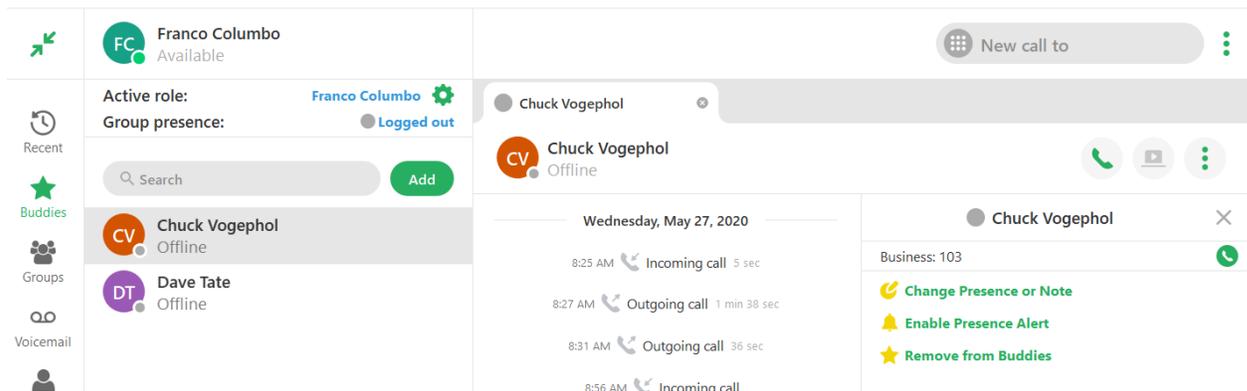


The screenshot shows the ZULTYS interface with Franco Columbo as the active user. The 'Buddies' list includes Chuck Vogephol (Offline) and Dave Tate (Offline). The contact details for Chuck Vogephol are displayed, showing a call log for Wednesday, May 27, 2020. The 'More' menu is open, showing options: 'Change Presence or Note', 'Enable Presence Alert', and 'Remove from Buddies'.

Click the Change Presence or Note option. Enter a note and select the desired presence for the user.

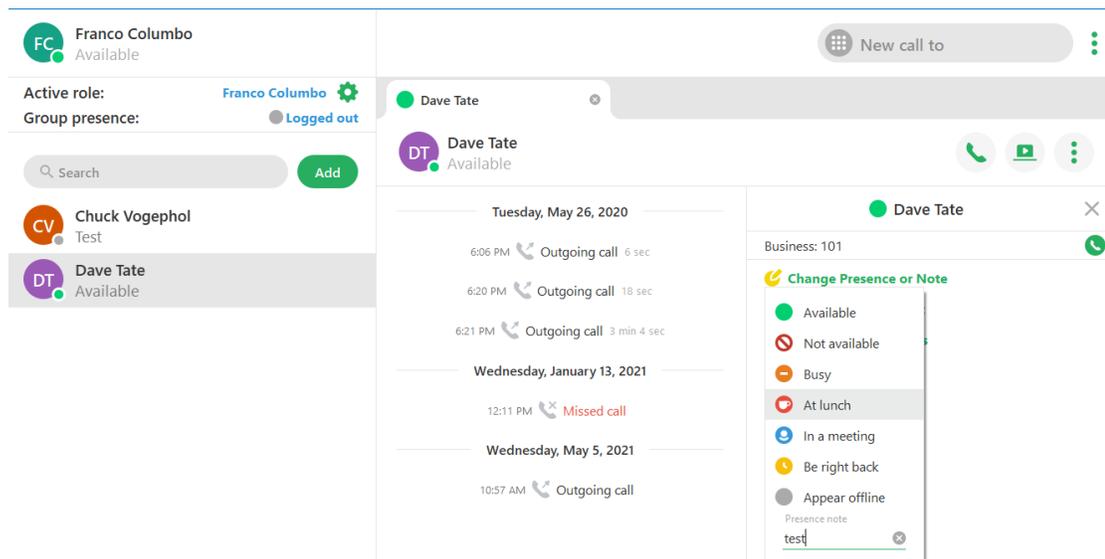

The screenshot shows the ZULTYS interface with Franco Columbo as the active user. The 'Buddies' list includes Chuck Vogephol (Test) and Dave Tate (Available). The contact details for Dave Tate are displayed, showing a call log for Tuesday, May 26, 2020. The 'More' menu is open, showing the 'Change Presence or Note' option selected. The menu options are: 'Available', 'Not available', 'Busy', 'At lunch', 'In a meeting', 'Be right back', and 'Appear offline'. A presence note 'test' is entered in the text field.


The user's presence and note are updated.

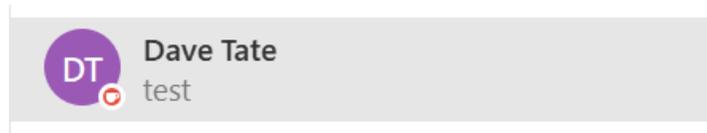

Conditions

- A user must have privileges to change another user's presence and note. This is configured in MX Administrator>Users>User Profiles>General tab. A checkmark indicates users with this profile may set other user's presence/note.
 Can set presence / presence note of other users

A user will not see the option to change presence or note if this is not enabled:

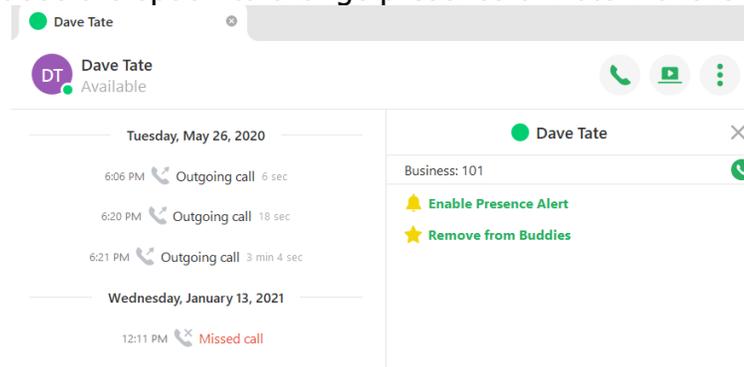

- A user must be logged into ZAC in order for this feature to function. Users' may not perform presence change on a ZAC user that is not logged in.

16.3 User Profile Settings

16.3.1 Description

This feature allows administrators to enable/disable certain features in MX Administrator that are available to ZAC users. This allows a method to hide feature functionality from ZAC users.

16.3.2 Operation:

MX Administrator>Users>Profiles

Features in the General, Client settings and Misc tab can be configured. The items that may be configured are:

General tab:

- Enable voice mail
- Can view parked calls
- Enable ZAC usage

Enable IM (*please note conditions*)

Enable video

Can change presence/presence note of others

- Can return calls from voice mail

Client tab:

- Manage multiple calls via

Misc tab:

- Call Handling rules
- Softphone
- Call monitoring
- External Phone associations>Allow binding to ZAC

16.3.3 Conditions

- Disabling IM prevents the operation of IM and file exchanges for Webchat agents. User profiles configured for WebChat agents should always have IM enabled.
- ***Please note that Video capability is configured to OFF by default in User Profiles. Video must be configured to ON for ZAC users wanting to***

utilize video functionality. Please note that configuring video to ON when a user is on an active call will result in the user being able to start video immediately while on that call.

16.4 ZAC Local File encryption

16.4.1 Description

ZAC will now encrypt files that are locally downloaded on a user's PC.

16.4.2 Operation

None. This operation is automatic and no configuration changes in MX Administrator or ZAC are required.

The following file types will be encrypted:

- Voicemail
- Call recordings
- Faxes
- Chat files
- Greetings
- Local database

16.4.3 Conditions

- The contents of these files cannot be accessed outside ZAC.


16.5 Queue Monitor Supervisor Commands

16.5.1 Description

This feature allows supervisor functions for calls in queue to be performed directly from Queue Monitor screen. Supervisors of ICC groups may now access these options directly from the ZAC Queue Monitor.

16.5.2 Operation

- Select call-in-queue
- Select the action to be applied to selected call

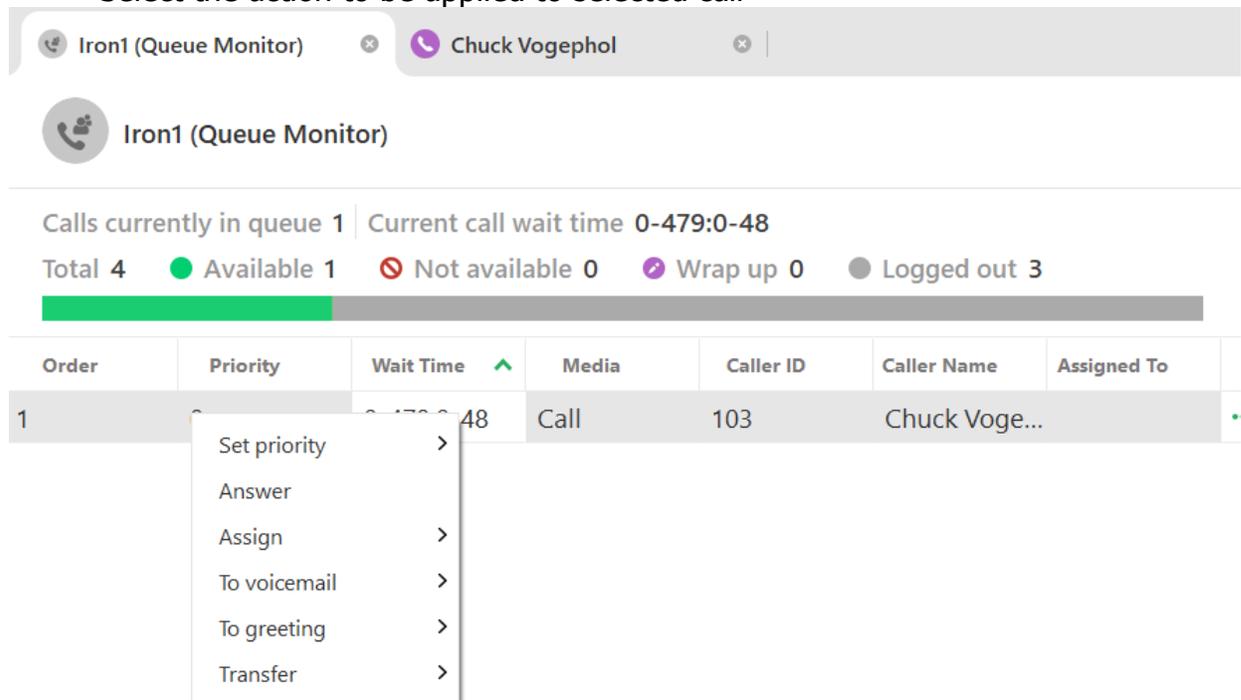


The screenshot displays the Queue Monitor interface. At the top, there are tabs for 'Iron1 (Queue Monitor)' and 'Chuck Vogephol'. Below the tabs, a call icon and 'Iron1 (Queue Monitor)' are visible. The main area shows 'Calls currently in queue 1' and 'Current call wait time 0-479:0-48'. A status bar indicates 'Total 4', with 'Available 1' (green dot), 'Not available 0' (red dot), 'Wrap up 0' (purple dot), and 'Logged out 3' (grey dot). A table lists the call details:

Order	Priority	Wait Time	Media	Caller ID	Caller Name	Assigned To
1		0-479:0-48	Call	103	Chuck Voge...	

A context menu is open over the first row, listing the following actions: Set priority, Answer, Assign, To voicemail, To greeting, and Transfer.

Note: For Automatic Call Back calls-in-queue, only the listed below options are available:

- Set Priority
- Disconnect

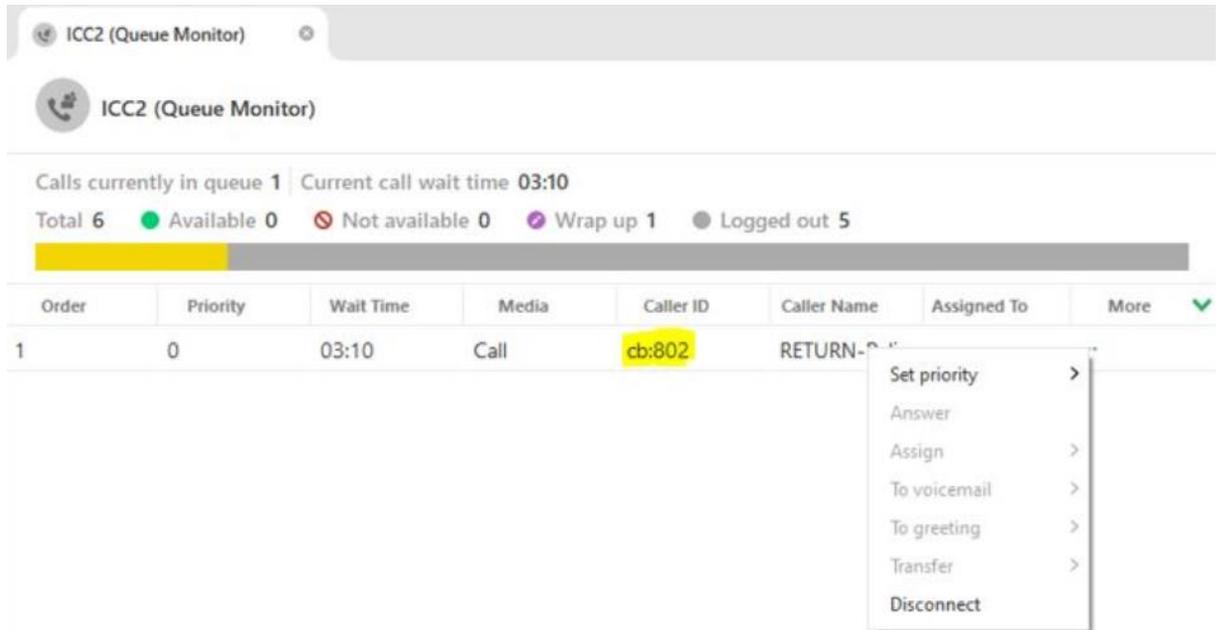

The screenshot shows the 'ICC2 (Queue Monitor)' interface. At the top, it displays 'Calls currently in queue 1' and 'Current call wait time 03:10'. Below this, a status bar shows 'Total 6', 'Available 0', 'Not available 0', 'Wrap up 1', and 'Logged out 5'. A table below lists call details:

Order	Priority	Wait Time	Media	Caller ID	Caller Name	Assigned To	More
1	0	03:10	Call	cb:802	RETURN-P		<ul style="list-style-type: none"> Set priority > Answer > Assign > To voicemail > To greeting > Transfer > Disconnect

16.5.3 Conditions

- This functionality is only available to Supervisors of an ICC group.


16.6 Recent Screen Improvements

16.6.1 Description


The Recent screen has been improved to include Avatars, user presence, user typing and draft functions.

16.6.2 Operation


- Avatars and presence in the Recent list:

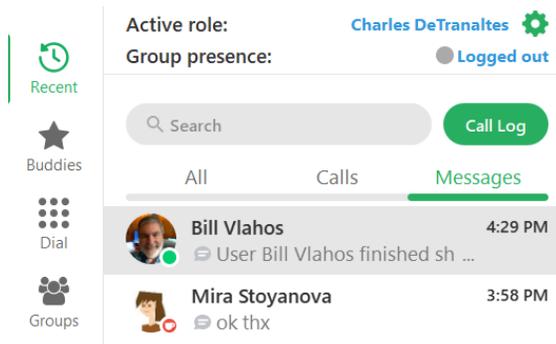

- Avatars and presence in the Recent list when engaged in a chat:

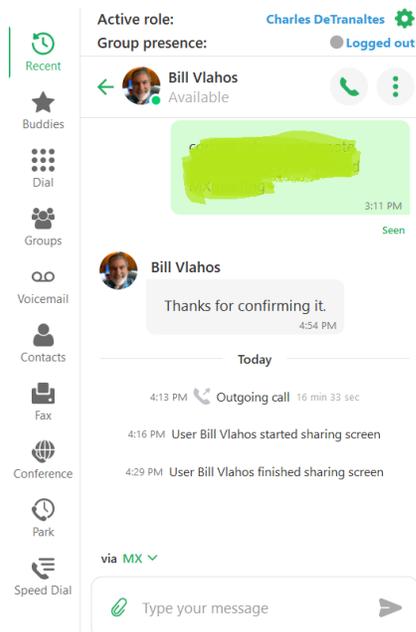

- Draft status displayed in a chat:

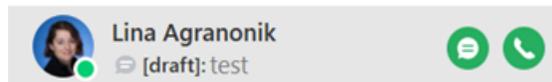

- User typing indication in a chat:

Bill Vlahos is typing •••

via MX ▾

 Type your message 

16.6.3 Conditions

- If there is a draft for a particular chat, the draft chat will appear at the top of the Recent list.
- Draft content is maintained on a ZAC re-login.


16.7 MXIE Contact Import

16.7.1 Description


This feature allows ZAC users to import their MXIE local address book contacts. Contacts display in the Imported tab of the Contacts area.

16.7.2 Operation

- Navigate to Contacts>Imported.
- Click the more icon.

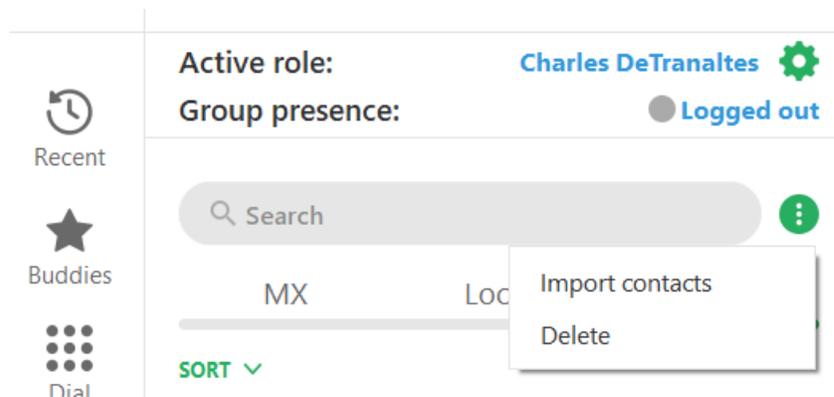

- Click Import contacts.
- Select the MXIE local address book file type.
- Use the File explorer to navigate to where the local contacts are stored.

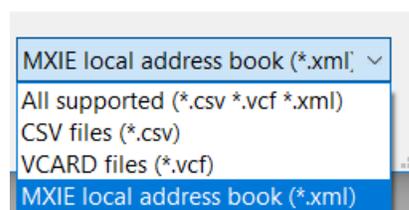


16.8 Read Status improvements of voicemail and call recordings

16.8.1 Description


This feature allows the user to change the read status of voicemail and call recordings in a bulk fashion. Users can now change the read status of multiple or all message types.

16.8.2 Operation

- From the Voicemail menu click the Edit button:

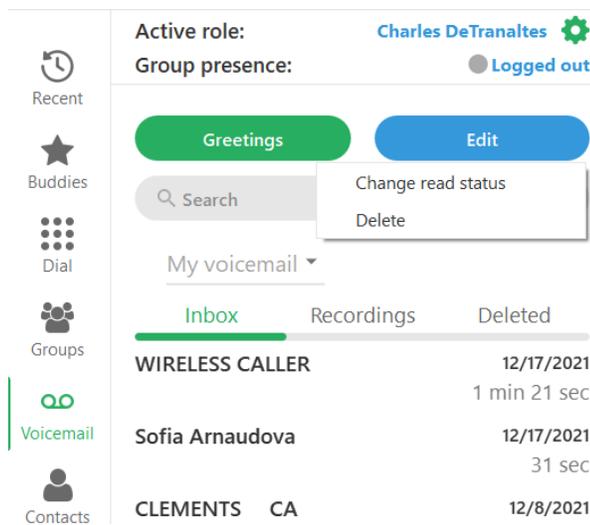


- Click the Change read status item:

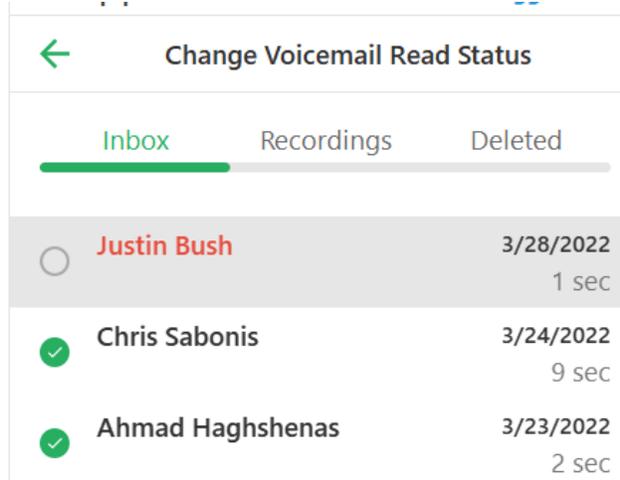

Mark All as Read

Change

- Click Mark All as Read:

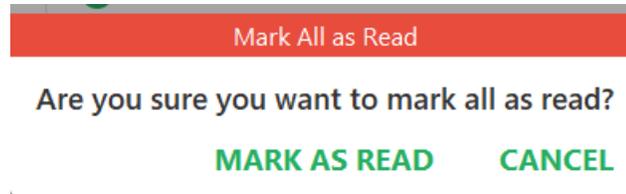

- Confirm the selection

You may also select/unselect individual messages to change the status.

- Check/uncheck the messages to change the status of:

<input type="radio"/>	Justin Bush	3/28/2022 1 sec
<input type="radio"/>	Chris Sabonis	3/24/2022 9 sec
<input type="radio"/>	Ahmad Haghshenas	3/23/2022 2 sec
<input checked="" type="radio"/>	Justin Bush	3/21/2022 18 sec

- Click the Change button:

Mark All as Read

Change

16.8.3 Conditions

16.9 Conference Accept/Reject Status

16.9.1 Description


This feature allows conference participants to accept or reject a conference invitation. In addition, the conference owner may re-invite participants who initially rejected the conference once the conference has started.

16.9.2 Operation

Conference Participants:

Internal participants who receive a conference invitation may click on the invitation to display the conference information.

The participant may select to Accept or Reject the conference invitation.

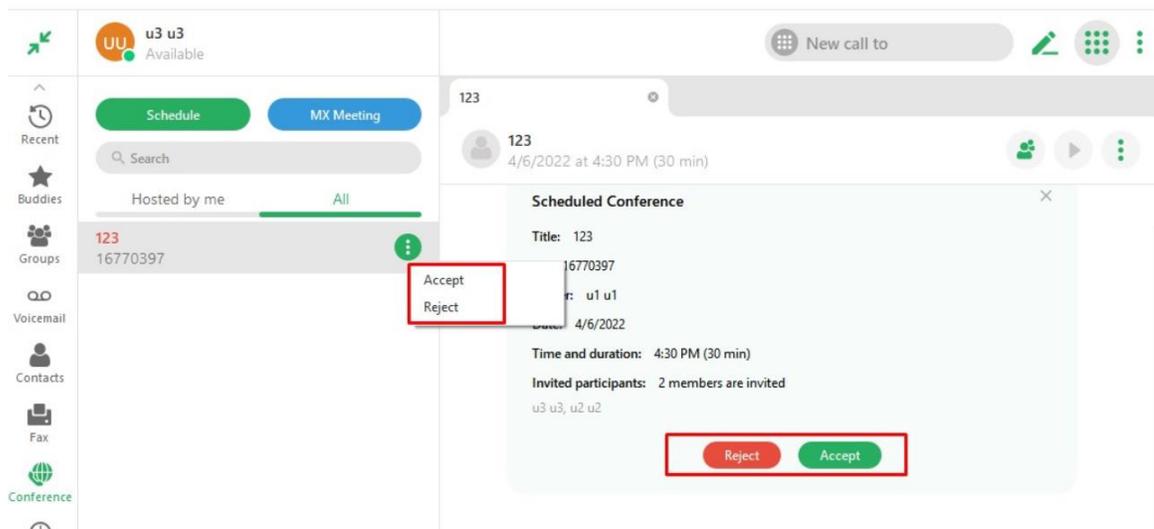

If the participant accepts the invitation, the conference is added to their calendar and they will receive the notification icon prior to the conference start time.


If the participant rejects the invitation, they will be prompted with a confirmation dialog:



Clicking Reject will delete the invitation, and no calendar invite is added. The user will not receive any notification when the conference starts.


Conference Host:

Once the host starts the conference, they may navigate to the Info screen to view the participants and their status:

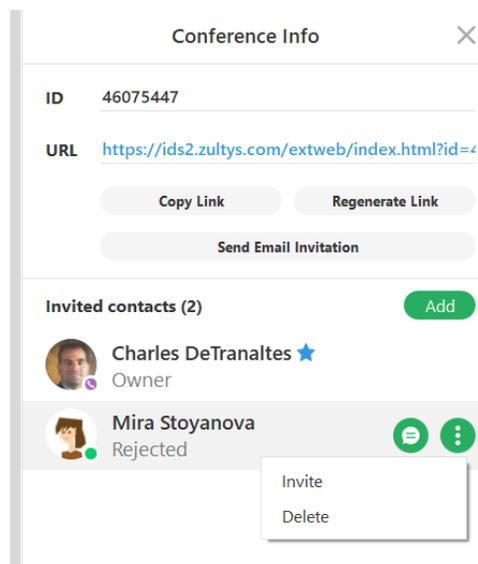


The host may invite participants who rejected the conference invitation. They do this by selecting the More icon and then selecting Invite.


The user status will change from Rejected to Pending:

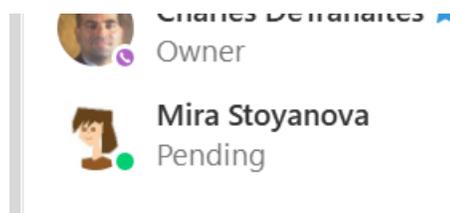


Once the participant Accepts the invitation, the Info screen changes to reflect the new status:

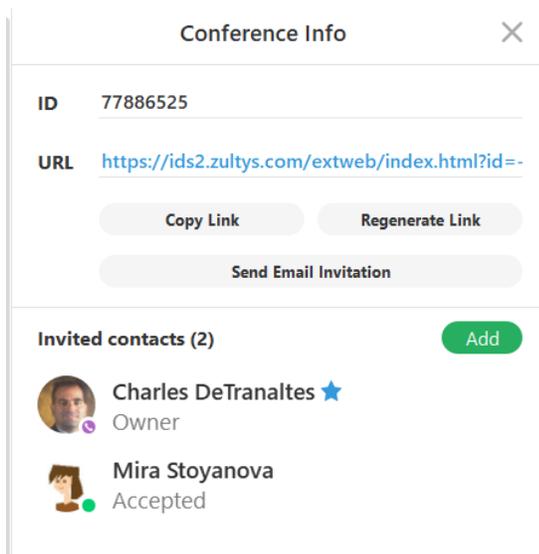

When the participant joins the conference the Participants tab will reflect their status as Active.

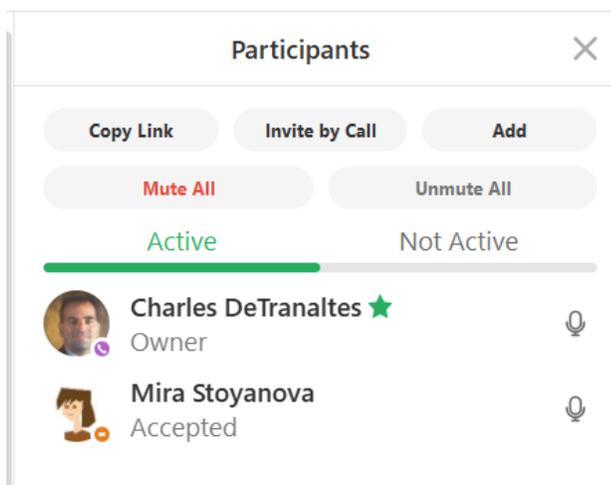


The host may also delete the participant who rejected the invitation by clicking on the Delete option. This will remove the participant from the Info screen.

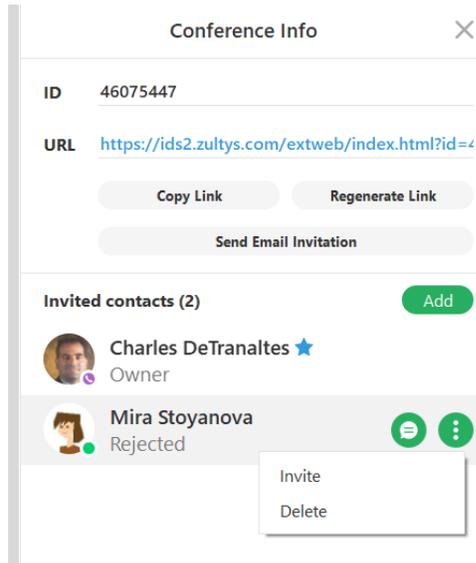

16.9.3 Conditions

- Conferences with a "pending" status will be shown on the top of conferences list in the All tab. These conferences will also be marked with a "red" color.

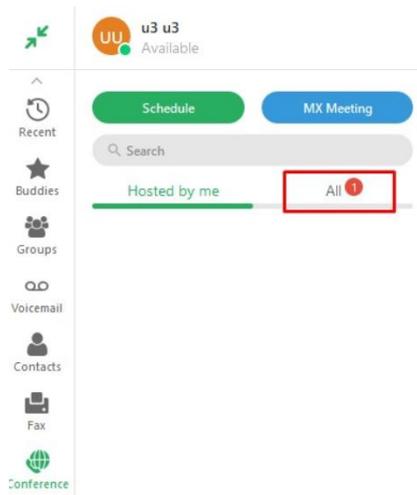

16.10 Search Functions


16.10.1 Description

Multiple areas of ZAC include new search functionality. Users may locate information by performing a search function. This search function is incorporated into the Recent, Voicemail, and Fax menu areas.

16.10.2 Operation


Recent>All, Calls or Messages

- Enter the desired text to search for in the search bar. All matching text will be presented.

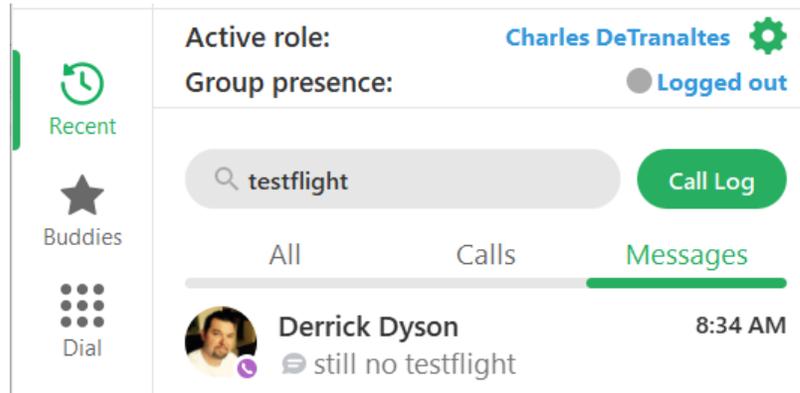

Voicemail>Inbox

- Enter the desired text to search for in the search bar. All matching voicemail messages will be presented.

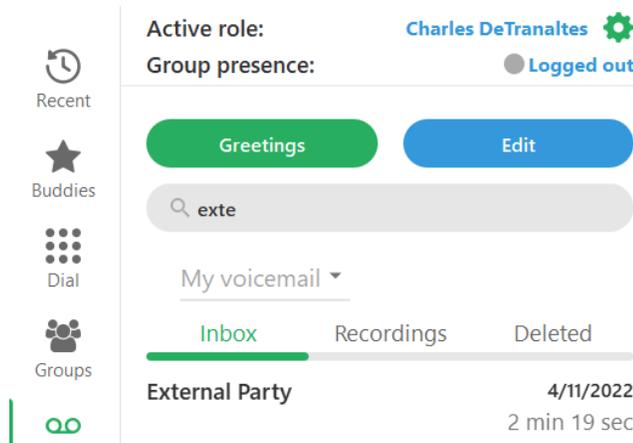

17ZAC 8.4 Features

17.1 Full screen mode improvements


17.1.1 Description

ZAC 8.4 includes numerous improvements when the user is in the full screen mode. Improvements in control location, screen size, tab management as well as other improvements were added to full mode operation. The improvements make application activities (answer calls, messages, etc.) easier without having to explicitly switch tabs. Improvements also allow the user to maximize the screen area when using collaborative functions like screen sharing, video conferencing.


17.2 Operational Improvements

17.2.1 General


- The top level More button menu  (About, Settings, Logout and Exit options) has been moved to the Avatar/presence part of the screen. The button remains in this location throughout compact/full mode changes.
- Quick search is moved to the Avatar/presence part of the screen and remains constant there.

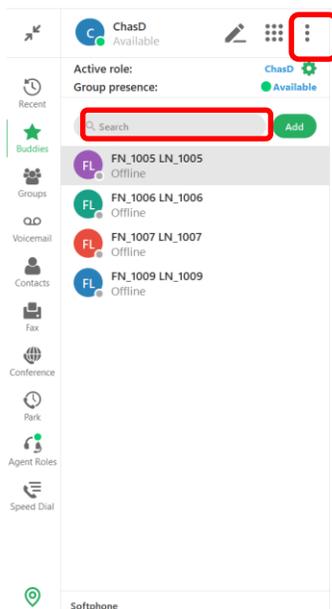


- Clicking an Avatar of an internal user will display the user's information and quick action tools.

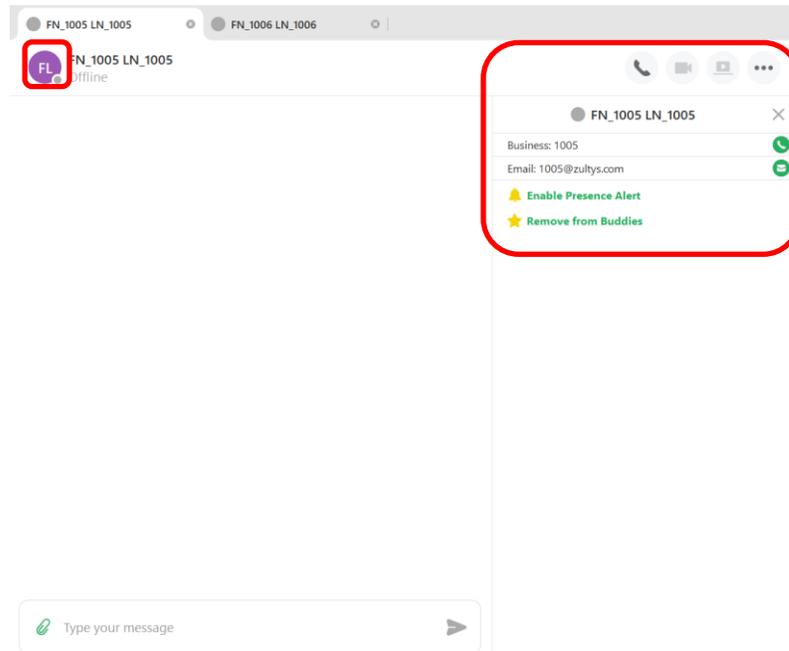

- Presence can be changed when in tabbed mode on an active call or conference.

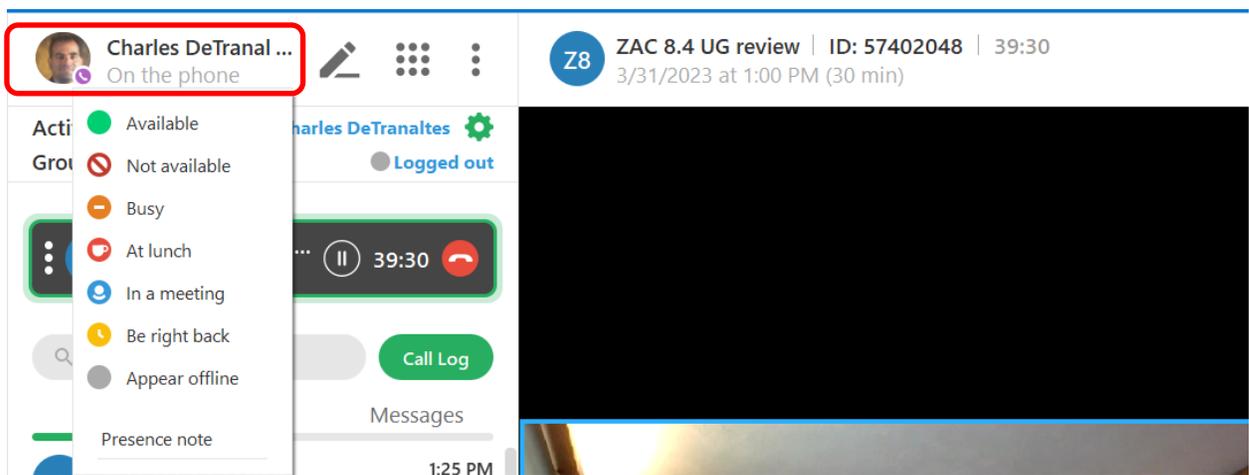


- Clicking on a user avatar will display the information tab for the user (internal user)

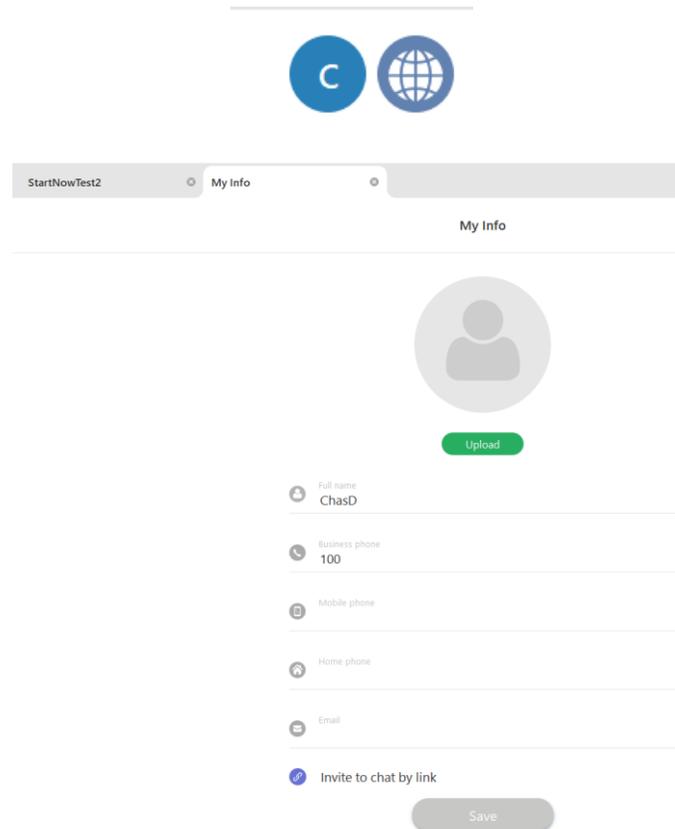


17.2.2 Conference:

There were numerous improvements when utilizing the Conference feature. The improvements were designed to maximize screen space and make utilizing collaboration tools easier.

- Grid mode is set by default for video conferences. The last mode (Speaker or Grid) utilized by the user is now retained.

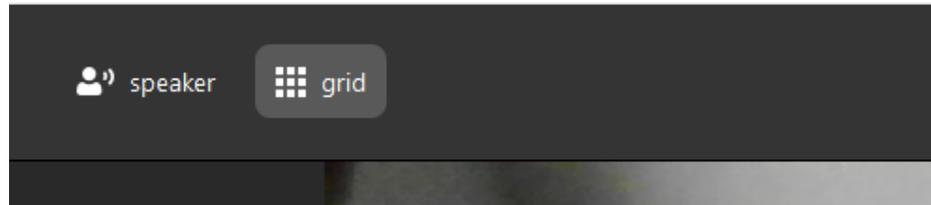

- Show/hide side screen – This option allows you to minimize the side screen to view more collaboration space and remove the left call/information screen.

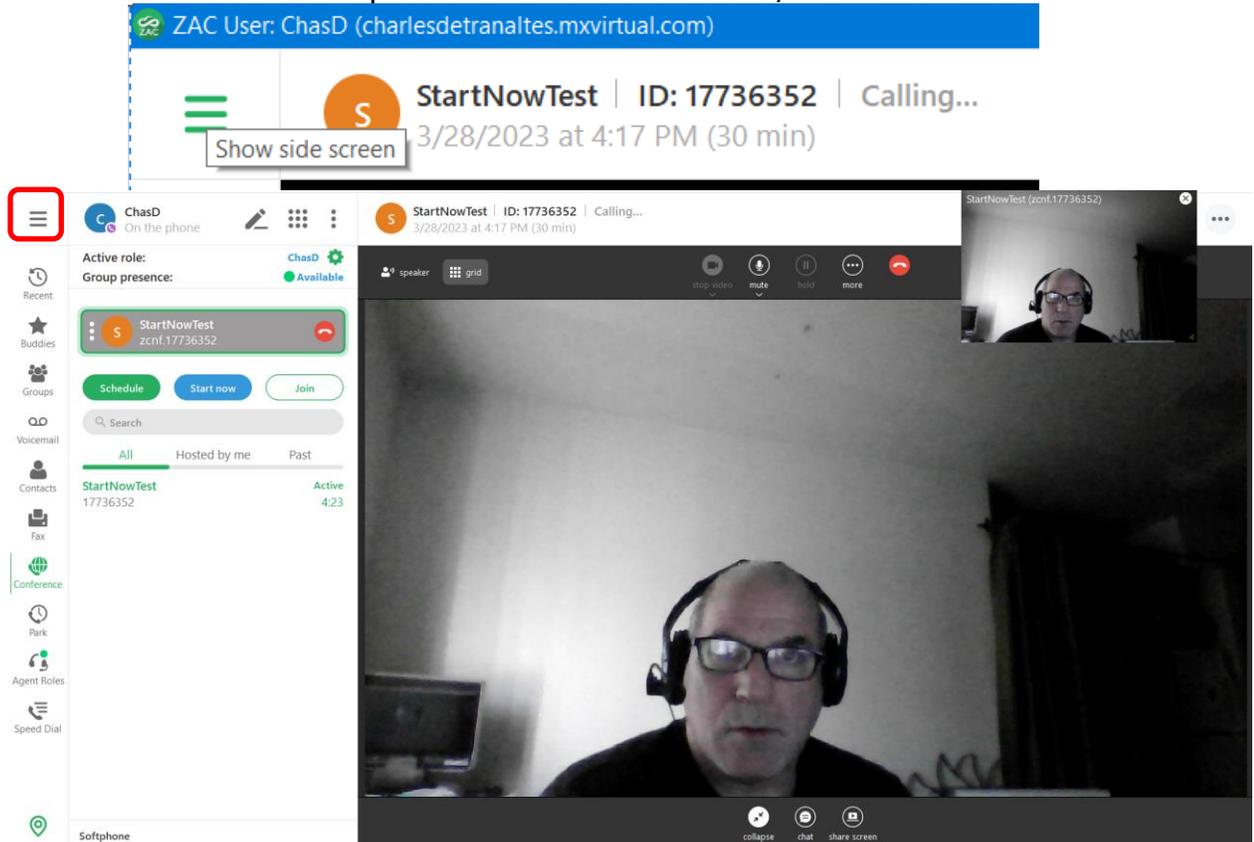


After clicking the button, the viewing space is maximized.




Click the show/hide side screen icon again to restore the side screen.

- Participant status displayed in the participants header.

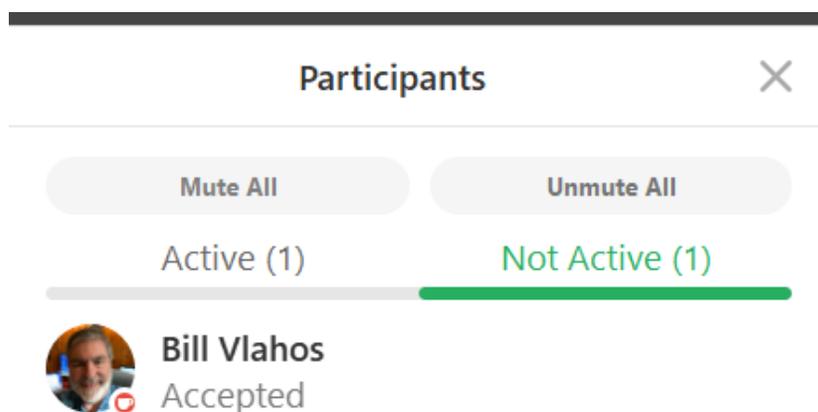


- Conference Preview window. This feature allows you to select audio and video devices prior to joining a conference.

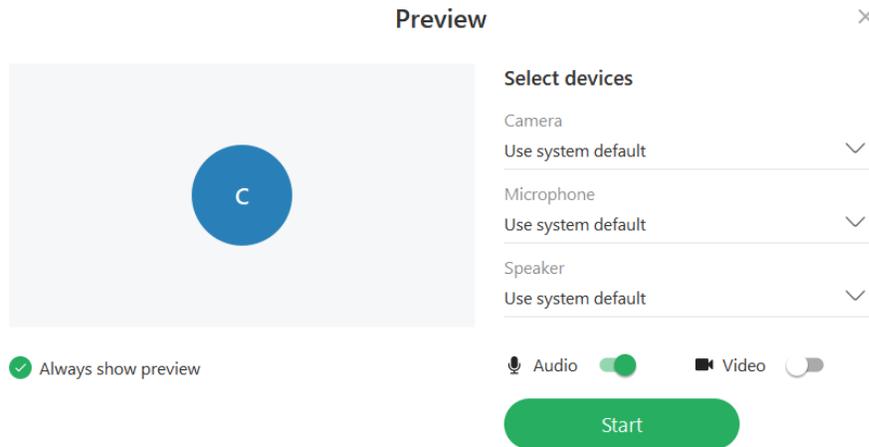


If the user disables Always show preview they can restore the functionality:

Settings>Application>Audio and Video devices>

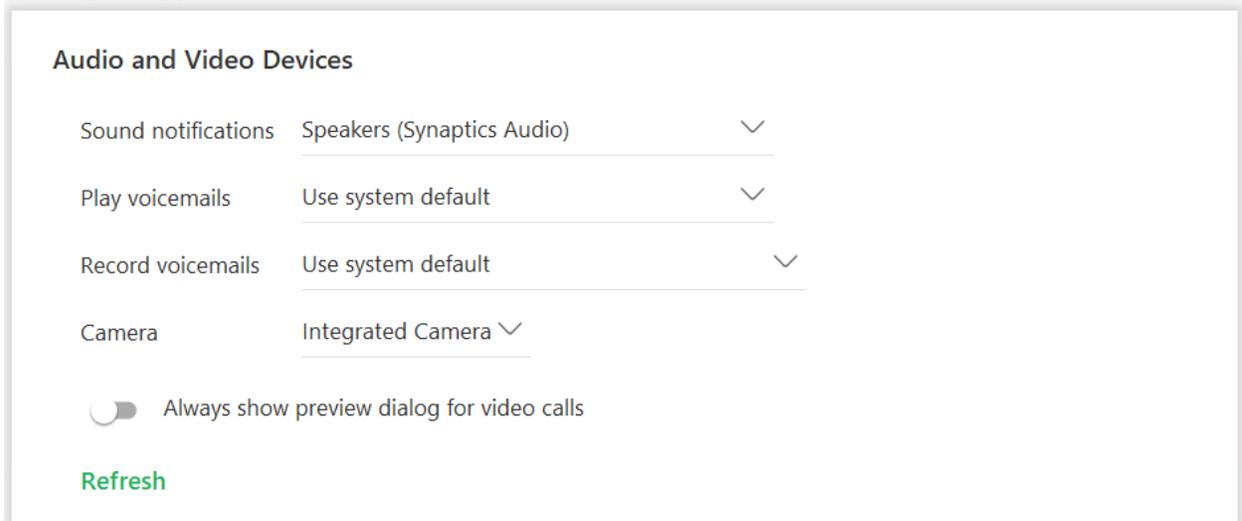



- Join conference by conference ID. This feature allows a user to join a conference simply by entering the conference ID.

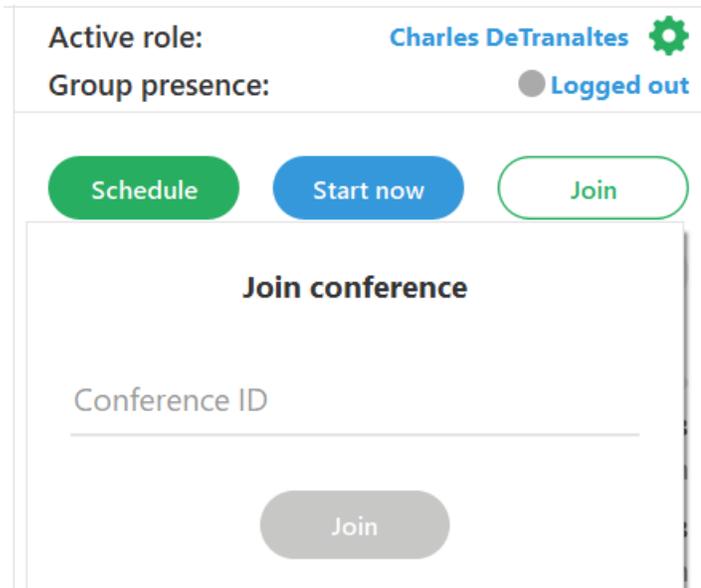


- Screen share full mode. A user viewing another user's screen may maximize the viewing window by the use of the full screen mode.

Click the enter full screen mode icon in the lower right corner during a screen share.

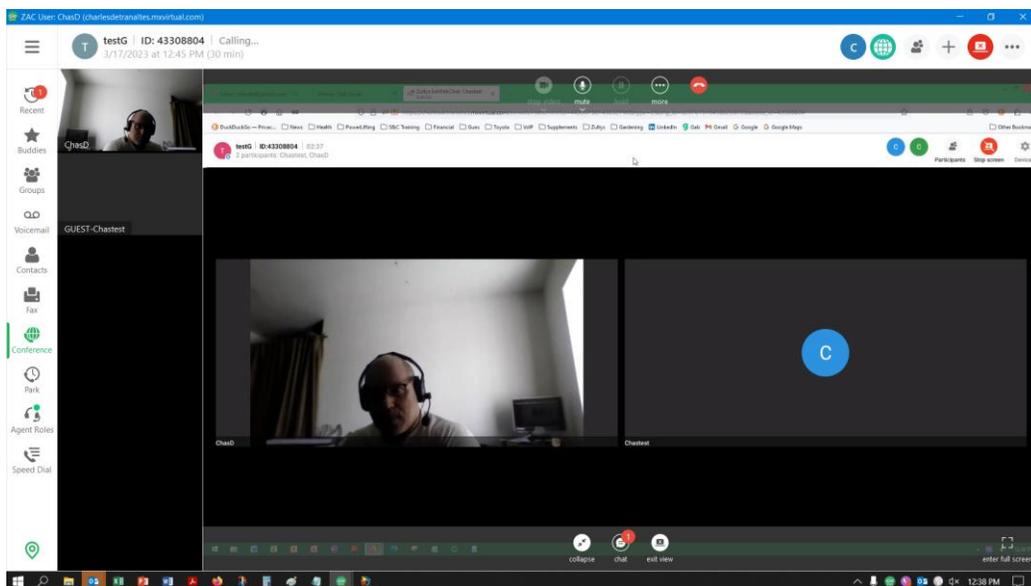

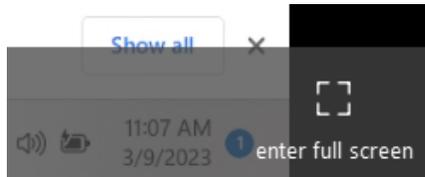

The window will expand to full screen mode:

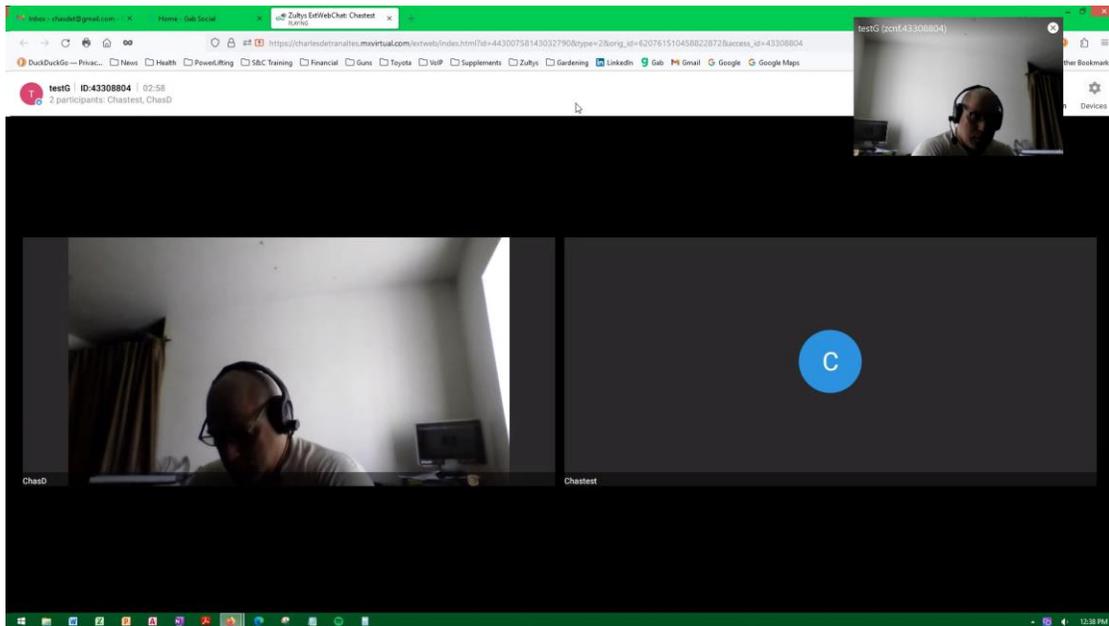


Click the exit full screen mode in the lower right corner to exit the full screen mode.

- Floating conference window. This feature allows a user that navigates away from their video conference to have a window that allows them to monitor the conference. They can also use the window to re-join the conference.

While on a conference call:

- Click outside the ZAC screen.
- You will see the selected screen as well as the floating conference window.
- You may move the window to any location on the screen.
- Double click the window to rejoin the conference.

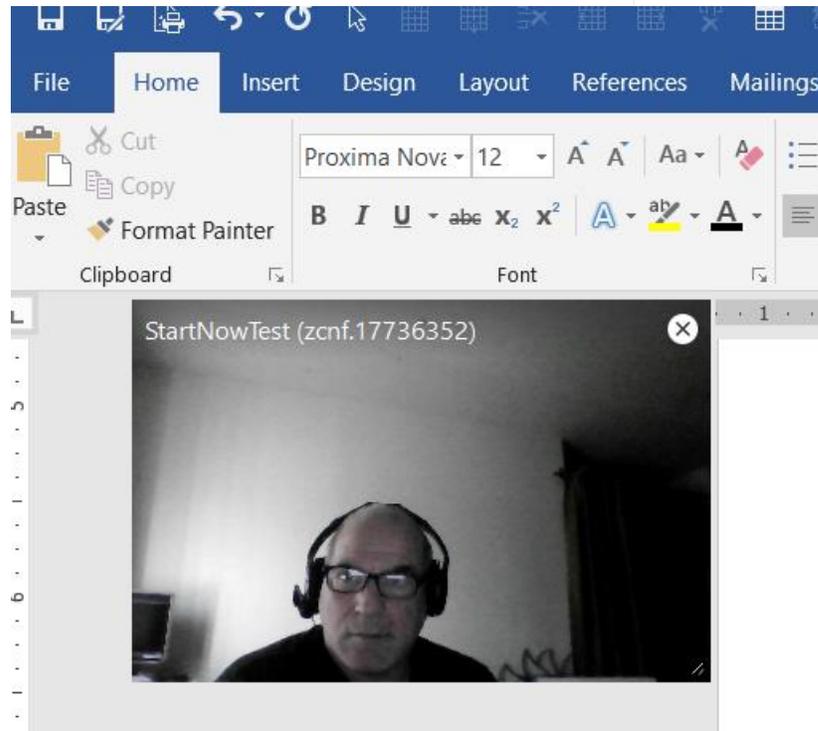

Example: User in a video conference that clicked on the Word application. The floating window for the conference appears.


17.3 Drag and Drop call to a speed dial

17.3.1 Description

This feature allows a user on a call to perform a unattended transfer to a speed dial location by drag and drop operation.

17.3.2 Operation

- Click and hold the call session window.
- Drag the window to the speed Dial area. The area will expand.
- Drag the window to the desired speed dial entry and release the mouse.

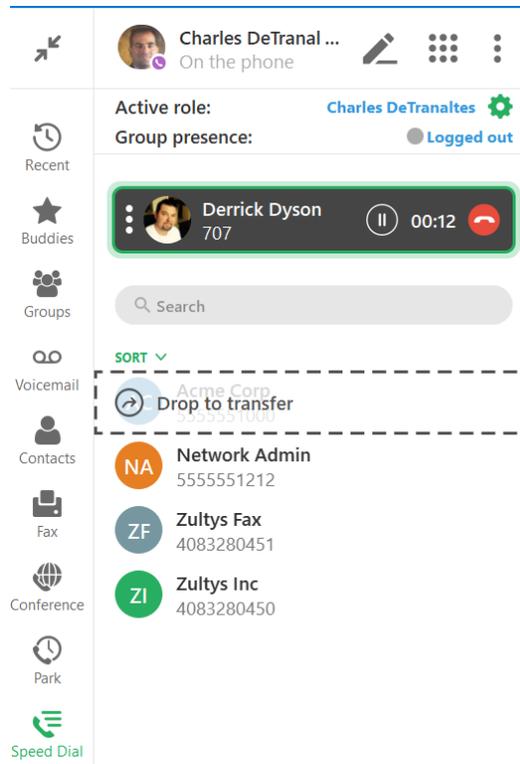

17.4 Start Now Conference


17.4.1 Description

This new conference type provides a user with a conference that can be started immediately. In addition to an immediate start, the organizer can invite participants via ZAC and/or e-mail invitations.


17.4.2 Operation

In the conference area:

- Click start now

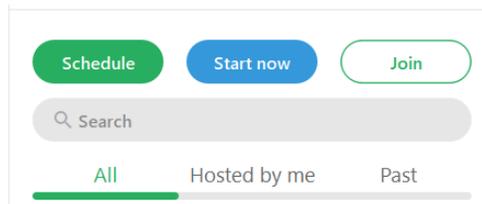


- Fill out the fields for name-internal participants-number of external callers-duration-password-MXmeeting-end call on host leave.

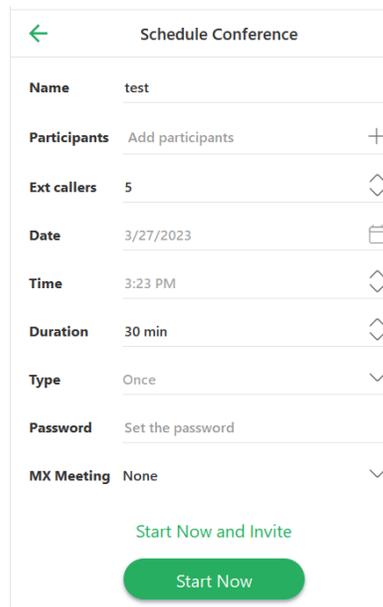


The screenshot shows a 'Schedule Conference' form. The fields are: Name (test), Participants (Add participants +), Ext callers (5), Date (3/27/2023), Time (3:23 PM), Duration (30 min), Type (Once), Password (Set the password), and MX Meeting (None). At the bottom, there are two buttons: 'Start Now and Invite' (green) and 'Start Now' (green).

- Click either Start Now or Start Now and Invite

- Clicking Start Now will present the conference Preview window. Select the audio/video devices that will be used for the conference.

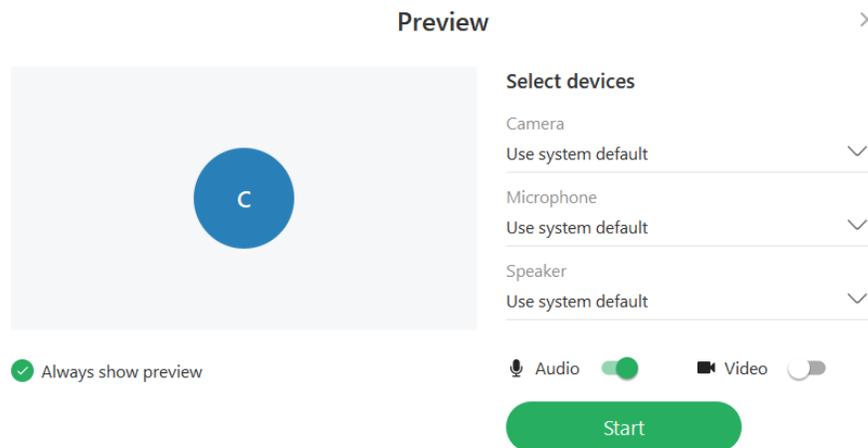


- The main conference screen will appear after starting the conference:

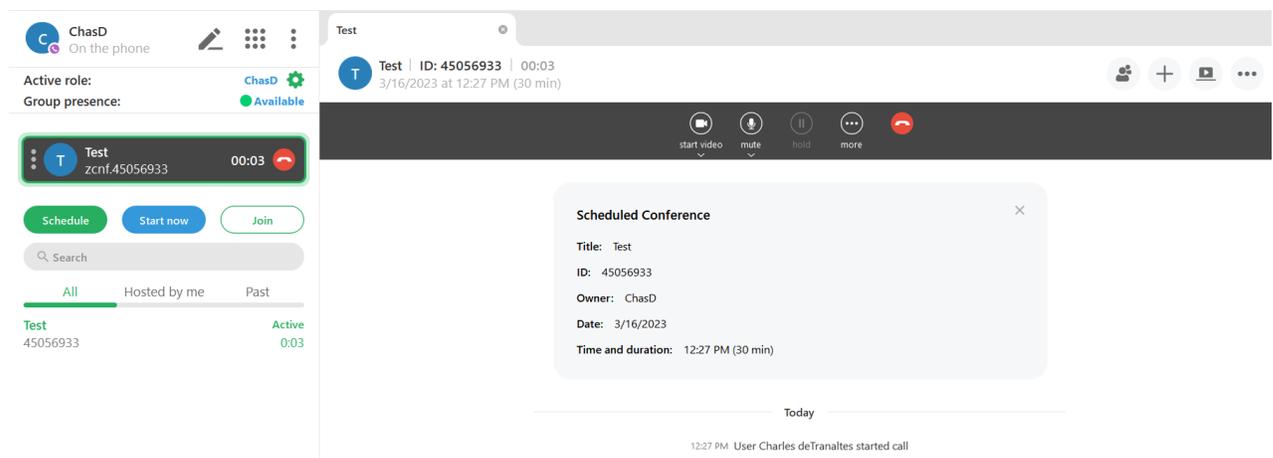

- To invite users to the conference after starting the conference:



- Click invite icon in toolbar
- Choose user types to invite:

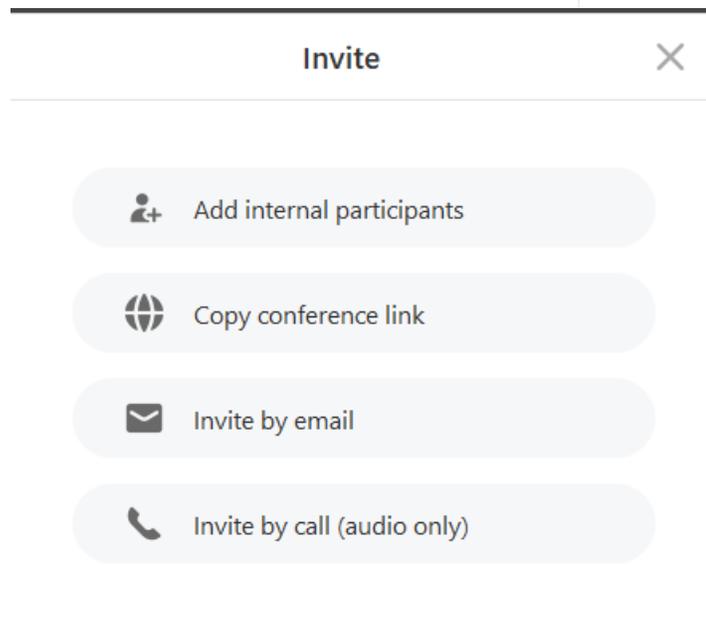



17.5 Video Warning

17.5.1 Description

This feature provides a pop up message that indicate a user is not configured for video services.

17.5.2 Operation

A user that attempts to utilize video services that is not configured will receive a pop up message indicating video is not available.

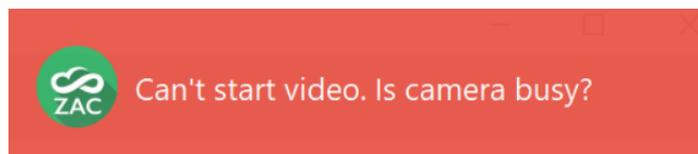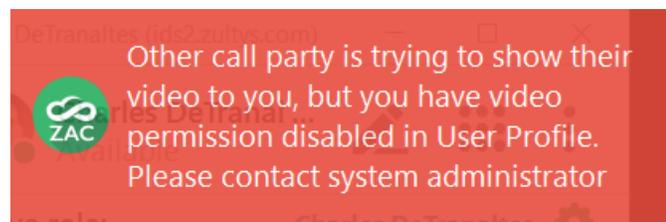

Pop up messages are also provided for a user to user video call

Pop up message is displayed for a camera busy condition

Click on the message to extinguish.

17.5.3 Conditions

- Video is configured in the User Profile section of MX Administrator.


17.6 Audio and Video device selection while on a call

17.6.1 Description

This feature allows a softphone user involved on a call or conference to select/change their audio device while on the call.


17.6.2 Audio Operation

- Click the arrow at the bottom of the mute icon.
- Select the audio device to be utilized.
- Click Select.

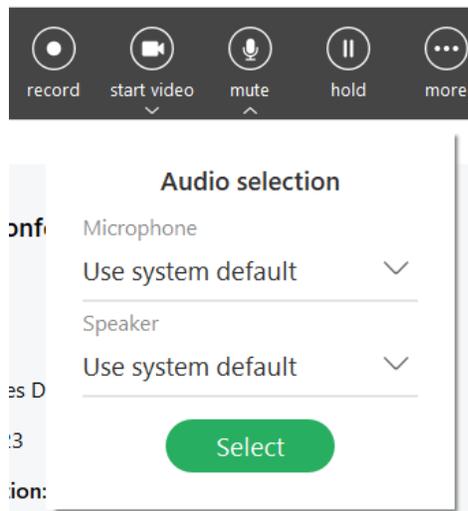

17.6.3 Video Device Operation

- Click the arrow at the bottom of the start video icon.
- Select the video device to be utilized.
- Click Select.

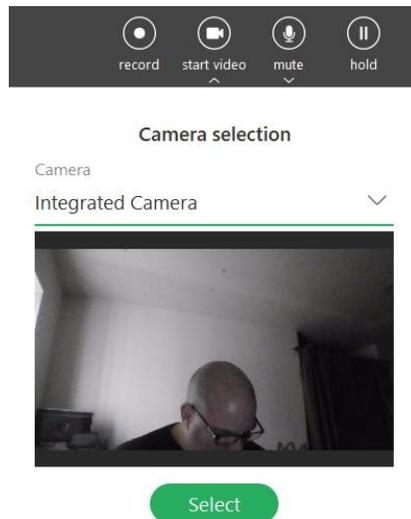

17.6.4 Conditions

- User must be bound to the softphone for the audio functionality to appear.

17.7 Presence note for Agent role

17.7.1 Description

Supervisors and agents will now see both an agents current presence status and any notes they have added when they are in the Agent Role screen.

17.7.2 Operation

Once the agent has set a presence and their note, the setting will display as:

Agent Role screen:

